

FORD **KUGA** Owner's Manual



The information contained in this publication was correct at the time of going to print. In the interest of continuous development, we reserve the right to change specifications, design or equipment at any time without notice or obligation. No part of this publication may be reproduced, transmitted, stored in a retrieval system or translated into any language in any form by any means without our written permission. Errors and omissions excepted.

© Ford Motor Company 2014

All rights reserved.

Part Number: CG3585en 08/2014 20141205092741

Table of Contents

Introduction

About This Manual.....	7
Symbols Glossary.....	7
Data Recording.....	9
Replacement Parts Recommendation.....	10
Mobile Communications Equipment.....	10

At a Glance

At a Glance.....	11
------------------	----

Child Safety

Installing Child Seats.....	18
Child Seat Positioning.....	21
Child Safety Locks.....	23

Safety Belts

Fastening the Safety Belts.....	24
Safety Belt Height Adjustment.....	25
Safety Belt Minder.....	25

Supplementary Restraints System

Principle of Operation.....	27
Driver Airbag.....	27
Passenger Airbag.....	28
Side Airbags.....	28
Driver Knee Airbag.....	29
Side Curtain Airbags.....	29

Keys and Remote Controls

General Information on Radio Frequencies.....	30
Remote Control.....	30
Replacing a Lost Key or Remote Control.....	32

Locks

Locking and Unlocking.....	33
----------------------------	----

Manual Liftgate.....	35
Power Liftgate.....	36
Keyless Entry.....	38

Security

Passive Anti-Theft System.....	41
Anti-Theft Alarm.....	41

Steering Wheel

Adjusting the Steering Wheel.....	44
Audio Control.....	44
Voice Control.....	46
Cruise Control.....	46
Information Display Control.....	46

Wipers and Washers

Windshield Wipers.....	47
Autowipers.....	47
Windshield Washers.....	48
Rear Window Wiper and Washers.....	48
Headlamp Washers.....	49

Lighting

General Information.....	50
Lighting Control.....	50
Autolamps.....	51
Instrument Lighting Dimmer.....	51
Headlamp Exit Delay.....	51
Daytime Running Lamps.....	52
Automatic High Beam Control.....	52
Front Fog Lamps.....	53
Rear Fog Lamps.....	54
Headlamp Leveling.....	54
Cornering Lamps.....	55
Direction Indicators.....	55
Interior Lamps.....	55
Ambient Lighting.....	56

Table of Contents

Windows and Mirrors

Power Windows.....	58
Global Opening and Closing.....	59
Exterior Mirrors.....	60
Interior Mirror.....	61
Sun Visors.....	62
Moonroof.....	62

Instrument Cluster

Gauges.....	64
Warning Lamps and Indicators.....	65
Audible Warnings and Indicators.....	68

Information Displays

General Information.....	69
Clock.....	75
Trip Computer.....	75
Personalized Settings.....	75
Information Messages.....	75

Climate Control

Principle of Operation.....	88
Air Vents.....	88
Manual Climate Control.....	89
Automatic Climate Control.....	90
Hints on Controlling the Interior Climate.....	91
Heated Windows and Mirrors.....	95
Auxiliary Heater.....	95

Seats

Sitting in the Correct Position.....	100
Head Restraints.....	100
Manual Seats.....	102
Power Seats.....	103
Rear Seats.....	104
Heated Seats.....	104
Rear Seat Armrest.....	105

Auxiliary Power Points

Auxiliary Power Points.....	106
-----------------------------	-----

Storage Compartments

Cup Holders.....	108
Overhead Console.....	108
Folding Tray.....	108

Starting and Stopping the Engine

General Information.....	109
Ignition Switch.....	109
Keyless Starting.....	109
Steering Wheel Lock.....	111
Starting a Gasoline Engine.....	112
Starting a Diesel Engine.....	113
Diesel Particulate Filter.....	113
Switching Off the Engine.....	114

Unique Driving Characteristics

Auto-Start-Stop.....	115
----------------------	-----

Fuel and Refueling

Safety Precautions.....	117
Fuel Quality - Gasoline.....	118
Fuel Quality - 2.0L Duratorq-TDCi (DW) Diesel.....	118
Running Out of Fuel.....	119
Catalytic Converter.....	120
Refueling.....	120
Fuel Consumption.....	121
Technical Specifications.....	123

Transmission

Manual Transmission.....	124
Automatic Transmission.....	124
Hill Start Assist.....	127

Table of Contents

Four-Wheel Drive

Principle of Operation.....	129
Using Four-Wheel Drive.....	129

Brakes

General Information.....	134
Hints on Driving With Anti-Lock Brakes.....	134
Parking Brake.....	135

Traction Control

Principle of Operation.....	136
Using Traction Control.....	136

Stability Control

Principle of Operation.....	137
Using Stability Control.....	137

Parking Aids

Principle of Operation.....	138
Parking Aid.....	138
Active Park Assist.....	140
Rear View Camera.....	142

Cruise Control

Principle of Operation.....	145
Using Cruise Control.....	145
Using Adaptive Cruise Control.....	146

Driving Aids

Speed Limiter.....	151
Driver Alert.....	152
Lane Keeping System.....	153
Blind Spot Information System.....	156
Traffic Sign Recognition.....	158
Active City Stop.....	160
Eco Mode.....	161

Load Carrying

General Information.....	162
Luggage Anchor Points.....	162
Rear Under Floor Storage.....	162
Luggage Covers.....	163
Roof Racks and Load Carriers.....	164

Towing

Towing a Trailer.....	165
Trailer Sway Control.....	166
Tow Ball.....	166
Towing Points.....	168
Towing the Vehicle on Four Wheels.....	169

Driving Hints

Breaking-In.....	171
Cold Weather Precautions.....	171
Driving Through Water.....	171
Floor Mats.....	171

Roadside Emergencies

Hazard Warning Flashers.....	173
First Aid Kit.....	173
Warning Triangle.....	173
Fuel Shutoff.....	173
Jump Starting the Vehicle.....	174

Fuses

Fuse Box Locations.....	176
Fuse Specification Chart.....	177
Changing a Fuse.....	186

Maintenance

General Information.....	187
Opening and Closing the Hood.....	187
Under Hood Overview - 1.6L EcoBoost™.....	189
Under Hood Overview - 2.0L EcoBoost™.....	190

Table of Contents

Under Hood Overview - 2.0L Duratorq-TDCi (DW) Diesel.....	191
Under Hood Overview - 1.5L EcoBoost™.....	192
Engine Oil Dipstick - 1.5L EcoBoost™.....	193
Engine Oil Dipstick - 2.0L EcoBoost™.....	193
Engine Oil Dipstick - 2.0L Duratorq-TDCi (DW) Diesel.....	193
Engine Oil Check.....	193
Engine Coolant Check.....	194
Brake Fluid Check.....	194
Washer Fluid Check.....	195
Changing the 12V Battery.....	195
Checking the Wiper Blades.....	195
Changing the Wiper Blades.....	195
Removing a Headlamp.....	196
Changing a Bulb.....	196
Bulb Specification Chart.....	202
Technical Specifications.....	204
Vehicle Care	
Cleaning the Exterior.....	207
Cleaning the Interior.....	207
Repairing Minor Paint Damage.....	208
Cleaning the Alloy Wheels.....	208
Wheels and Tires	
General Information.....	209
Temporary Mobility Kit.....	209
Tire Care.....	213
Using Winter Tires.....	213
Using Snow Chains.....	213
Tire Pressure Monitoring System.....	213
Changing a Road Wheel.....	217
Technical Specifications.....	224
Capacities and Specifications	
Vehicle Identification Plate.....	226
Vehicle Identification Number.....	227
Capacities and Specifications - 1.5L EcoBoost™.....	227
Capacities and Specifications - 1.6L EcoBoost™.....	228
Capacities and Specifications - 2.5L.....	230
Capacities and Specifications - 2.0L Duratorq-TDCi (DW) Diesel.....	232
Technical Specifications.....	233
Audio System	
General Information.....	236
Audio Unit - Vehicles With: AM/FM/CD.....	237
Audio Unit - Vehicles With: Digital Audio Broadcast (DAB) Radio/SYNC.....	242
Audio Unit - Vehicles With: Digital Audio Broadcast (DAB) Radio/Navigation System/SYNC.....	247
Audio Unit - Vehicles With: Digital Audio Broadcast (DAB) Radio/SYNC/Sony AM/FM/CD.....	253
Audio Unit - Vehicles With: Digital Audio Broadcast (DAB) Radio/Navigation System/SYNC/Sony AM/FM/CD.....	259
Digital Radio.....	265
Audio Input Jack.....	267
USB Port.....	267
Audio Troubleshooting.....	268
SYNC™	
General Information.....	269
Using Voice Recognition.....	270
Using SYNC™ With Your Phone.....	273
SYNC™ Applications and Services.....	284
Using SYNC™ With Your Media Player.....	291
SYNC™ Troubleshooting.....	297
Navigation	
Navigation.....	307

Table of Contents

Appendices

Electromagnetic Compatibility.....	316
End User License Agreement.....	317

Introduction

ABOUT THIS MANUAL

Thank you for choosing Ford. We recommend that you take some time to get to know your vehicle by reading this manual. The more that you know about it, the greater the safety and pleasure you will get from driving it.

WARNING



Driving while distracted can result in loss of vehicle control, crash and injury. We strongly recommend that you use extreme caution when using any device that may take your focus off the road. Your primary responsibility is the safe operation of your vehicle. We recommend against the use of any hand-held device while driving and encourage the use of voice-operated systems when possible. Make sure you are aware of all applicable local laws that may affect the use of electronic devices while driving.


Note: This manual describes product features and options available throughout the range of available models, sometimes even before they are generally available. It may describe options not fitted to the vehicle you have purchased.

Note: Some of the illustrations in this manual may show features as used in different models, so may appear different to you on your vehicle.

Note: Always use and operate your vehicle in line with all applicable laws and regulations.

Note: Pass on this manual when selling your vehicle. It is an integral part of your vehicle.

This manual may qualify the location of a component as left-hand side or right-hand side. The side is determined when facing forward in the seat.

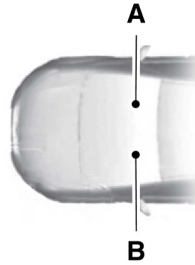

E154903

- A Right-hand side.
- B Left-hand side.

SYMBOLS GLOSSARY

These are some of the symbols you may see on your vehicle.



Safety alert



See Owner's Manual



Air conditioning system



Anti-lock braking system



Avoid smoking, flames or sparks



Battery



Battery acid



Brake fluid - non petroleum based

Introduction



Brake system



Cabin air filter



Check fuel cap



Child safety door lock or unlock



Child seat lower anchor



Child seat tether anchor



Cruise control



Do not open when hot



Engine air filter



Engine coolant



Engine coolant temperature



Engine oil



Explosive gas



Fan warning



Fasten safety belt



Front airbag



Front fog lamps



Fuel pump reset



Fuse compartment



Hazard warning flashers



Heated rear window



Heated windshield



Interior luggage compartment release



Jack



Keep out of reach of children



Lighting control



Low tire pressure warning



Maintain correct fluid level



Note operating instructions



Panic alarm

Introduction



Parking aid



Parking brake



Power steering fluid



Power windows front/rear



Power window lockout



Service engine soon



Side airbag



Shield the eyes



Stability control



Windshield wash and wipe

DATA RECORDING

A large number of electronic components of your vehicle contain data storage modules temporarily or permanently storing technical data about the condition of the vehicle, events and errors.

In general, this technical information documents the condition of parts, modules, systems or the environment:

- Operating conditions of system components (e.g. filling levels).
- Status messages of the vehicle and its individual components (e.g. number of wheel revolutions/rotational speed, deceleration, lateral acceleration).
- Malfunction and defects in important system components (e.g. lighting and brake system).
- Vehicle reactions in particular driving situations (e.g. inflation of an airbag, activation of the stability regulation system).
- Environmental conditions (e.g. temperature).

These data are exclusively technical and help identification and correction of errors as well as optimisation of vehicle functions. Motion profiles indicating travelled routes cannot be created with these data.

If services are used (e.g. repair works, service processes, warranty cases, quality assurance), employees of the service network (including manufacturers) are able to read out this technical information from the event and error data storage modules using special diagnostic devices. If required, you will receive further information. After an error has been corrected, these data are deleted from the error storage module or they are constantly overwritten.

When using the vehicle, situations may occur in which these technical data related to other information (accident report, damages on the vehicle, witness statements etc.) may be associated with a specific person - possibly, with the assistance of an expert.

Introduction

Additional functions contractually agreed upon with the client (e.g. vehicle location in emergency cases) allow the transmission of particular vehicle data from the vehicle.

REPLACEMENT PARTS RECOMMENDATION

Your vehicle has been built to the highest standards using quality parts. We recommend that you demand the use of genuine Ford and Motorcraft parts whenever your vehicle requires scheduled maintenance or repair. You can clearly identify genuine Ford and Motorcraft parts by looking for the Ford, FoMoCo or Motorcraft branding on the parts or their packaging.

Scheduled Maintenance and Mechanical Repairs

One of the best ways for you to make sure that your vehicle provides years of service is to have it maintained in line with our recommendations using parts that conform to the specifications detailed in this Owner's Manual. Genuine Ford and Motorcraft parts meet or exceed these specifications.

Collision Repairs

We hope that you never experience a collision, but accidents do happen. Genuine Ford replacement collision parts meet our stringent requirements for fit, finish, structural integrity, corrosion protection and dent resistance. During vehicle development we validate these parts deliver the intended level of protection as a whole system. A great way to know for sure you are getting this level of protection is to use genuine Ford replacement collision parts.

Warranty on Replacement Parts

Genuine Ford and Motorcraft replacement parts are the only replacement parts that benefit from a Ford Warranty. Damage caused to your vehicle as a result of the failure of non-Ford parts may not be covered by the Ford Warranty. For additional information, refer to the terms and conditions of the Ford Warranty.

MOBILE COMMUNICATIONS EQUIPMENT

Using mobile communications equipment is becoming increasingly important in the conduct of business and personal affairs. However, you must not compromise your own or others' safety when using such equipment. Mobile communications can enhance personal safety and security when appropriately used, particularly in emergency situations. Safety must be paramount when using mobile communications equipment to avoid negating these benefits. Mobile communication equipment includes, but is not limited to, cellular phones, pagers, portable email devices, text messaging devices and portable two-way radios.


WARNING



Driving while distracted can result in loss of vehicle control, crash and injury. We strongly recommend that you use extreme caution when using any device that may take your focus off the road. Your primary responsibility is the safe operation of your vehicle. We recommend against the use of any hand-held device while driving and encourage the use of voice-operated systems when possible. Make sure you are aware of all applicable local laws that may affect the use of electronic devices while driving.

At a Glance

Front Exterior Overview

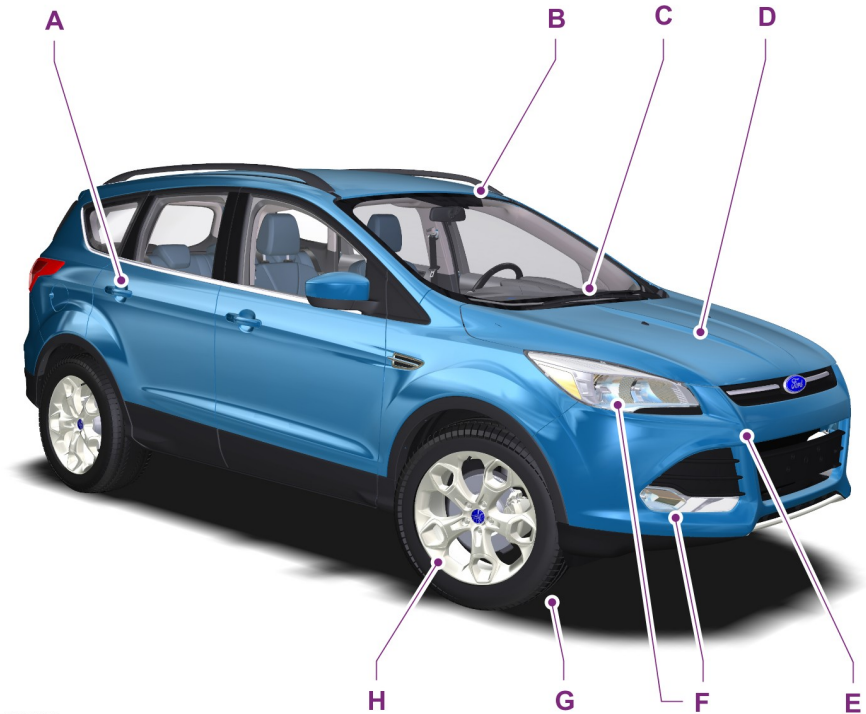


E152442

- A See **Locking and Unlocking** (page 33). See **Keyless Entry** (page 38).
- B See **Automatic High Beam Control** (page 52). See **Driver Alert** (page 152). See **Lane Keeping System** (page 153). See **Traffic Sign Recognition** (page 158). See **Active City Stop** (page 160).
- C See **Changing the Wiper Blades** (page 195).
- D See **Maintenance** (page 187).
- E See **Towing Points** (page 168).
- F See **Changing a Bulb** (page 196).

At a Glance

- G Tire pressures. See **Technical Specifications** (page 224).
- H See **Changing a Road Wheel** (page 217).

Vehicle Interior Overview

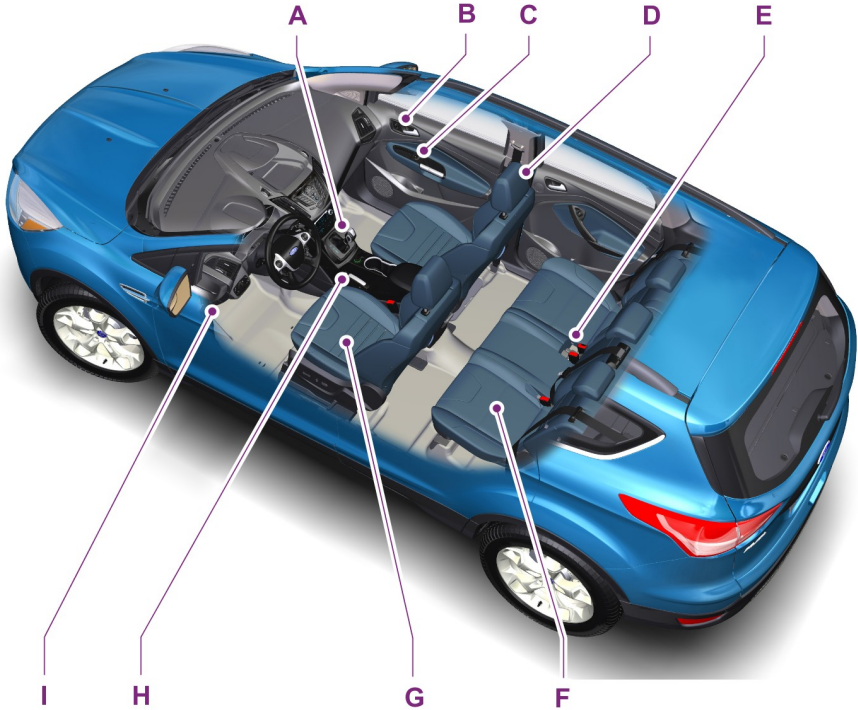

E152443


- A See **Transmission** (page 124).
- B See **Locking and Unlocking** (page 33).
- C See **Power Windows** (page 58). See **Exterior Mirrors** (page 60).
- D See **Head Restraints** (page 100).
- E See **Fastening the Safety Belts** (page 24).

At a Glance

- F See **Rear Seats** (page 104).
- G See **Manual Seats** (page 102). See **Power Seats** (page 103).
- H See **Parking Brake** (page 135).
- I See **Opening and Closing the Hood** (page 187).

Instrument Panel Overview


Left-Hand Drive

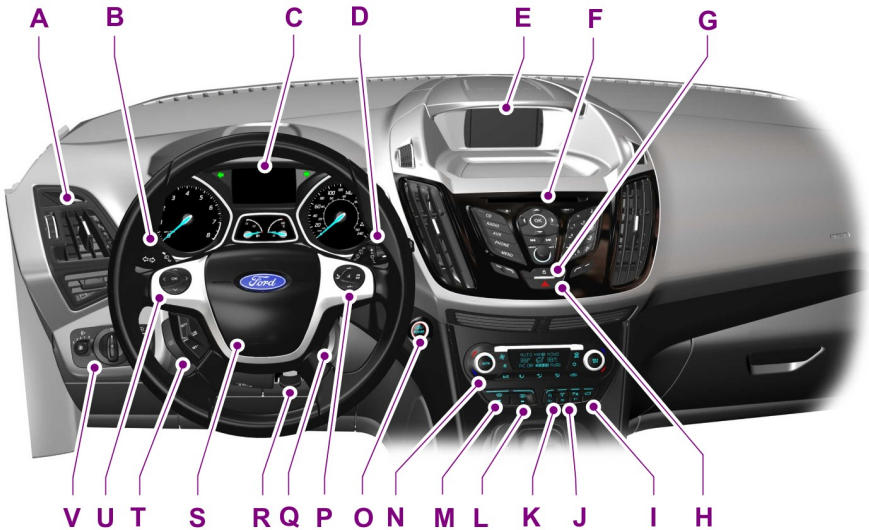

E152444

At a Glance

Right-Hand Drive

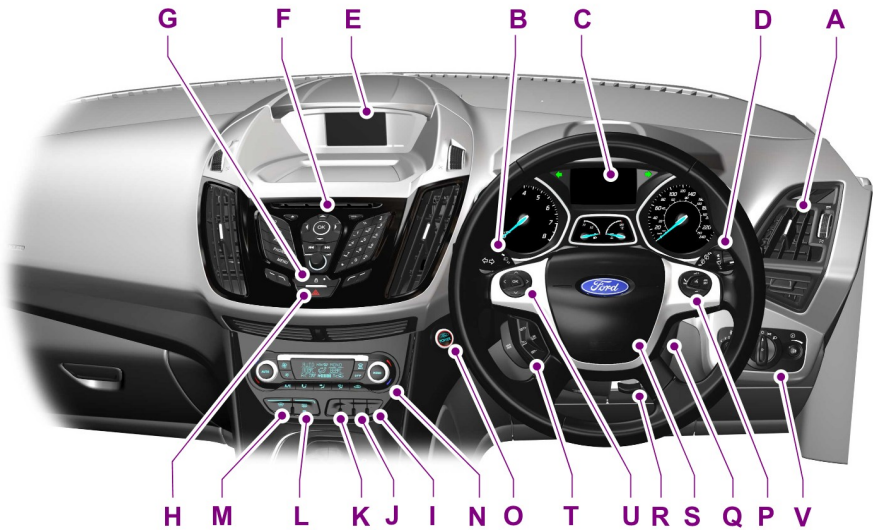

E152445


- A Air vents. See **Air Vents** (page 88).
- B Direction indicators. See **Direction Indicators** (page 55). High beam. See **Lighting Control** (page 50).
- C Instrument cluster. See **Gauges** (page 64). See **Warning Lamps and Indicators** (page 65).
- D Wiper lever. See **Wipers and Washers** (page 47).
- E Information and entertainment display.
- F Audio unit. See **Audio System** (page 236).
- G Door lock indicator. See **Locking and Unlocking** (page 33).
- H Hazard warning flasher switch. See **Hazard Warning Flashers** (page 173).
- I Parking aid switch. See **Parking Aids** (page 138).
- J Active park assist switch. See **Active Park Assist** (page 140).
- K Start-stop switch. See **Auto-Start-Stop** (page 115).
- L Heated rear window switch. See **Heated Windows and Mirrors** (page 95).

At a Glance

- M Heated windshield switch. See **Heated Windows and Mirrors** (page 95).
- N Climate controls. See **Climate Control** (page 88).
- O Start button. See **Keyless Starting** (page 109).
- P Audio control. See **Audio Control** (page 44). Voice control. See **Voice Control** (page 46). Telephone control. See **Using SYNC™ With Your Phone** (page 273).
- Q Ignition switch. See **Ignition Switch** (page 109).
- R Steering wheel adjustment. See **Adjusting the Steering Wheel** (page 44).
- S Horn.
- T Cruise control switches. See **Using Cruise Control** (page 145). Adaptive cruise control (ACC) switches. See **Using Adaptive Cruise Control** (page 146).
- U Information display controls. See **Information Displays** (page 69).
- V Lighting control. See **Lighting Control** (page 50). Front fog lamps. See **Front Fog Lamps** (page 53). Rear fog lamp. See **Rear Fog Lamps** (page 54). Headlamp levelling control. See **Headlamp Leveling** (page 54). Instrument lighting dimmer. See **Principle of Operation** (page 88).

At a Glance

Rear Exterior Overview

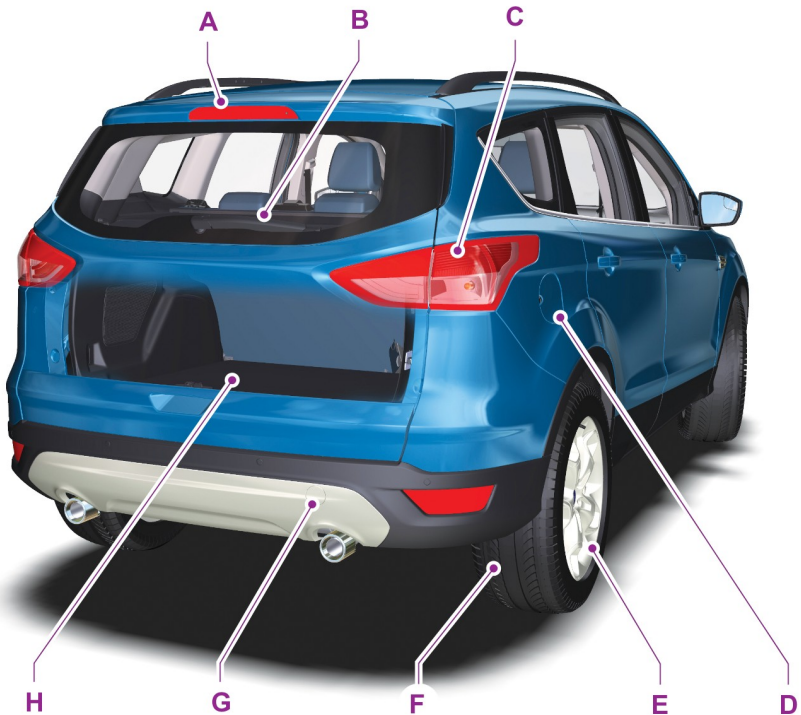

E152446

- A See **Changing a Bulb** (page 196).
- B See **Changing the Wiper Blades** (page 195).
- C See **Changing a Bulb** (page 196).
- D See **Refueling** (page 120).
- E See **Changing a Road Wheel** (page 217).
- F Tire pressures. See **Technical Specifications** (page 224).

At a Glance

- G See **Towing Points** (page 168).
- H See **First Aid Kit** (page 173). See **Warning Triangle** (page 173). See **Temporary Mobility Kit** (page 209). Spare wheel, jack and wheel brace. See **Changing a Road Wheel** (page 217). Towing eye. See **Towing Points** (page 168). Fuel funnel. See **Running Out of Fuel** (page 119).

Child Safety

INSTALLING CHILD SEATS









E133140




E68916

WARNINGS

-  Use an approved child seat to secure children less than 59 inches (150 centimeters) tall in the rear seat.
-  Extreme Hazard! Do not use a rearward facing child seat on a seat protected by an air bag in front of it!
-  Read and follow the manufacturer's instructions when you are installing a child seat.
-  Do not modify child seats in any way.
-  Do not hold a child on your lap when your vehicle is moving.
-  Do not leave unattended children in your vehicle.

WARNINGS

-  If your vehicle has been involved in a crash, have the child seats checked by an authorized dealer.

Note: *Mandatory use of child seats varies from country to country.*

Only child seats certified to ECE-R44.03 (or later) have been tested and approved for use in your vehicle. A choice of these are available from an authorized dealer.

Child Seats for Different Mass Groups

Use the correct child seat as follows:

Baby Safety Seat



E68918

Secure children that weigh less than 29 pounds (13 kilograms) in a rearward facing baby safety seat (Group 0+) on the rear seat.

Child Safety

Child Safety Seat








E68920

Secure children that weigh between 29 and 40 pounds (13 and 18 kilograms) in a child safety seat (Group 1) on the rear seat.

Booster Seats

WARNINGS

-  Do not install a booster seat or a booster cushion with only the lap strap of the safety belt.
-  Do not install a booster seat or a booster cushion with a safety belt that is slack or twisted.
-  Do not put the safety belt under your child's arm or behind their back.
-  Do not use pillows, books or towels to boost your child's height.
-  Make sure that your children sit in an upright position.

Note: When using a child seat on a rear seat, make sure that the child seat rests tightly against the vehicle seat. It may be necessary to lift or remove the head restraint. See **Head Restraints** (page 100).

Booster Seat (Group 2)



E70710

Secure children that weigh more than 33 pounds (15 kilograms) but are less than 59 inches (150 centimeters) tall in a booster seat or a booster cushion.

We recommend that you use a booster seat that combines a cushion with a backrest instead of a booster cushion only. The raised seating position will allow you to position the shoulder strap of the adult safety belt over the center of your child's shoulder and the lap strap tightly across their hips.

Booster Cushion (Group 3)



E68924

Child Safety

ISOFIX Anchor Points

WARNING



Use an anti-rotation device when using the ISOFIX system. We recommend the use of a top tether or support leg.

Note: When you are purchasing an ISOFIX seat, make sure that you know the correct mass group and ISOFIX size class for the intended seating locations. See **Child Seat Positioning** (page 21).

Your vehicle has ISOFIX anchor points that accommodate universally approved ISOFIX child seats.

The ISOFIX system comprises two rigid attachment arms on the child seat that attach to anchor points on the outboard rear seats, where the cushion and backrest meet. Tether anchor points are located behind the outboard rear seats for child seats with a top tether.

Top Tether Anchor Points



E142244

Attaching a Child Seat with Top Tethers

WARNINGS



Do not attach a tether strap to anything other than the correct tether anchor point.



Make sure that the top tether strap is not slack or twisted and is properly located on the anchor point.

Note: Where applicable, remove the luggage cover to ease installation. See **Luggage Covers** (page 163).

Note: You may need to raise or remove the head restraint to ease installation. See **Head Restraints** (page 100).

1. Route the tether strap under the head restraint to the anchor point.



E87145

2. Push the child seat back firmly to engage the ISOFIX lower anchor points.
3. Tighten the tether strap in line with the child seat manufacturer's instructions.

Child Safety

CHILD SEAT POSITIONING

WARNINGS



See an authorized dealer for the latest details relating to our recommended child seats.



Extreme Hazard! Do not use a rearward facing child seat on a seat protected by an air bag in front of it!

WARNINGS



When using a child seat with a support leg, the support leg must rest securely on the floor.



When using a child seat with a safety belt, make sure that the safety belt is not slack or twisted.



The child seat must rest tightly against the vehicle seat. It may be necessary to lift or remove the head restraint. See **Head Restraints** (page 100).

Seating positions	Mass group categories				
	0	0+	1	2	3
	Up to 22 lbs (10 kg)	Up to 29 lbs (13 kg)	20 - 40 lbs (9 - 18 kg)	33 - 55 lbs (15 - 25 kg)	46 - 79 lbs (22 - 36 kg)
Front passenger seat with airbag ON	X	X	UF ¹	UF ¹	UF ¹
Front passenger seat with airbag OFF	U ¹	U ¹	U ¹	U ¹	U ¹
Rear seats	U	U	U	U	U

X Not suitable for children in this mass group.

U Suitable for universal category child seats approved for use in this mass group.

U¹ Suitable for universal category child seats approved for use in this mass group. However, we recommend that you secure children in a government approved child seat, on the rear seat.

UF¹ Suitable for universal category forward facing child seats approved for use in this mass group. However, we recommend that you secure children in a government approved child seat, on the rear seat.

Note: When using a child seat on a front seat, always adjust the front passenger's seat to its fully rearward position. If it proves difficult to tighten the lap section of the safety belt without slack remaining, adjust the seatback to the fully upright position and raise the height of the seat. See **Seats** (page 100).

Child Safety

ISOFIX Child Seats

Seating positions		Mass group categories	
		O+	1
		Rear facing	Forward facing
		Up to 29 lbs (13 kg)	20 - 40 lbs (9 - 18 kg)
Front seat	Size class	Not ISOFIX equipped	
	Seat type		
Rear outboard seat ISOFIX	Size class	C, D, E ¹	A, B, B1 ¹
	Seat type	IL ²	IL, IUF ³
Rear center seat	Size class	Not ISOFIX equipped	
	Seat type		

IL Suitable for particular ISOFIX child seat systems of the semi-universal category. Please consult child seat systems suppliers' vehicle recommendation lists.

IUF Suitable for ISOFIX forward facing child seat systems of universal category approved for use in this mass group and ISOFIX size class.

¹The ISOFIX size class for both universal and semi-universal child seat systems is defined by the capital letters A to G. These identification letters are displayed on ISOFIX child seat.

²At time of publishing the recommended Group O+ ISOFIX baby safety seat is the Britax Romer Baby Safe. See an authorized dealer for the latest details relating to our recommended child seats.


³At time of publishing the recommended Group 1 ISOFIX child seat is the Britax Romer Duo. See an authorized dealer for the latest details relating to our recommended child seats.

Child Safety

CHILD SAFETY LOCKS

Manual Child Safety Locks

When these locks are set, the rear doors cannot be opened from the inside.

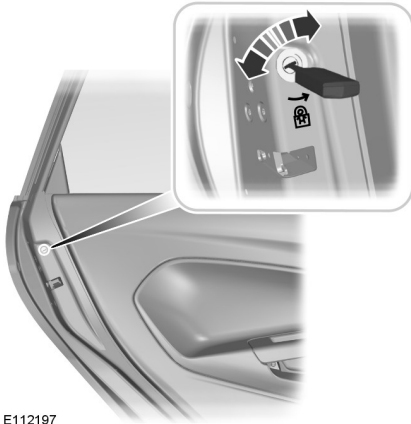

E112197

The child safety locks are located on the rear edge of each rear door and must be set separately for each door.

Left-Hand Side

Turn counterclockwise to lock and clockwise to unlock.

Right-Hand Side

Turn clockwise to lock and counterclockwise to unlock.

Electric Child Safety Locks



E124779

Press the switch to turn them on.

Press the switch again to turn them off.

Note: You cannot use the rear power window switches with the child safety locks on.

Safety Belts

FASTENING THE SAFETY BELTS

WARNINGS




Insert the tongue into the buckle until you hear a distinct click. You have not fastened the safety belt correctly if you do not hear a click.



Make sure that your safety belt is securely stored away and is not outside your vehicle when closing the door.



E74124

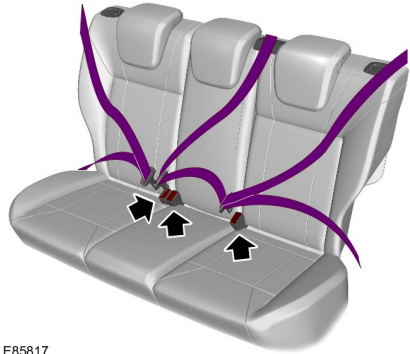


E85817

Pull the belt out steadily. It may lock if you pull it sharply or if your vehicle is on a slope.

The rear outer safety belts can lock if you return the seatback from a folded position to the upright position forcefully. Should the safety belt lock, recline the seat using the recline adjustment. See **Rear Seats** (page 104).

Press the red button on the buckle to release the belt. Hold the tongue and let it retract completely and smoothly to its stowed position.

Using Safety Belts During Pregnancy

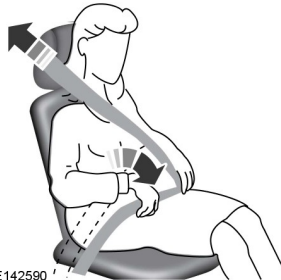

E142580

Safety Belts

WARNING



Position the safety belt correctly for your safety and that of your unborn child. Do not use only the lap strap or the shoulder strap.


Pregnant women should always wear their safety belt. The lap belt portion of a combination lap and shoulder belt should be positioned low across the hips below the belly and worn as tight as comfort will allow. The shoulder belt should be positioned to cross the middle of the shoulder and the center of the chest.

SAFETY BELT HEIGHT ADJUSTMENT

WARNING



Position the safety belt height adjusters so that the belt rests across the middle of your shoulder. Failure to adjust the safety belt correctly could reduce the effectiveness of the safety belt and increase the risk of injury in a crash.

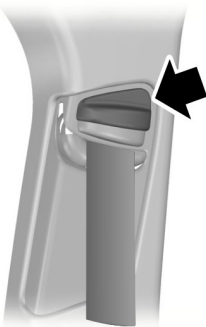

E87511

To adjust the shoulder belt height, squeeze the button and slide the height adjuster up or down. Release the button and pull down on the height adjuster to make sure it is locked in place.

SAFETY BELT MINDER

WARNING



The system will only provide protection when you use the safety belt correctly.

The warning lamp illuminates and an audible warning will sound when the following conditions have been met:

- The front safety belts have not been fastened.
- Your vehicle exceeds a relatively low speed.

It will also illuminate when a front safety belt is unfastened when your vehicle is moving.

If you do not fasten your safety belt both the audible and visual warnings will switch off automatically after approximately five minutes.

Switching the Safety Belt Minder Off

See an authorized dealer.

Rear Safety Belt Minder

WARNING



If multiple belts are unfastened within a few seconds of each other, only one audible chime will sound.

Note: Press **OK** on the steering wheel control to confirm the message.

Safety Belts


The following status updates will be shown in the display:


- Tick symbol: Fastened safety belt.
- Exclamation mark: A safety belt that has been unfastened when your vehicle is moving. You will also hear an audible chime.


Supplementary Restraints System


PRINCIPLE OF OPERATION


WARNINGS


 Extreme Hazard! Never use a rearward facing child restraint on a seat protected by an active airbag in front of it. Death or serious injury to the child can occur.


 Do not modify the front of your vehicle in any way. This could adversely affect deployment of the airbags. Failure to adhere to this warning could result in serious personal injury or death.

 Wear a safety belt and keep sufficient distance between yourself and the steering wheel. Only when you use the safety belt correctly, can it hold you in a position that allows the airbag to achieve its optimum effect. See **Sitting in the Correct Position** (page 100). Failure to adhere to this warning could result in serious personal injury or death.

 Repairs to the steering wheel, steering column, seats, airbags and safety belts must be carried out by an authorized dealer. Failure to adhere to this warning could result in serious personal injury or death.

 Keep the areas in front of the airbags free from obstruction. Do not affix anything to or over the airbag covers. In the event of a crash, hard objects could cause serious personal injury or death.


 Do not puncture the seat with sharp objects. This could damage and adversely affect deployment of the airbags. Failure to adhere to this warning could result in serious personal injury or death.

 Use seat covers designed for seats with side airbags. Have these fitted by an authorized dealer. Failure to adhere to this warning could result in serious personal injury or death.

Note: You will hear a loud bang and see a cloud of harmless powdery residue if an airbag deploys. This is normal.

Note: Only wipe airbag covers with a damp cloth.

DRIVER AIRBAG

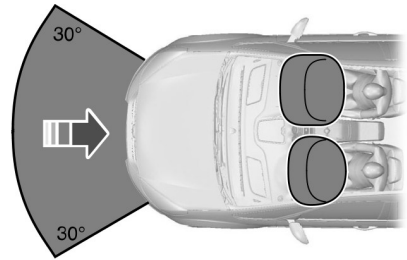


E74302

The airbag will deploy during significant frontal collisions or collisions that are up to 30 degrees from the left or the right. The airbag will inflate within a few thousandths of a second and deflate on contact with the occupant, thus cushioning forward body movement. During minor frontal collisions, overturns, rear collisions and side collisions, the airbag will not deploy.

Supplementary Restraints System

PASSENGER AIRBAG

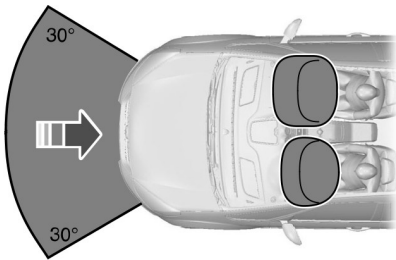

E74302

The airbag will deploy during significant frontal crashes or crashes that are up to 30 degrees from the left or the right. The airbag will inflate within a few thousandths of a second and deflate on contact with the occupant, thus cushioning forward body movement. During minor frontal crashes, overturns, rear crashes and side crashes, the airbag will not deploy.

Switching the Passenger Airbag Off

WARNING



You must switch the airbag off when using a rearward facing child seat on the front seat.



E71313



A

B

E71312

A Switch off

B Switch on

Turn the switch to position A.

When you switch the ignition on, check that the airbag deactivation warning lamp illuminates.

Note: The key switch is located on the end of the instrument panel on the passenger side with the airbag deactivation warning lamp in the overhead console.

Switching the Passenger Airbag On

WARNING



You must switch the airbag on when you are not using a child seat on the front seat.

Turn the switch to position B.

SIDE AIRBAGS

WARNING



Use seat covers designed for seats with side airbags. Have these fitted by an authorized dealer.

Supplementary Restraints System



E72658

The airbags are located inside the seatback of the front seats. There is a label attached to the side of the seatback to indicate this.

The airbag will deploy during significant lateral collisions. The airbag will not deploy in minor lateral and frontal collisions, rear collisions, or overturns.

DRIVER KNEE AIRBAG

WARNING




Do not attempt to open the airbag cover.

The airbag will deploy during frontal collisions or collisions that are up to 30 degrees from the left or the right. The airbag will inflate within a few thousandths of a second and deflate on contact with the occupants, thus providing a cushion between the driver's knees and the steering column. During overturns, rear collisions and side collisions, the knee airbag will not deploy.

For item location: See **At a Glance** (page 11).

Note: *The airbag has a lower deployment threshold than the front airbags. During a minor collision, it is possible that only the knee airbag will deploy.*

SIDE CURTAIN AIRBAGS

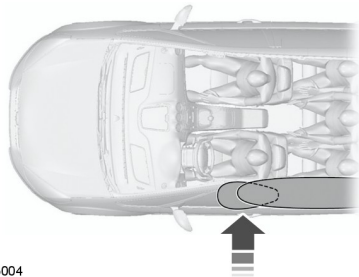

E75004

The airbags are located over the front and rear side windows.

The airbag will deploy during significant lateral collisions. It will also deploy during significant frontal angled collisions. The curtain airbag will not deploy in minor lateral and frontal collisions, rear collisions, or overturns.

Keys and Remote Controls

GENERAL INFORMATION ON RADIO FREQUENCIES

Note: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The typical operating range for your transmitter is approximately 33 ft (10 m).

A decrease in operating range could be caused by:

- weather conditions
- nearby radio towers
- structures around your vehicle
- other vehicles parked next to your vehicle.

The radio frequency used by your remote control can also be used by other radio transmitters, for example amateur radios, medical equipment, wireless headphones, wireless remote controls, cell phones, battery chargers and alarm systems. If the frequencies are jammed, you will not be able to use your remote control. You can lock and unlock the doors with the key.

Note: Make sure your vehicle is locked before leaving it unattended.

Note: If you are in range, the remote control will operate if you press any button unintentionally.

Note: The remote control contains sensitive electrical components. Exposure to moisture or impact may cause permanent damage.

REMOTE CONTROL

Reprogramming the Unlocking Function

Note: When you press the unlock button either all the doors are unlocked or only the driver's door and the liftgate are unlocked. Pressing the unlock button again unlocks all the doors.

Press and hold the unlock and lock buttons on the remote control simultaneously for at least four seconds with the ignition off. The direction indicators will flash twice to confirm the change.


To return to the original unlocking function, repeat the process.

Changing the Remote Control Battery



Make sure that you dispose of old batteries in an environmentally friendly way. Seek advice from your local authority regarding recycling.


Remote Control with a Folding Key Blade

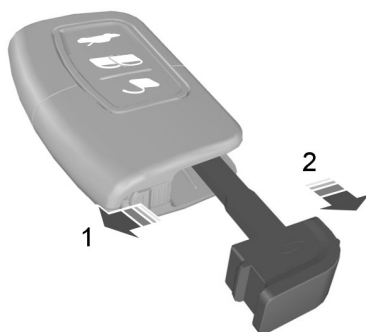

E78284

Keys and Remote Controls

1. Slide the release slider in the direction of the arrow.
2. Remove the key blade.

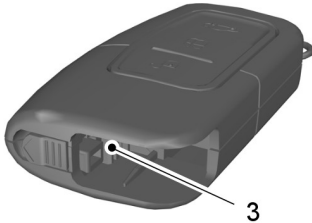


E105064

3. Twist the screwdriver in the position shown to separate the two halves of the remote control.
4. Carefully prise out the battery with the screwdriver.

Note: Do not touch the battery contacts or the printed circuit board with the screwdriver.


5. Install a new battery (3V CR 2032) with the + facing downwards.
6. Assemble the two halves of the remote control.
7. Install the key blade.

Remote Control without a Folding Key Blade

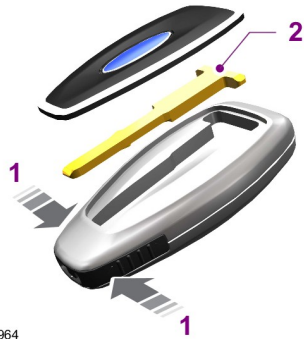

E87964

1. Press and hold the buttons on the edges to release the cover. Carefully remove the cover.
2. Remove the key blade.

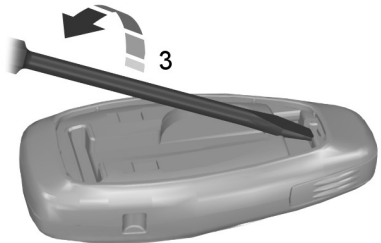

E105362

3. Twist the screwdriver in the position shown to start separating the two halves of the remote control.

Keys and Remote Controls

REPLACING A LOST KEY OR REMOTE CONTROL


Replacement keys or remote controls can be purchased from an authorized dealer. Authorized dealers can program remote controls for your vehicle. See **Passive Anti-Theft System** (page 41).

To re-program the passive anti-theft system see an authorized dealer.



E119190

4. Twist the screwdriver in the position shown to separate the two halves of the remote control.

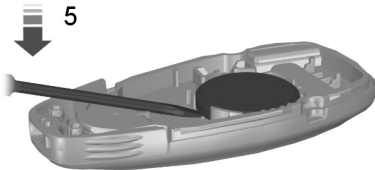

E125860

Note: Do not touch the battery contacts or the printed circuit board with the screwdriver.


5. Carefully prise out the battery with the screwdriver.
6. Install a new battery (3V CR 2032) with the + facing downwards.
7. Assemble the two halves of the remote control.
8. Install the key blade.

Locks

LOCKING AND UNLOCKING

Power Door Locks

The power door lock control is located on the driver's and front passenger's door.

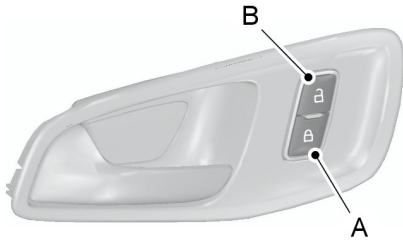

E148829

- A Lock
- B Unlock

Remote Control

The remote control can be used any time your vehicle is not running.

Unlocking the Doors



Press the button to unlock the driver's door. The direction indicators will flash once.

Press the button again within three seconds to unlock all doors. The direction indicators will flash once.

Note: You can unlock the driver's door with the key. Use the key when the remote control is not functioning.

Note: When you lock your vehicle for several weeks, the remote control will be switched off. Your vehicle must be unlocked and the engine started using the key. Unlocking and starting your vehicle once will enable the remote control.

Reprogramming the Unlocking Function in keyless vehicles

You can reprogram the unlocking function so that only the driver's door is unlocked. See **Remote Control** (page 30).

Locking the Doors



Press the button to lock all the doors. The direction indicators will illuminate.

Press the button again within three seconds to confirm that all the doors are closed. The doors will lock again, and the direction indicators will flash if all the doors and the luggage compartment are closed.

Note: If any door or the luggage compartment is not closed, or if the hood is not closed on vehicles that have an anti-theft alarm or remote start, the direction indicators will not flash.

Double Locking

WARNING



Do not use double locking when passengers or animals are inside your vehicle. You will not be able to unlock the doors from the inside if you have double locked them.

Double locking is a theft protection feature that prevents someone from opening the doors from the inside. You can only double lock the doors if they are all closed.



Press the button twice within three seconds.


Automatic Relocking


The doors will relock automatically if you do not open a door within 45 seconds of unlocking the doors with the remote control. The door locks and the alarm will return to their previous state.

Locks

Power Liftgate

WARNINGS

 Make sure all passengers are clear of the liftgate area before using the power liftgate control.

 Close the liftgate properly to prevent exhaust fumes from entering your vehicle. This will prevent passengers and cargo from falling out. If you must drive with the liftgate open, keep the vents open so outside air can enter your vehicle.



Press twice within three seconds to open or close the liftgate, or to reverse the movement. See

Power Liftgate (page 36).

Note: Be careful when opening or closing the liftgate in a garage or other enclosed area to avoid damaging the liftgate.

Locking and Unlocking the Doors from Inside

Use the lock and unlock buttons located on the driver's and front passenger's door.

Locking and Unlocking the Doors with the Key

Note: Do not leave your keys in your vehicle.

Locking with the Key

Turn the top of the key toward the front of your vehicle.

Double Locking with the Key

Turn the key to the lock position twice within three seconds.

Unlocking


Unlock the driver's door using the key. You can unlock all other doors individually by pulling the interior door handles.

Note: If the child safety locks are on and you pull the interior handle, you will only turn off the emergency locking, not the child safety lock. You can only open the doors using the external door handle.

Note: If the doors have been unlocked using this method, the doors must be locked individually until the central locking function has been repaired.

Locking the Doors Individually with the Key

Note: When the central locking function fails to operate, lock the doors individually using the key in the position shown.

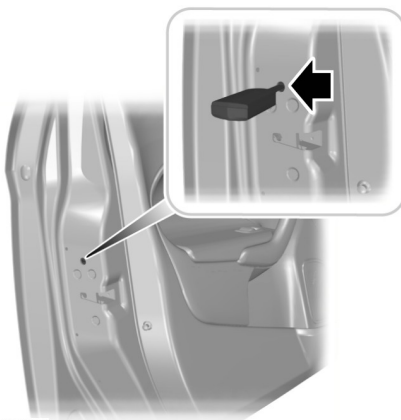

E112203

Left-hand Side

Turn clockwise to lock.


Right-hand Side


Turn counterclockwise to lock.

Locks

MANUAL LIFTGATE

WARNINGS

 It is extremely dangerous to ride in a cargo area, inside or outside of a vehicle. In a crash, people riding in these areas are more likely to be seriously injured or killed. Do not allow people to ride in any area of your vehicle that is not equipped with seats and safety belts. Be sure everyone in your vehicle is in a seat and using a safety belt properly. Failure to follow this warning could result in serious personal injury or death.

 Make sure to close and latch the liftgate to prevent drawing exhaust fumes into your vehicle. This will also prevent passengers and cargo from falling out. If you must drive with the liftgate open, keep the vents or windows open so outside air comes into your vehicle. Failure to follow this warning could result in serious personal injury.


Note: Be careful when opening or closing the liftgate in a garage or other enclosed area to avoid damaging the liftgate.

Note: Do not hang anything, for example a bike rack, from the glass or liftgate. This could damage the liftgate and its components.

Note: Do not leave the liftgate open while driving. This could damage the liftgate and its components.

Opening the Liftgate

Manually

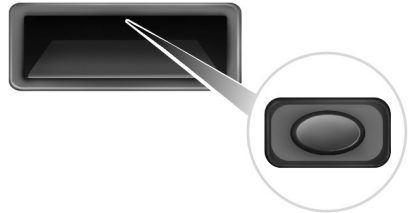

E138632

Press the button located in the top of the liftgate pull cup handle to unlatch the liftgate, and then pull on the outside handle.

With the Remote Control



Press the button twice within three seconds.

Closing the Liftgate








E155976

A handle is located inside the liftgate to help with closing.

Locks

POWER LIFTGATE

WARNINGS

-  Do not operate the liftgate unless it is free from obstruction.
-  Careless opening and closing of the liftgate can override the protection function and cause injuries.
-  Do not place objects on the liftgate.
-  Make sure you fully close the liftgate after operation.
-  Operate the liftgate only when your vehicle is stationary.

You can operate the liftgate using the remote control, the center console switch, the liftgate switch, the liftgate release handle or the hands-free feature.

Note: Make sure there is enough headroom to open the liftgate.

Note: If your vehicle has an automatic transmission, make sure the transmission selector lever is in park.


Note: In extreme weather conditions, automatic opening and closing will not work with the liftgate frozen to the seal.

Note: The liftgate will stop automatically while opening and reverse some distance if there is an obstacle in the way.

Note: The liftgate will stop automatically while closing and fully open if there is an obstacle in the way.

Note: You can manually operate the liftgate.

Liftgate Switch

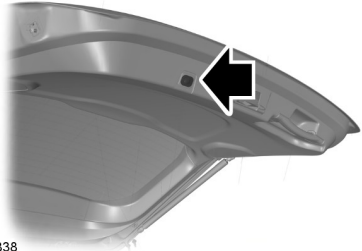

E129838

Remote Control and Center Console Switch



Note: Switch the ignition on to operate the liftgate using the center console switch.

You will hear three chimes when the liftgate begins to close.

Five short chimes indicate a malfunction with the open or close request. This could be caused by one of the following:

- You switch the ignition on and the transmission selector lever is not in park.
- The battery voltage is below the minimum operating voltage.
- Your vehicle speed exceeds 3 mph (5 km/h).

To open a fully closed liftgate, you can either:

- Press the button on the remote control twice within three seconds.
- Press the center console switch.
- Use the liftgate release handle.
- Use the hands-free feature.

Locks

To fully open a partially opened liftgate, you can either:

- Press the button on the remote control twice within three seconds.
- Press the center console switch or the liftgate switch.
- Use the liftgate release handle.
- Use the hands-free feature.

To stop the liftgate, you can either:

- Press the button on the remote control. A further remote control operation will be delayed for approximately three seconds.
- Press the center console switch or the liftgate switch.
- Use the liftgate release handle.
- Use the hands-free feature.

Closing the Liftgate

WARNING



The bounce-back feature will not work and it will not detect obstacles when the liftgate is in contact with the vehicle body.

Note: Do not leave a passive key in your vehicle when closing the liftgate. A message will be shown in the display. See **Information Messages** (page 75).

Note: A recessed grip is located inside the liftgate to help with closing.

You can either:

- Press the button on the remote control twice within three seconds.
- Press the center console switch or the liftgate switch.
- Use the liftgate release handle.
- Use the hands-free feature.
- Manually close the liftgate



E130232

The liftgate will close automatically when it comes into contact with the vehicle body.

Programming the Liftgate

1. Open the liftgate.
2. Manually move the liftgate to the new required position.
3. Press and hold the liftgate switch for at least three seconds. You will hear a chime.

Hands-Free Feature

Note: Make sure you have a remote control within 3 feet (1 meter) of the liftgate.

1. Move your foot under and away from the rear bumper similar to a kicking motion. Do not move your foot sideways or the sensors may not detect the motion.

Locks



E161602

2. The liftgate will power open or close.

Note: Manually pushing or pulling the liftgate may enable the bounce-back feature and stop the liftgate from opening or closing.

Note: Splashing water may cause the liftgate to open. Keep the remote control away from the rear bumper detection area when washing your vehicle.

Note: This feature may not function correctly if your vehicle has a tow ball.

KEYLESS ENTRY

General Information

WARNING




The system may not function if the key is close to metal objects or electronic devices such as cell phones.

The system will not function if:

- Your vehicle battery has no charge.
- The passive key frequencies are jammed.
- The passive key battery has no charge.

Note: If the system does not function, you will need to use the key blade to lock and unlock your vehicle.

The system allows you to operate your vehicle without the use of a key or remote control.

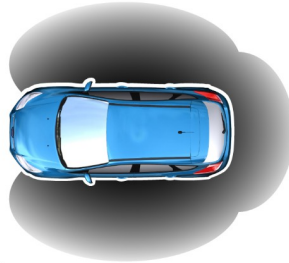

E78276

Passive locking and unlocking requires a valid passive key to be located within one of the three external detection ranges. These are located approximately five feet (1.5 meters) from the front door handles and the liftgate.


Passive Key

Your vehicle can be locked and unlocked with the passive key. You can use the passive key as a remote control. See **Locking and Unlocking** (page 33).

Locking Your Vehicle

Note: Your vehicle does not automatically lock. If you do not touch a locking sensor your vehicle will remain unlocked.

Locks

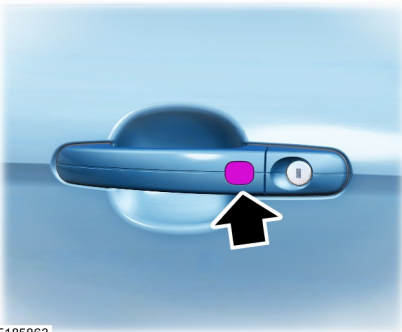

E185863

The locking sensors are on the front door handles.

Touch a locking sensor once to lock your vehicle and arm the alarm.

Touch a locking sensor twice within three seconds to double lock your vehicle and arm the alarm.

Note: When locking your vehicle, do not grip the door handle.

Note: Keep the door handle clean to make sure the system operates correctly.

Note: Your vehicle will remain locked for a few seconds. When the delay period is over, you can open the doors again, provided the passive key is within the respective detection range.

Two short flashes of the direction indicators confirms that all the doors and the liftgate have been locked and that the alarm has been armed.

Liftgate

The liftgate will not fully close if a passive key is located inside the luggage compartment with the doors locked.

Note: If a second passive key is located within the liftgate detection range, the liftgate can be fully closed.

Unlocking Your Vehicle

One long flash of the direction indicators confirms that all the doors and the liftgate have been unlocked and that the alarm has been disarmed.

Note: When your vehicle remains locked for longer than three days, the system will enter an energy-saving mode. This is to prevent the vehicle battery running out of charge. When your vehicle is unlocked while in this mode, the reaction time of the system may be a little longer than normal. To exit the energy-saving mode, unlock your vehicle.

Note: A valid passive key must be located within the detection range of that door.

Unlocking Only the Driver's Door

You can program the system so that only the driver door is unlocked. See **Remote Control** (page 30).

If the unlocking function is reprogrammed so that only the driver door is unlocked the following will occur:

- If the driver's door is the first door which is opened, the other doors will remain locked. All the other doors can be unlocked from inside your vehicle by pressing the unlock button located on the driver's and front passenger's door. Doors can be unlocked individually by pulling the interior door handles on those doors.
- If the front passenger's door is the first door which is opened, all the doors and the liftgate will be unlocked.

Disabled Keys

Any keys left inside your vehicle interior when it is locked will be disabled.

You cannot use a disabled key to switch the ignition on or start the engine.


Locks

You must enable all passive keys again in order to use them.

To enable all your passive keys, unlock your vehicle using a passive key that has not been disabled or the remote control unlocking function.

All passive keys will then be enabled if you switch the ignition on or you start your vehicle with a valid key.

Locking and Unlocking the Doors with the Key Blade

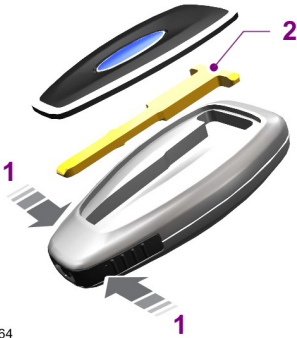

E87964

1. Carefully remove the cover.
2. Remove the key blade and insert it into the lock.

Note: Only the driver's door handle has a lock cylinder.

Security

PASSIVE ANTI-THEFT SYSTEM

Principle of Operation

The system prevents someone from starting the engine with an incorrectly coded key.

Coded Keys

If you lose a key, you can obtain a replacement from an authorized dealer. If possible, provide them with the key number from the tag provided with the original keys. You can also obtain extra keys from an authorized dealer.

Note: Have all of your remaining keys erased and recoded if you lose a key. Have replacement keys coded together with recoding your remaining keys. See an authorized dealer for further information.

Note: Do not shield your keys with metal objects. This may prevent the receiver from recognizing a coded key.

Arming the Engine Immobilizer

When you switch the ignition off the engine immobilizer will arm automatically after a short time.

Disarming the Engine Immobilizer

When you switch the ignition on the engine immobilizer will disarm automatically if a correctly coded key is used.

If you are unable to start the engine with a correctly coded key, have your vehicle checked by an authorized dealer.

ANTI-THEFT ALARM

Alarm System


Your vehicle may have one of the following alarm systems:

- Perimeter alarm.
- Perimeter alarm with interior sensors.
- Category one alarm with interior sensors and battery back-up sounder.

Perimeter Alarm

The perimeter alarm is a deterrent against unauthorized access to your vehicle through the doors and the hood. It also protects the audio unit.

Interior Sensors

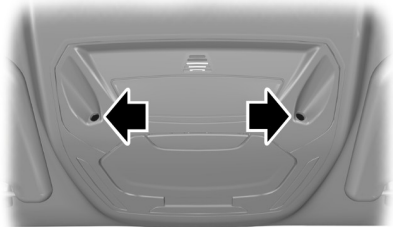

E131656

WARNINGS



Do not cover up the interior lamp unit sensors.



Do not arm the alarm with full guard if passengers, animals or other moving objects are inside your vehicle.

The sensors act as a deterrent against unauthorized intrusion by sensing any movement within your vehicle.

Security

Battery Back-up Sounder

The battery back-up sounder is an extra alarm system which will sound a siren when the alarm is triggered. When you lock your vehicle the system is armed. The sounder has its own battery and will sound an alarm siren even if someone disconnects your vehicle battery or the battery back-up sounder itself.

Triggering the Alarm

Once armed, the alarm is triggered in any of the following ways:

- If someone opens a door, the liftgate or the hood without a valid key or remote control.
- If someone removes the audio or navigation system.
- If you switch the ignition on without a valid key.
- If the interior sensors detect movement within your vehicle.
- On vehicles with a battery back-up sounder, if someone disconnects your vehicle battery or the battery back-up sounder itself.

If the alarm is triggered, the alarm horn will sound for 30 seconds and the hazard warning flasher will flash for five minutes.

Any further attempts to perform one of the above will trigger the alarm again.

Full and Reduced Guard

Full Guard

Full guard is the standard setting.

In full guard, the interior sensors are on when you arm the alarm.

Note: *This may result in false alarms if animals or moving objects are inside your vehicle.*

Reduced Guard

In reduced guard, the interior sensors are off when you arm the alarm.

Note: *You can set the alarm to reduced guard for the current ignition cycle only. The alarm will reset to full guard the next time you switch the ignition on.*

Ask on Exit (If Equipped)

You can set the information display to ask you each time which level of guard you wish to set.

If you select **Ask on Exit**, the message **Reduced guard** appears in the information display each time you switch the ignition off. See **Information Messages** (page 75).

If you wish to arm the alarm with reduced guard, press the **OK** button when this message appears.

If you wish to arm the alarm with full guard, leave your vehicle without pressing the **OK** button.

Selecting Full or Reduced Guard

Note: *Selecting reduced guard does not set the alarm permanently to reduced guard. It sets it to reduced guard only for the current ignition cycle. If you regularly set the alarm to reduced guard, select **Ask on Exit**.*

You can select full or reduced guard using the information display. See (page 69).

Arming the Alarm

To arm the alarm, lock your vehicle. See **Locks** (page 33).

Disarming the Alarm

Vehicles Without Keyless Entry

Perimeter Alarm

Disarm and silence the alarm by unlocking the doors with the key and switching the ignition on with a correctly coded key or unlocking the doors with the remote control.

Category One Alarm

Disarm and silence the alarm by unlocking the doors with the key and switching the ignition on with a correctly coded key within 12 seconds or unlocking the doors with the remote control.

Vehicles with Keyless Entry

Note: *A valid passive key must be located within the detection range of that door for keyless entry. See **Keyless Entry** (page 38).*

Perimeter Alarm

Disarm and silence the alarm by unlocking the doors and switching the ignition on or unlocking the doors with the remote control.


Category One Alarm

Disarm and silence the alarm by unlocking the doors and switching the ignition on within 12 seconds or unlocking the doors or the liftgate with the remote control.


Steering Wheel

ADJUSTING THE STEERING WHEEL

WARNING

 Do not adjust the steering wheel when your vehicle is moving.

Note: Make sure that you are sitting in the correct position. See **Sitting in the Correct Position** (page 100).

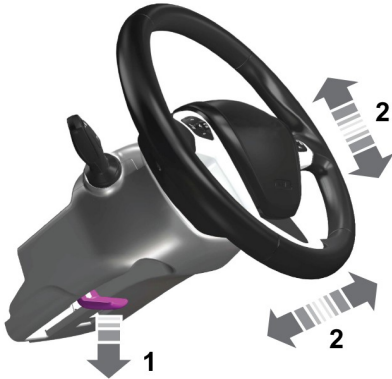

E95178

1. Unlock the steering column.
2. Adjust the steering wheel to the desired position.



E95179

3. Lock the steering column.


AUDIO CONTROL

Select the required source on the audio unit.

You can operate the following functions with the control:

Steering Wheel


Type 1

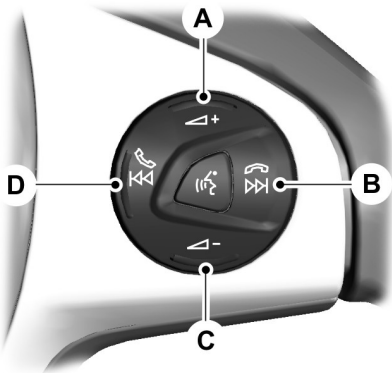

E159789

- A Volume up
- B Seek up, next or end call
- C Volume down
- D Seek down, previous or accept call

Type 2

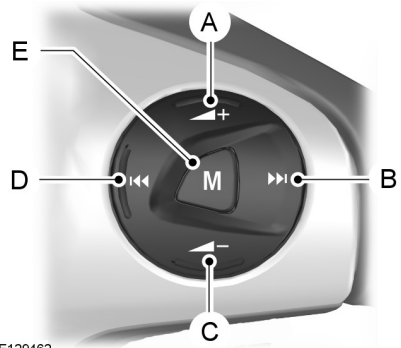

E129462

- A Volume up
- B Seek up or next
- C Volume down
- D Seek down or previous
- E Mode

Press **M** to select the audio source.

Seek, Next or Previous

Press the seek button to:

- tune the radio to the next or previous stored preset
- play the next or the previous track.

Press and hold the seek button to:

- tune the radio to the next station up or down the frequency band
- seek through a track.

Steering Wheel

VOICE CONTROL



E159531

Press the button to select or deselect voice control. See **SYNC™** (page 269).

INFORMATION DISPLAY CONTROL



E130248

See **Information Displays** (page 69).

CRUISE CONTROL



E157482

See **Cruise Control** (page 145).



E145434

Use the arrows on the right side of the steering wheel to navigate through the information display menus. Press **OK** to make a selection.

Wipers and Washers


WINDSHIELD WIPERS

Note: Fully defrost the windshield before you switch the windshield wipers on.

Note: Make sure you switch the windshield wipers and vehicle power off before using an automatic car wash.

Note: If streaks or smears appear on the windshield, clean the windshield and the wiper blades. See **Checking the Wiper Blades** (page 195). If that does not resolve the issue, install new wiper blades. See **Changing the Wiper Blades** (page 195).

Note: Do not operate the wipers on a dry windshield. This may scratch the glass, damage the wiper blades or cause the wiper motor to burn out. Always use the windshield washers before wiping a dry windshield.

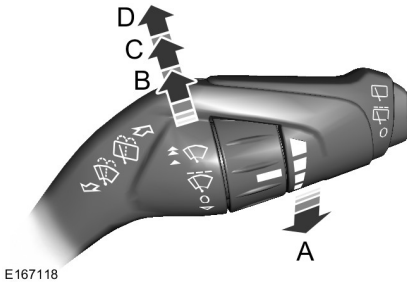


E 167118

- A Single wipe.
- B Intermittent wipe.
- C Normal wipe.
- D High-speed wipe.

Note: Move to position **O** marked on the wiper lever to switch off.

Intermittent Wipe

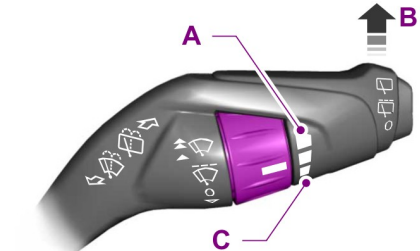

E 167119

- A Short-wipe interval.
- B Intermittent wipe.
- C Long-wipe interval.

Push the wiper lever up to switch the wipers on, and then use the rotary control to adjust the intermittent wipe interval.

Speed Dependent Wipers (If Equipped)

When your vehicle speed increases, the interval between wipes decreases.

AUTOWIPERS (If Equipped)

Note: Fully defrost the windshield before you switch the windshield wipers on.

Note: Make sure you switch the windshield wipers and ignition off before using an automatic car wash.

Note: If streaks or smears appear on the windshield, clean the windshield and the wiper blades. If that does not resolve the issue, install new wiper blades.


Note: If you switch autolamps and autowipers on, the headlamps automatically turn on when the windshield wipers continuously operate.

Wipers and Washers

Note: During wet or winter driving conditions with ice, snow or a salty road mist, inconsistent or unexpected wiping or smearing may occur.

In these conditions, you can do the following:

- Lower the sensitivity of the autowipers to reduce the amount of smearing on the windshield.
- Switch to normal or high-speed wipe.
- Switch autowipers off.

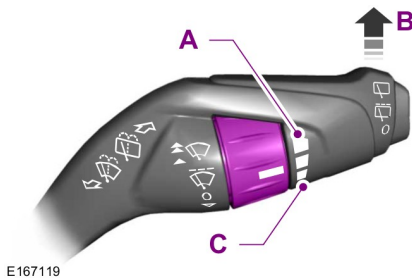

E167119

- A High sensitivity
- B On
- C Low sensitivity

Note: Some autowiper levers may include a letter "A" within the icon.

Autowipers uses a rain sensor located in the area around the interior mirror. The rain sensor monitors the amount of moisture on the windshield and automatically turns the wipers on. It will adjust the wiper speed by the amount of moisture that the sensor detects on the windshield.

Use the rotary control to adjust the sensitivity of the autowipers. When you select low sensitivity, the wipers will operate when the sensor detects a large amount of water on the windshield. When you select high sensitivity, the wipers will operate when the sensor detects a small amount of water on the windshield.

Keep the outside of the windshield clean. The rain sensor is very sensitive and the wipers may operate if dirt, mist or insects hit the windshield.

WINDSHIELD WASHERS

Note: Do not operate the washers when the washer reservoir is empty. This may cause the washer pump to overheat.



E129188

The washers will spray for as long as you pull the lever toward you. When you release the lever, the wipers will operate for a short time.

REAR WINDOW WIPER AND WASHERS

Rear Window Wiper

Note: Make sure you switch the rear window wiper and ignition off before using an automatic car wash.

Wipers and Washers




E171615

- A Intermittent wipe.
- B Low speed wipe.
- C Off.

Press the top of the button to switch intermittent wipe on. Press the top of the button again to switch low speed wipe on. Press the bottom of the button to switch the rear window wiper off.

When you switch on the front wipers and move the gearshift lever to reverse (R), rear intermittent wipe automatically turns on.

Rear Window Washer

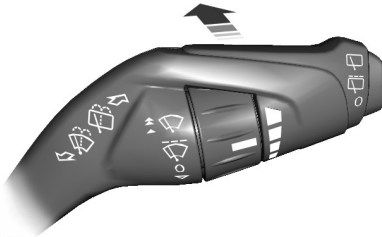

E167407

Push the lever away from you to operate the rear window washer. When you release the lever, wiping continues for a short period of time.

HEADLAMP WASHERS

When the headlamps are on, the headlamp washers will operate with the windshield washers.

Note: *The headlamp washers will not operate every time you use the windshield washers. This is to prevent the washer fluid reservoir from emptying quickly.*

Lighting

GENERAL INFORMATION

Condensation in Lamp Assemblies

Exterior lamps have vents to accommodate normal changes in air pressure.

Condensation can be a natural by-product of this design. When moist air enters the lamp assembly through the vents, there is a possibility that condensation can occur when the temperature is cold. When normal condensation occurs, a fine mist can form on the interior of the lens. The fine mist eventually clears and exits through the vents during normal operation.

Clearing time may take as long as 48 hours under dry weather conditions.

Examples of acceptable condensation are:


- The presence of a fine mist (no streaks, drip marks or large droplets).
- A fine mist covers less than 50% of the lens.

Examples of unacceptable condensation are:

- A water puddle inside the lamp.
- Streaks, drip marks or large droplets present on the interior of the lens.

If you see any unacceptable condensation, have your vehicle checked by an authorized dealer.

LIGHTING CONTROL

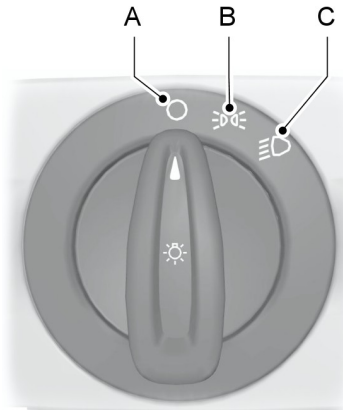

E70718

- A Off
- B Parking lamps, instrument panel lamps, license plate lamps and tail lamps
- C Headlamps

High Beam



E130140

Push the lever forward to switch the high beam on.

Push the lever forward again or pull the lever toward you to switch the high beam off.

Lighting

Headlamp Flasher



E142450

Pull the lever toward you slightly and release it to flash the headlamps.

AUTOLAMPS



E70719

The headlamps will turn on and off automatically in low light situations or during inclement weather.

Note: *It may be necessary to switch your headlamps on manually in severe weather conditions.*

The headlamps will remain on for a period of time after you switch the ignition off. You can adjust the time delay using the information display controls. See **Information Displays** (page 69).

Note: *If you switch autolamps on in conjunction with autowipers, low beam headlamps will illuminate automatically when the rain sensor activates the windshield wipers continuously.*

INSTRUMENT LIGHTING DIMMER



E148739


HEADLAMP EXIT DELAY

After you switch the ignition off, you can switch the headlamps on by pulling the direction indicator lever toward you. You will hear a short tone. The headlamps will switch off automatically after three minutes with any door open or 30 seconds after the last door has been closed. You can cancel this feature by pulling the direction indicator toward you again or switching the ignition on.

Lighting

DAYTIME RUNNING LAMPS

WARNING


 Always remember to switch your headlamps on in low light situations or during inclement weather. The system does not activate the tail lamps and may not provide adequate lighting during these conditions. Failure to activate your headlamps under these conditions may result in a collision.

To switch the system on:


1. Switch the ignition on.
2. Switch the lighting control to the off or autolamp position.


AUTOMATIC HIGH BEAM CONTROL


WARNINGS

 The system does not relieve you of your responsibility to drive with due care and attention. A manual override may be necessary if the system fails to switch the high beam on or off.


 A manual override may be required when approaching other road users such as cyclists.

 Do not use the system in fog.

 In cold and severe weather conditions the system may not function. A manual override may be necessary in these cases.

 The system may not deactivate the high beam if the lights of oncoming vehicles are hidden by obstacles (for example guard rails).

WARNINGS

 Check and replace wiper blades regularly to ensure the camera sensor has a clear view through the windscreen. Replacement wiper blades must be the correct length.

Note: *Keep the windscreen free from obstructions such as bird droppings, insects and snow or ice.*

Note: *Reflective road signs may be detected as oncoming traffic and the headlamps will be switched to low beam.*

Note: *Always fit Ford Original Parts when replacing headlamp bulbs. Other bulbs may reduce system performance.*

The system will automatically switch on high beams if it is dark enough and no other traffic is present. If it detects an approaching vehicle's headlamps or tail lamps, or street lighting ahead the system will switch off high beam before it can distract other road users. Low beam will remain on.

A camera sensor is centrally mounted behind the windshield of your vehicle. This monitors conditions continuously to decide when to switch the high beams on and off.

Once the system is active the high beam will switch on if:

- It is dark enough to require the use of high beams and
- there is no traffic or street lighting ahead and
- vehicle speed is greater than 25 mph (40 km/h).

The high beam will switch off if:

- The ambient light is high enough that high beam is not required.
- An approaching vehicle's headlamps or tail lamps are detected.
- Street lighting is detected.

Lighting

- Vehicle speed falls below 16 mph (25 km/h).
- The camera sensor is too hot or becomes blocked.

Switching the System On

Switch the system on using the information display. See **Information Displays** (page 69).



E70719

Turn the switch to the autolamps position. See **Autolamps** (page 51).



The indicator will illuminate to confirm when the system is ready to assist.

Note: The indicator will only illuminate when it is dark and headlamps have been switched on.


Note: The system may take a short time to initialize after first switching the ignition on, especially in very dark conditions. The high beam will not automatically switch on during this time.

Setting the System Sensitivity

The system has three sensitivity levels which can be accessed via the information display. See **Information Displays** (page 69).

The set level determines the speed at which the high beam will be restored after detected traffic leaves the field of view.

Manually Overriding the System

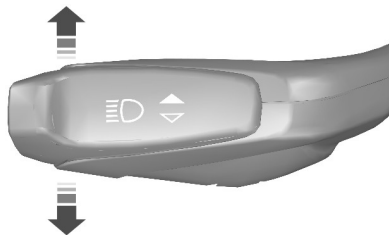


E133632

Push or pull the lever to switch between high and low beam.

Note: This is a temporary override and the system will return to automatic operation after a short period.

To permanently switch the system off, use the information display menu or turn the lighting control switch to the headlamps position.

FRONT FOG LAMPS

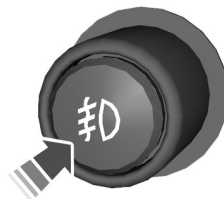

E70721

Press the control to switch the fog lamps on or off.

You can switch the fog lamps on when the lighting control is in any position except off.

Lighting

REAR FOG LAMPS



E70720

WARNINGS



Only use the rear fog lamps when visibility is restricted to less than 164 feet (50 meters).



Do not use the rear fog lamps when it is raining or snowing and visibility is more than 164 feet (50 meters).

Press the control to switch the fog lamps on or off.

You can switch the fog lamps on when either the front fog lamps or low beam headlamps are on.


Recommended Headlamp Leveling Switch Positions

Load		Load in luggage compartment*	Switch position
Front seats	Second row seats		
1-2	-	-	0
1-2	3	-	2
1-2	3	Max	2.5
1	-	Max	4

* See **Vehicle Identification Plate** (page 226).

HEADLAMP LEVELING

Note: Vehicles with Xenon headlamps have automatic headlamp leveling.

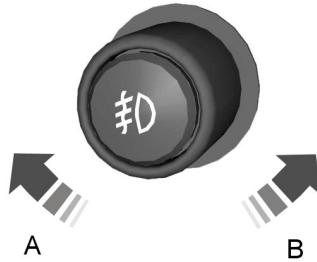


E70722

- A Raised headlamp beams
- B Lowered headlamp beams

You can adjust the level of the headlamp beams according to your vehicle load.

Lighting

CORNERING LAMPS (If Equipped)

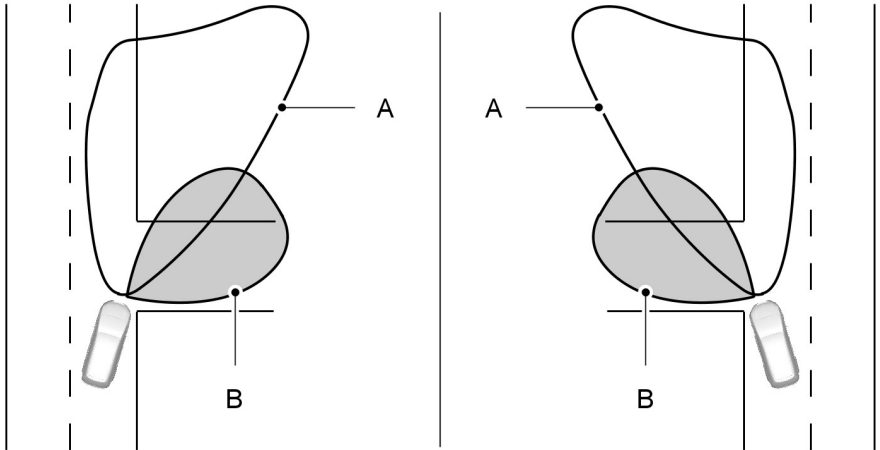

E72898

- A Headlamp beam
- B Cornering lamp beam

The cornering lamps illuminate the inside of a corner when you are turning.

DIRECTION INDICATORS



E162681

Push the lever up or down to use the direction indicators.

Note: Tap the lever up or down to make the direction indicators flash three times to indicate a lane change.

INTERIOR LAMPS


The lamps will switch on when one of the following conditions have been met:

- You open any door.
- You press a remote control button.
- You press switch B on the front interior lamp.


Lighting


Front Interior Lamp


Without moonroof

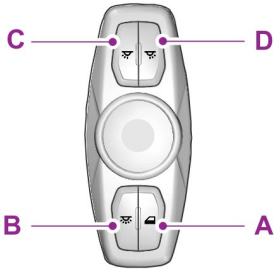


E161163


 (A) Door function switch. Press this switch to disable the interior lamps. The door function indicator lamp will illuminate yellow with lamps disabled. Press the switch again to turn interior lamps back on. The indicator lamp will illuminate blue.

 (B) All lamps on and off switch.


 (C) Passenger individual lamp on and off switch.


 (D) Driver individual lamp on and off switch.


With moonroof

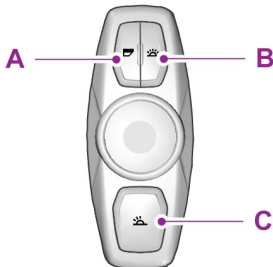


E142454

 (A) Door function switch. Press this switch to disable the interior lamps. The door function indicator lamp will illuminate yellow with lamps disabled. Press the switch again to turn interior lamps back on. The indicator lamp will illuminate blue.

 (B) All lamps on and off switch.

 (C) Individual lamp on and off switch.

Rear Interior Lamp (If Equipped)

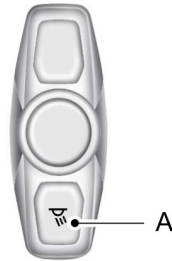


E142455

(A) You can switch individual map lamps on independently by pressing switch.

AMBIENT LIGHTING (If Equipped)

The ambient lighting system illuminates the interior with a choice of several colors. The ambient lighting control is located in the overhead console.

Lighting

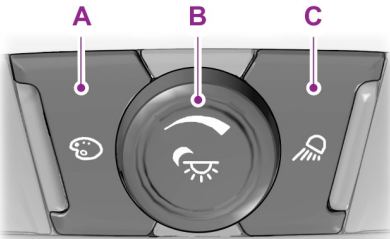

E142456

- A Color palette
- B Control knob
- C Search mode

Rotate B past the first detent to switch on and adjust to the desired brightness.

Press A to cycle through the color choices.

Press C to switch on all interior lamps and the ambient lighting. Press C again to switch off the interior lamps and return the ambient lighting to the previously selected color.

The ambient lighting will switch on when the following conditions have been met:

- you switch the ignition on
- you switch the headlamps on

The ambient lighting will remain on until you switch the ignition off and one of the following conditions have been met:

- you lock your vehicle
- the accessory delay timer expires.

Windows and Mirrors

POWER WINDOWS


WARNINGS



Do not leave children unattended in your vehicle and do not let them play with the power windows. They may seriously injure themselves.



When closing the power windows, you should verify they are free of obstructions and make sure that children and pets are not in the proximity of the window openings.

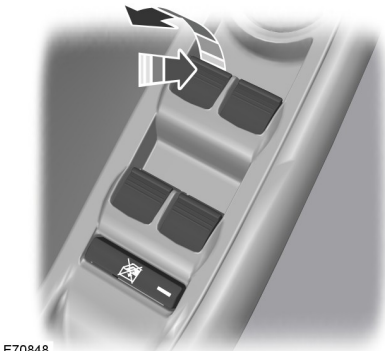

E70848

Press the control to open the window.
Lift the control to close the window.

Note: You may hear a pulsing noise when just one of the windows is open. Lower the opposite window slightly to reduce this noise.

One-Touch Down (If Equipped)

Press the control fully and release it. Press again or lift it to stop the window.

One-Touch Up (If Equipped)

Lift the control fully and release it. Press or lift it again to stop the window.

Window Lock



E70850

Press the control to lock or unlock the rear window controls. It lights when the rear window controls lock.

Bounce-Back (If Equipped)

The window stops automatically while closing. It reverses some distance if there is an obstacle in the way.

Overriding the Bounce-Back Feature

WARNING



When you override the bounce-back feature the window will not reverse if it detects an obstacle. Take care when closing the windows to avoid personal injury or damage to your vehicle.

Proceed as follows to override this protection feature when there is a resistance, for example in winter:

1. Close the window twice until it reaches the point of resistance and let it reverse.

Windows and Mirrors

2. Close the window a third time to the point of resistance. You disabled the bounce-back feature and you can now close the window manually. The window travels past the point of resistance and you can close it fully.

Contact an authorized dealer as soon as possible if the window does not close after the third attempt.

Resetting the Bounce-Back Feature

WARNING



The bounce-back feature remains turned off until you reset the memory.

If you have disconnected the battery, you must reset the bounce-back memory separately for each window.

1. Lift and hold the control until the window is fully closed.
2. Release the control.
3. Lift and hold the control again for a few seconds.
4. Release the control.
5. Lift and hold the control again for a few seconds.
6. Release the control.
7. Press and hold the control until the window is fully open.
8. Lift and hold the control until the window is fully closed.
9. Release the control.
10. Open the window and then try to close it automatically.
11. Repeat the procedure if the window does not close automatically.

Accessory Delay (If Equipped)

You can use the window controls for several minutes after switching off the ignition or until opening either front door.


GLOBAL OPENING AND CLOSING

You can also operate the power windows with the ignition off using the global opening and global closing function.

Note: *Global opening will only operate for a short period of time after you have unlocked your vehicle using the remote control.*

Note: *Global closing will only operate if you have set the memory correctly for each window. See **Power Windows** (page 58).*

Global Opening (If Equipped)

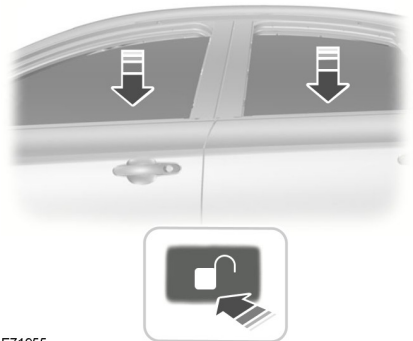

E71955

To open all the windows:

1. Press and release the remote control unlock button.
2. Press and hold the remote control unlock button for at least three seconds.


Windows and Mirrors


Press the lock or unlock button to stop the opening function.

Global Closing (If Equipped)

Vehicles Without Keyless Entry

WARNING


 Take care when using global closing. In an emergency, press the lock or unlock button immediately to stop.

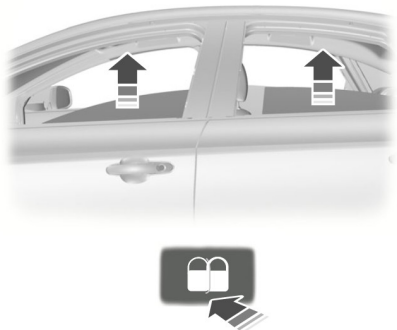

E71956


To close all the windows, press and hold the remote control lock button for at least three seconds. Press the lock or unlock button to stop the closing function. The bounce-back function is also on during global closing.

Vehicles With Keyless Entry

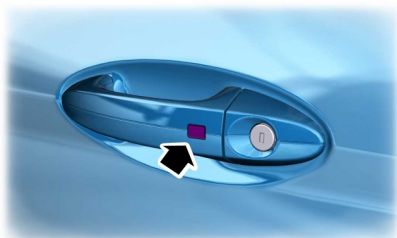

E87384

WARNING

 Take care when using global closing. In an emergency, touch a door handle lock sensor to stop.


Note: *Global closing can be switched on using the driver's door handle. Global opening and closing can also be switched on using the buttons on the passive key.*


To close all the windows, press and hold the driver's door handle for at least three seconds. The bounce-back function is also on during global closing.

EXTERIOR MIRRORS

Power Exterior Mirrors

WARNING


 Do not adjust the mirrors when your vehicle is moving.

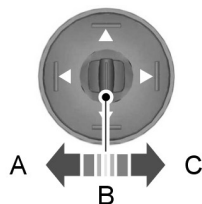

E70846

- A Left-hand mirror
- B Off
- C Right-hand mirror

Windows and Mirrors

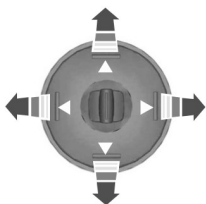

E70847

Press the arrows to adjust the mirror.

Automatic Folding and Unfolding

The mirrors will fold automatically when you lock your vehicle with the key, the remote control or a keyless entry system request. The mirrors will unfold when you unlock your vehicle with the key, the remote control, a keyless entry system request or the driver side interior door handle.

Note: *If you fold the mirrors using the manual fold button, you can only unfold them again manually.*

Manual Folding and Unfolding

The electric folding mirrors operate with the ignition on, and for several minutes after you switch the ignition off.

Note: *They will no longer operate if you switch the ignition off and open a door.*



E72623

Press the button to fold or unfold the mirrors.

Press the button again to stop and reverse the direction of movement.

Note: *Continuous folding and unfolding of the mirrors will cause them to overheat and shut down for a short time. This is to avoid permanent damage.*

Fold-Away Exterior Mirrors

Push the mirror toward the door window glass. Make sure that you fully engage the mirror in its support when returning it to its original position.

INTERIOR MIRROR

WARNING



Do not adjust the mirror when your vehicle is moving.

Note: *Do not clean the housing or glass of any mirror with harsh abrasives, fuel or other petroleum or ammonia-based cleaning products.*

Windows and Mirrors

You can adjust the interior mirror to your preference.


Pull the tab below the mirror toward you to reduce glare at night.

Auto-Dimming Mirror

Note: Do not block the sensors on the front and back of the mirror. Mirror performance may be affected. A rear center passenger or raised rear center head restraint may also block light from reaching the sensor.

The mirror will dim automatically to reduce glare when bright lights are detected from behind your vehicle. It will automatically return to normal reflection when you select reverse gear to make sure you have a clear view when backing up.


SUN VISORS

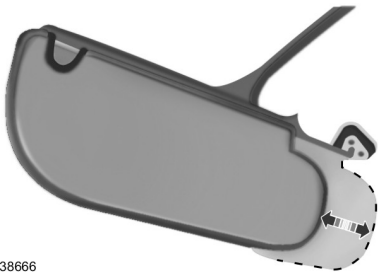

E138666

Rotate the sun visor toward the side window and extend it rearward for extra shade.

Illuminated Vanity Mirror (If Equipped)

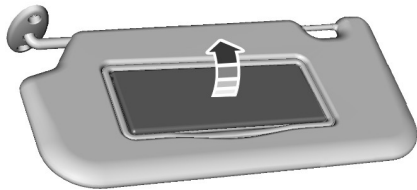



E162197

Lift the cover to switch the lamp on.

MOONROOF (If Equipped)

WARNINGS

 Do not let children play with the moonroof or leave them unattended in the vehicle. They may seriously hurt themselves.

 When closing the moonroof, you should verify that it is free of obstructions and make sure that children and pets are not in the proximity of the roof opening.

The moonroof and sunscreen controls are located on the overhead console.

The moonroof and sunscreen have a one-touch open and close feature. To stop them during one-touch operation, press the control a second time.

Windows and Mirrors

Opening and Closing the Sunscreen




E138668

Press and release the rear of the control to open the sunscreen.

Press and release the front of the control to close the sunscreen. If it is open, the moonroof will automatically close before the sunscreen closes.

Opening and Closing the Moonroof

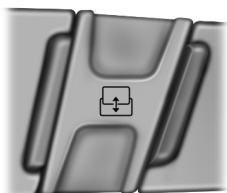

E138669

Press and release the rear of the control to open the moonroof. If it is closed, the sunscreen will automatically open before the moonroof opens. The moonroof will stop short of the fully opened position.

Note: *This position helps to reduce wind noise or rumbling which may happen with the moonroof fully open. Press and hold the control again to fully open the moonroof.*

Press and release the front of the control to close the moonroof.

Bounce-Back

The moonroof will stop automatically while closing. It will reverse some distance if there is an obstacle in the way.

Press and hold the front of the control within two seconds of a bounce-back event to override this function. While bounce-back is active, the closing force increases for each of the next three times that you close the moonroof.


Venting the Moonroof

Press and release the front of the control to vent the moonroof. Press and release the rear of the control to close the moonroof.

Note: *When you vent the moonroof it will rise to 1.57 in (4 cm) and then lower slightly. This is normal. You cannot stop the moonroof in the higher position.*

Instrument Cluster

GAUGES

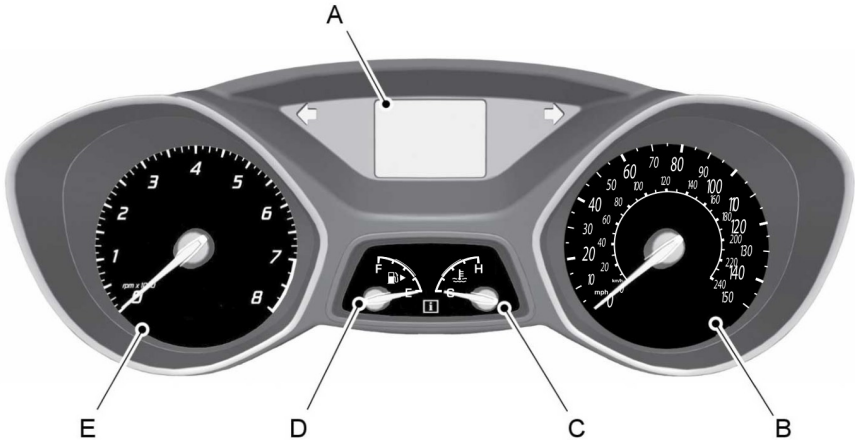

E145825

- A Information display
- B Speedometer
- C Engine coolant temperature gauge
- D Fuel gauge
- E Tachometer

Information Display

Odometer

Located in the bottom of the information display, it registers the accumulated distance your vehicle has traveled.

Outside Air Temperature

Shows the outside air temperature.

Trip Computer

See **Trip Computer** (page 75).

Vehicle Settings and Personalization

See (page 69).

Instrument Cluster

Engine Coolant Temperature Gauge

WARNING



Never remove the coolant reservoir cap while the engine is running or hot.

At normal operating temperature, the needle will remain in the center section.

Note: Do not restart the engine until the cause of overheating has been resolved.

If the needle enters the red section, the engine is overheating. Stop the engine, switch the ignition off and determine the cause once the engine has cooled down. See **Engine Coolant Check** (page 194).

Fuel Gauge

Switch the ignition on. The fuel gauge will indicate approximately how much fuel is left in the fuel tank. The fuel gauge may vary slightly when your vehicle is moving or on a gradient. The arrow adjacent to the fuel pump symbol indicates on which side of the vehicle the fuel filler door is located.

WARNING LAMPS AND INDICATORS

The following warning lamps and indicators will alert you to a vehicle condition that may become serious. Some lamps will illuminate when you start your vehicle to make sure they work. If any lamps remain on after starting your vehicle, refer to the respective system warning lamp for further information.

Note: Some warning indicators appear in the information display and function the same as a warning lamp but do not display when you start your vehicle.

Anti-Lock Braking System Warning Lamp



If it illuminates when you are driving, this indicates a malfunction. You will continue to have the normal braking system (without anti-lock braking system) unless the brake system warning lamp is also illuminated. Have your vehicle checked by an authorized dealer.

Automatic High Beam Lamp (if Equipped)



It will illuminate when this feature is on. See **Automatic High Beam Control** (page 52).

Battery Warning Lamp



If it illuminates when driving, this indicates a malfunction. Switch off all unnecessary electrical equipment. Have your vehicle checked by an authorized dealer immediately.

Blind Spot Monitor Indicator (if Equipped)



It will illuminate when you switch this feature off or in conjunction with a message. See **Blind Spot Information System** (page 156). See **Information Messages** (page 75).

Brake System Warning Lamp



It will illuminate when you engage the parking brake with the ignition on.

Instrument Cluster

If it illuminates when you are driving, check that the parking brake is not engaged. If the parking brake is not engaged, this indicates low brake fluid level or a brake system malfunction. Have your vehicle checked by an authorized dealer immediately.

WARNING



Driving your vehicle with the warning lamp on is dangerous. A significant decrease in braking performance may occur. It will take you longer to stop your vehicle. Have your vehicle checked by an authorized dealer immediately. Driving extended distances with the parking brake engaged can cause brake failure and the risk of personal injury.

Cruise Control Indicator (If Equipped)



It will illuminate when you switch this feature on. See **Using Cruise Control** (page 145).

Direction Indicator



Illuminates when the left or right direction indicator or the hazard warning flasher is turned on. If the indicators stay on or flash faster, check for a burnt out bulb. See **Changing a Bulb** (page 196).

Engine Oil Warning Lamp

WARNING



Do not resume your journey if it illuminates despite the level being correct. Have your vehicle checked by an authorized dealer immediately.



If it illuminates with the engine running or when you are driving, this indicates a malfunction.

Stop your vehicle as soon as it is safe to do so and switch the engine off. Check the engine oil level. See **Engine Oil Check** (page 193).

Engine Warning Lamps



Malfunction Indicator Lamp



Powertrain Warning Lamp

All Vehicles

If either lamp illuminates when the engine is running, this indicates a malfunction. The engine will continue to run but it may have limited power. If it flashes when you are driving, reduce the speed of your vehicle immediately. If it continues to flash, avoid heavy acceleration or deceleration. Have your vehicle checked by an authorized dealer immediately.

WARNING



Have this checked immediately.

If both lamps illuminate together, stop your vehicle as soon as it is safe to do so (continued use may cause reduced power and cause the engine to stop). Switch the ignition off and attempt to restart the engine. If the engine restarts have your vehicle checked by an authorized dealer immediately. When the engine does not restart have your vehicle checked by an authorized dealer.

Instrument Cluster

Fasten Safety Belt Warning Lamp



It will illuminate and a chime will sound to remind you to fasten your safety belt. See **Safety Belt Minder** (page 25).

Front Airbag Warning Lamp



If it fails to illuminate when you start your vehicle, continues to flash or remains on, it indicates a malfunction. Have your vehicle checked by an authorized dealer.

Front Fog Lamps Indicator



It will illuminate when you switch the front fog lamps on.

Frost warning lamp

WARNING



Even if the temperature rises to above 39°F (4°C) there is no guarantee that the road is free of hazards caused by inclement weather.



It will illuminate when the outside air temperature is 39°F (4°C) or below.

Glow Plug Indicator



See **Starting a Diesel Engine** (page 113).

High Beam Indicator



It will illuminate when you switch the high beam headlamps on. It will flash when you use the headlamp flasher.

Information Indicator



It will illuminate when a new message is stored in the information display. It will be red or amber in color depending on the severity of the message and will remain on until the cause of the message has been rectified. See **Information Messages** (page 75).

Lane Keeping System Indicator



It will illuminate when this feature is switched off or in conjunction with a message. See **Lane Keeping System** (page 153).

Low Fuel Level Warning Lamp



If it illuminates, refuel as soon as possible.

Headlamp and Parking Lamp Indicator



It will illuminate when you switch the headlamps or parking lamps on.

Rear Fog Lamps Indicator



It will illuminate when you switch the rear fog lamps on.

Shift Indicator



It will illuminate to inform you that shifting to a higher or lower gear as indicated may give better fuel economy and lower CO2 emissions. It will not



illuminate during periods of high acceleration, braking or when the clutch pedal is pressed.

Instrument Cluster

Stability Control Off Indicator



It will illuminate when you switch the system off. It will go out when you switch the system back on or when you switch the ignition off.

Stability Control Warning Lamp



It will flash when the system is active. If it remains illuminated or does not illuminate when you switch the ignition on, this indicates a malfunction. During a malfunction the system will switch off. Have your vehicle checked by an authorized dealer immediately.

Start-Stop Indicator



It will illuminate to inform you when the engine shuts down or in conjunction with a message. See **Auto-Start-Stop** (page 115). See **Information Messages** (page 75).

AUDIBLE WARNINGS AND INDICATORS

Key in Ignition Warning Chime

Sounds when you open the driver's door and you have left the key in the ignition with it in the off or accessory position.

Headlamps On Warning Chime

Sounds when you remove the key from the ignition and open the driver's door and you have left the headlamps or parking lamps on.

Parking Brake On Warning Chime

Sounds when you have left the parking brake on and drive your vehicle. If the warning chime remains on after you have released the parking brake, have your vehicle checked by an authorized dealer immediately.

Automatic Transmission Warning Chime

Sounds when you have not moved the transmission selector lever to park. A message will be shown in the display.

Information Displays

GENERAL INFORMATION

WARNING



Driving while distracted can result in loss of vehicle control, crash and injury. We strongly recommend that you use extreme caution when using any device that may take your focus off the road. Your primary responsibility is the safe operation of your vehicle. We recommend against the use of any handheld device while driving and encourage the use of voice-operated systems when possible. Make sure you are aware of all applicable local laws that may affect the use of electronic devices while driving.

You can control various systems on your vehicle using the information display controls on the steering wheel. The information display will show the corresponding information.

Information Display Controls



E 138659

- Press the up or down arrow button to scroll through and highlight the options within a menu.
- Press the right arrow button to enter a submenu.
- Press the left arrow button to exit a submenu.
- Press and hold the left arrow button at any time to return to the main menu display.
- Press the **OK** button to choose and confirm settings or messages.

Menu Structure - Information Display

You can access the menu using the information display control.

Note: *Some options may appear slightly different or not at all if the items are optional.*

Information Displays

Trip computer¹

Message
Trip odometer
Speed
Dist to empty
Instant fuel
Average fuel
Average speed

¹ See **Trip Computer** (page 75). See **Gauges** (page 64).

Information

Message
Seatbelts
Driver alert
Traffic signs
Intelligent AWD

Settings

Message	Action	
Driver assist	Traction ctrl	On or Off
	BLIS	On or Off
	City Stop	On or Off
	Forward alert	Sensitivity
	Driver alert	On or Off
	Hill start assist	On or Off
	Deflate detect	
	Traffic signs	On or Off
		Speed warning

Information Displays

Message		Action	
	Lane keeping	Reset	
		Sensitivity	
		Intensity	
Lighting	Rain light	On or Off	
	Dimming	Manual or Auto	
	Auto highbeam	On or Off	
		Sensitivity	
	Hdlamp delay	Manual or xx Seconds	
Display	Navigation info	Choose your applicable setting	
	Language	Choose your applicable setting	
	Measure unit	Choose your applicable setting	
	Temp unit	Choose your applicable setting	
Chimes	Park slot found	On or Off	
	Information	On or Off	
	Warning	On or Off	
Convenience	Alarm		Choose your applicable setting
	Compass		On or Off
	Aux heater	Park heater	On or Off
			Time 1
			Time 2
			Once
			Heat now

Information Displays

System Check

All active warnings will display first if applicable. The system check menu may appear different based upon equipment options and current vehicle status. Press the up or down arrow button to scroll through the list.

Menu Structure - Information and Entertainment Display

You can access the menu using the information and entertainment display control. See **At a Glance** (page 11).

Note: *Some options may appear slightly different or not at all if the items are optional.*

SYNC-Media allows you to access the SYNC features.

Phone

Message	
Dial a number	
Redial	
Phonebook	
Call history	Incoming calls
	Outgoing calls
	Missed calls
Speed Dial	
Text messaging	
BT Devices	
Phone settings	Set as master
	Phonebook pref.
	Set ringtone
	Phone status
	Text msg notify
Emerg. Assist.	

Information Displays

Menu

Message		Action
SYNC-Settings	Bluetooth on	
	BT Devices	
	Set defaults	
	Master reset	
	Install on SYNC	
	System info	
	Voice settings	Choose your applicable setting
	Browse USB	
SYNC-Applications		
Navigation	Route options	Route
		Driver:
		Eco settings
		Dynamic
		Motorway
		Tunnel
		Ferry/motorail
		Toll
		Seasonal roads
		Toll sticker
	Map display	Map content
		Arrows on map:
		Nav time display:
		Map heading up
		Best contrast
	Assistance options	Signs / lane

Information Displays

Message		Action
		Nav icons in lists
		Hazard spot warning
	Personal data	Clear last destinations
		Clear favourites
		Delete home address
	Reset all settings	
Audio settings	Adaptive volume	
	Sound	
	Nav audio mixing	
	DSP settings	Choose your applicable setting
	DSP equaliser	Choose your applicable setting
	TA	On or Off
	News announcement	On or Off
	Alt. frequency	On or Off
	RDS regional	On or Off
	DAB service link	On or Off
Clock settings	Auto time (GPS)	On or Off
	Set time	
	Set date	
	Set time zone	
	Summer time	On or Off
	24-hour mode	On or Off

Information Displays

CLOCK

Type 1

To adjust the clock, switch the ignition on and press buttons H or M on the information and entertainment display as necessary.

Type 2

Note: Use the information display to adjust the clock. See (page 69).

TRIP COMPUTER

Resetting the Trip Computer

Press and hold **OK** on the current screen to reset the respective trip, distance, time and average fuel information.

Trip Odometer

Registers the distance traveled of individual journeys.

Fuel Used

Indicates the approximate distance your vehicle will travel on the fuel remaining in the tank. Changes in driving pattern may cause the value to vary.

Average Fuel

Indicates the average fuel consumption since the function was last reset.

Press the right arrow button on the current screen to see the EcoMode menu.

Digital Speedometer

The speed your vehicle is traveling at will display as a digital number.

All Value

Indicates all the respective trip, distance and average fuel information.

PERSONALIZED SETTINGS

Measure Units

To swap between imperial and metric units, scroll to this display and press the **OK** button.

Switching Chimes Off

To switch chimes off, scroll to this display and press the **OK** button.

The following chimes can be switched off:

- Warning messages.
- Information messages.

INFORMATION MESSAGES



E130248

Press the **OK** button to acknowledge and remove some messages from the information display. Other messages will be removed automatically after a short time.

Certain messages need to be confirmed before you can access the menus.

Note: Depending on the options on your vehicle, not all of the messages will display or be available. Certain messages may be abbreviated or shortened depending upon which cluster type is fitted to your vehicle.

Information Displays

Message Indicator (if Equipped)



The message indicator illuminates to supplement some messages. It will be red or amber in color depending on the severity of the

message and will remain on until the cause of the message has been rectified.

Some messages will be supplemented by a system specific symbol with a message indicator.

Active City Stop

Message	Indicator	Action
Active City Stop Sensor blocked Clean screen	amber	See Active City Stop (page 160).
Active City Stop not available	amber	See Active City Stop (page 160).
Active City Stop Auto braking	-	See Active City Stop (page 160).

Airbag

Message	Message indicator	Action
Airbag fault Service now	amber	Displays when the system requires service due to a malfunction. Have your vehicle checked by an authorized dealer as soon as possible.

Alarm

Message	Message Indicator	Action
Alarm activated Check Vehicle	Amber	Displays when the alarm has been triggered due to unauthorized entry. See Anti-Theft Alarm (page 41).
Alarm fault Service required	-	Displays when the system requires service due to a malfunction. Have your vehicle checked by an authorized dealer as soon as possible.

Information Displays

Automatic High Beam Control

Message	Indicator	Action
Front camera low visibility Clean screen	amber	Displays when the front camera sensor has reduced visibility. Clean the windshield.
Front camera fault Service required	amber	Displays when the front camera sensor has malfunctioned. Have this checked as soon as possible.
Front camera temporarily not available	-	Displays when the front camera sensor has malfunctioned. Wait a short period of time for the sensor to cool down.

Battery and Charging System

Message	Message Indicator	Action
Electrical system over-voltage Stop safely	Red	Stop your vehicle as soon as it is safe to do so and switch the ignition off. Have your vehicle checked by an authorized dealer as soon as possible.
Battery low See manual	Red	Displays to warn of a low battery condition. Switch off all unneeded electrical accessories. Have your vehicle checked by an authorized dealer as soon as possible.

Blind Spot Monitor and Cross Traffic Alert System

Message	Message Indicator	Action
BLIS Low visibility See manual	Amber	Displayed when the blind spot information system and cross traffic alert system sensors are blocked. See Blind Spot Information System (page 156).
BLIS: left sensor fault Service required	Amber	Displayed when a fault with the system has occurred. Have your vehicle checked by an authorized dealer as soon as possible.
BLIS: right sensor fault Service required	Amber	Displayed when a fault with the system has occurred. Have your vehicle checked by an authorized dealer as soon as possible.

Information Displays

Message	Message Indicator	Action
BLIS not available Trailer attached	Amber	Displayed when the system is not available due to trailer use. See Blind Spot Information System (page 156).
Cross Traffic Vehicle coming from left	Amber	Displayed when the system detects a vehicle. See Blind Spot Information System (page 156).
Cross Traffic Vehicle coming from right	Amber	Displayed when the system detects a vehicle. See Blind Spot Information System (page 156).
Cross Traffic Sensor blocked See manual	Amber	Displayed when the blind spot information system and cross traffic alert system sensors are blocked. See Blind Spot Information System (page 156).
Cross Traffic fault Service required	Amber	Displays when the system requires service due to a malfunction. Have your vehicle checked by an authorized dealer as soon as possible.
Cross Traffic disabled Trailer attached	-	Displayed when the system is not available due to trailer use. See Blind Spot Information System (page 156).

Child Power Lock

Message	Message indicator	Action
Child lock fault Service required	amber	Displays when the system has detected a condition that requires service. Have your vehicle checked by an authorized dealer as soon as possible.

Climate Control

Message	Indicator	Action
Auxiliary heater on	amber	See Auxiliary Heater (page 95).
Auxiliary heater off	-	See Auxiliary Heater (page 95).

Information Displays

Cruise Control and Adaptive Cruise Control (ACC)

Message	Indicator	Action
Front radar sensor blocked See manual	amber	See Cruise Control (page 145).
ACC not available	amber	See Cruise Control (page 145).
Collision Warning fault Service required	amber	See Cruise Control (page 145).
Collision Warn not available	amber	See Cruise Control (page 145).
ACC/Collision Warn fault Service required	amber	See Cruise Control (page 145).

Driver Alert

Message	Indicator	Action
Driver fatigue warning Rest now	red	Stop and rest as soon as it is safe to do so.
Driver fatigue warning Rest suggested	amber	Take a rest break soon.

Doors

Message	Message Indicator	Action
Driver door ajar	Red	Displays when the door listed is not completely closed and your vehicle is moving.
Passenger door ajar	Red	Displays when the door listed is not completely closed and your vehicle is moving.
Driver side rear door ajar	Red	Displays when the door listed is not completely closed and your vehicle is moving.
Passenger side rear door ajar	Red	Displays when the door listed is not completely closed and your vehicle is moving.
Trunk ajar	Red	Displays when the luggage compartment is not completely closed and your vehicle is moving.

Information Displays

Message	Message Indicator	Action
Hood open	Red	Displays when the hood is not completely closed and your vehicle is moving.
Driver door ajar	-	Displays when the door listed is not completely closed.
Passenger door ajar	-	Displays when the door listed is not completely closed.
Driver side rear door ajar	-	Displays when the door listed is not completely closed.
Passenger side rear door ajar	-	Displays when the door listed is not completely closed.
Trunk ajar	-	Displays when the luggage compartment is not completely closed.
Hood open	-	Displays when the hood is not completely closed.

Engine

Message	Message Indicator	Action
High engine temperature Stop safely	Red	Displays when the engine temperature is too high. Stop your vehicle in a safe place and allow the engine to cool. If the problem persists, have your vehicle checked by an authorized dealer. See Engine Coolant Check (page 194).
Engine fault Service now	Amber	Engine service is required. Have your vehicle checked by an authorized dealer as soon as possible.
Water detected in fuel Service required	Amber	Displays when water is detected in the fuel. Have your vehicle checked by an authorized dealer as soon as possible.
Engine oil level low Check level	-	Check the engine oil level. See Engine Oil Check (page 193).

Information Displays

Hill Start Assist

Message	Message Indicator	Action
Hill start assist not available	Amber	Displays when hill start assist is not available. Have your vehicle checked by an authorized dealer as soon as possible. See Hill Start Assist (page 127).

Keyless Vehicle

Message	Message Indicator	Action
Ford KeyFree Key not inside car	Red	Displayed when a valid key is not detected within your vehicle. See Keyless Starting (page 109).
Ford KeyFree Key inside vehicle	Amber	Displays to remind you that the key is in the trunk. See Keyless Starting (page 109).
Switch ign. off Press ENGINE Start/Stop button	Red	Displayed as a reminder to switch the ignition off. See Keyless Starting (page 109).
Press brake to start	-	Displayed as a reminder to press the brake while starting your vehicle.
Key Battery low Replace soon	-	Displays when the key battery is low. Change the battery as soon as possible. See Remote Control (page 30).
Ford KeyFree No key detected	-	Displayed if the key is not detected by the system. See Keyless Starting (page 109).
Ford KeyFree Place key in key holder	-	See Keyless Starting (page 109).
Steering lock engaged turn steering wheel	-	See Steering Wheel Lock (page 111).

Information Displays

Lane Keeping Aid

Message	Indicator	Action
Lane keeping sys Fault Service required	amber	Displays when the system has detected a condition that requires service. Have your vehicle checked by an authorized dealer.

Lighting

Message	Message Indicator	Action
Headlamp fault Service required	Amber	Displays when an electrical system problem occurs with the headlamp system. See Changing a Bulb (page 196).
Low beam Bulb fault	-	Displays when the low beam headlamp bulb has burned out. See Changing a Bulb (page 196).
Brake lamp Bulb fault	-	Displays when the brake lamp bulb has burned out. See Changing a Bulb (page 196).
Rear fog lamp Bulb fault	-	Displays when the rear fog lamp bulb has burned out. See Changing a Bulb (page 196).
Trailer brake lamp Bulb fault	-	Displays when the trailer brake lamp bulb has burned out. Have your vehicle checked by an authorized dealer as soon as possible.
Trailer turn lamp Bulb fault	-	Displays when the trailer turn lamp bulb has burned out. Have your vehicle checked by an authorized dealer as soon as possible.

Information Displays

Maintenance

Message	Message Indicator	Action
Brake fluid level low Service now	Red	Indicates the brake fluid level is low and the brake system should be inspected immediately. See Brake Fluid Check (page 194).
Washer fluid level low	-	Displays when the washer fluid is low and needs to be refilled. See Washer Fluid Check (page 195).
Check fuel fill inlet	-	Displays when the fuel fill inlet was not properly closed. See Refueling (page 120).
Oil change required	-	Displays when the engine oil life is depleted and requires a change. See Engine Oil Check (page 193).

Occupant Protection

Message	Indicator	Action
Service Beltminder	-	Displays when the system has detected a condition that requires service. Have your vehicle checked by an authorized dealer as soon as possible.

Parking Aid

Message	Message Indicator	Action
Parking aid fault Service required	Amber	Displays when the system has detected a condition that requires service. Have your vehicle checked by an authorized dealer. See Parking Aid (page 138).
Rear park aid disabled Trailer attached	-	Displays when a trailer is attached.

Information Displays

Parking Brake

Message	Message Indicator	Action
Park brake applied	Red	Displays when the parking brake is set, the engine is running and your vehicle is moving more than 3 mph (5 km/h). If the warning stays on after the parking brake is released, have your vehicle checked by an authorized dealer as soon as possible.
Park brake applied	Amber	See Parking Brake (page 135).
Park brake fault Service now	Amber	Displays when the system has detected a condition that requires service. Have your vehicle checked by an authorized dealer as soon as possible.

Power Steering

Message	Message Indicator	Action
Steering loss Stop safely	Red	The power steering system is not working. Stop your vehicle in a safe place. Have your vehicle checked by an authorized dealer as soon as possible.
Steering assist fault Service required	Amber	The power steering system is not working. Stop your vehicle in a safe place. Have your vehicle checked by an authorized dealer as soon as possible.
Steering fault Service now	Amber	The power steering system has detected a condition within the power steering system or passive entry or passive start system requires service. Have your vehicle checked by an authorized dealer as soon as possible.

Information Displays

Start-Stop

Message	Message indicator	Action
Auto Start/Stop Switch ignition off	red	Switch the ignition off before leaving your vehicle if the system has shut down the engine. See Auto-Start-Stop (page 115).
Auto Start/Stop fault Service required	amber	Have your vehicle checked by an authorized dealer.
Auto Start/Stop Press a pedal to start engine	-	The engine needs to be restarted, press the clutch pedal to start. See Auto-Start-Stop (page 115).
Auto Start/Stop Select neutral	-	Select neutral for the system to restart the engine. See Auto-Start-Stop (page 115).
Auto Start/Stop Manual Start required	-	The system is not functioning. A manual restart is required.

Starting System

Message	Message Indicator	Action
Drive to clean exhaust filter See manual	Amber	See Diesel Particulate Filter (page 113).
Cleaning exhaust filter	-	See Diesel Particulate Filter (page 113).
Exhaust filter cleaning complete	-	See Diesel Particulate Filter (page 113).
Engine preheating	-	See Starting a Diesel Engine (page 113).
Press brake to start	-	Displays when starting your vehicle as a reminder to apply the brake.
Press clutch to start	-	Displays when starting your vehicle as a reminder to apply the clutch.
Press brake and clutch to start	-	Displays when starting your vehicle as a reminder to apply the brake and clutch.
Cranking time exceeded	-	Displays when your vehicle fails to start.

Information Displays

Towing

Message	Message Indicator	Action
Trailer sway Reduce speed	Red	See Trailer Sway Control (page 166).

Transmission and Four-Wheel Drive

Message	Message Indicator	Action
Transmission too hot Press brake	Red	The transmission is overheating and needs to cool. Reduce your speed gradually and stop your vehicle as soon as it is safe to do so.
Transmission too hot Press brake	Amber	The transmission is overheating and needs to cool. Reduce your speed gradually and stop your vehicle as soon as it is safe to do so.
Transmission overtemperature Stop safely	Amber	The transmission is overheating and needs to cool. Reduce your speed gradually and stop your vehicle as soon as it is safe to do so.
Transmission overheating Stop safely	Amber	The transmission is overheating and needs to cool. Reduce your speed gradually and stop your vehicle as soon as it is safe to do so.
Transmission Service required	Amber	Have your vehicle checked by an authorized dealer as soon as possible.
4WD fault Service required	Amber	The system is not functioning correctly and defaulted to front-wheel drive. Have your vehicle checked by an authorized dealer as soon as possible. See Using Four-Wheel Drive (page 129).
4WD Off	Amber	Displays when the system disables automatically and enters front-wheel drive only mode to protect driveline components. See Using Four-Wheel Drive (page 129).
4WD Temporarily disabled	Amber	The system has overheated and defaulted to front-wheel drive. See Using Four-Wheel Drive (page 129).

Information Displays

Message	Message Indicator	Action
4WD restored	-	Displays when system operation has been restored. See Using Four-Wheel Drive (page 129).
Transmission not in Park Select P	-	Displays as a reminder to move the transmission selector lever to park.
Transmission Hot Stop or Speed Up	-	Transmission is getting hot. Stop to let it cool or speed up.
Transmission Hot Wait ...	-	Transmission is hot. Wait as needed to let it cool.
Transmission too hot Press brake	-	Transmission is getting hot. Stop to let it cool down.
Transmission warming up Please wait	-	At low outside temperatures, after starting the engine, it may take the transmission several seconds to engage reverse or drive. Keep the brake pedal depressed until these messages disappear from the display.
Transmission limited function See manual	-	Some gears may not be available. Have your vehicle checked by an authorized dealer as soon as possible. See Automatic Transmission (page 124).
Press brake to unlock gearshift lever	-	Displays to request the operator to apply the brake as needed by the transmission.
Gearshift lever unlocked	-	Displays when the transmission shift lever is unlocked and free to select gears.

Traction Control

Message	Message Indicator	Action
Traction control off	-	Displays when the traction control system has been switched off. See Using Traction Control (page 136).

Climate Control

PRINCIPLE OF OPERATION

Outside Air

Keep the air intakes in front of the windshield free from obstruction (such as snow or leaves) to allow the climate control system to function effectively.

Recirculated Air

WARNING



Prolonged use of recirculated air may cause the windows to mist up. If the windows mist up, follow the settings for demisting the windshield.

The air currently in the passenger compartment recirculates. Outside air does not enter your vehicle.

Heating

Heating performance depends on the temperature of the engine coolant.

General Information on Controlling the Interior Climate

Fully close all the windows.

Warming the Interior

Direct the air toward your feet. In cold or humid weather conditions, direct some of the air toward the windshield and the door windows.

Cooling the Interior

Direct the air toward your face.

Air Conditioning


The system directs air through the evaporator for cooling. The evaporator extracts humidity from the air to help keep the windows free of mist. The system directs the resulting condensation to the outside of your vehicle, which may cause a small pool to form under your vehicle. This is normal.

Note: The air conditioning operates only when the temperature is above 39°F (4°C).

Note: When you use air conditioning, your vehicle uses more fuel.

AIR VENTS

Center

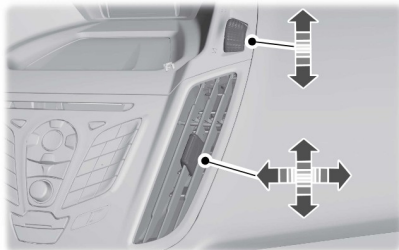


E152449



E159050


Climate Control

Side

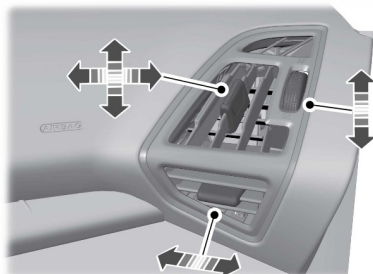


E152450

Center Console

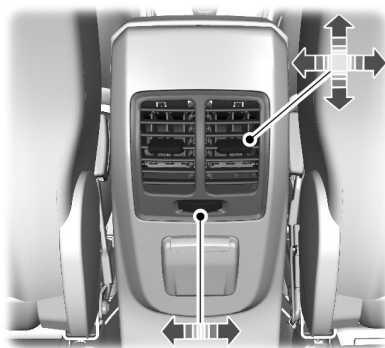

E159049

MANUAL CLIMATE CONTROL

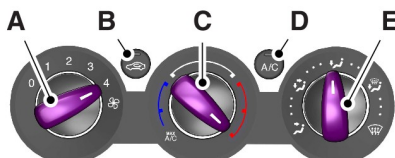


E189389

- A **Fan speed control:** Adjust the volume of air circulated in the vehicle.
- B **Recirculated air:** Press the button to switch between outside air and recirculated air. The air currently in the passenger compartment recirculates. This can reduce the time needed to cool the interior and reduce unwanted odors from entering your vehicle.
- C **Temperature control:** Controls the temperature of the air circulated in your vehicle.
- D **A/C:** Press the button to switch the air conditioning on or off. Use air conditioning with recirculated air to improve cooling performance and efficiency.
- E **Air distribution control:** Adjust the control to turn airflow from the windshield, instrument panel, or footwell vents on or off.

Climate Control

AUTOMATIC CLIMATE CONTROL

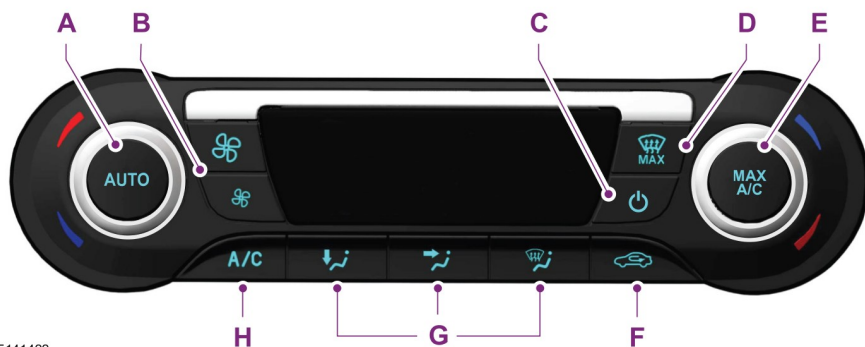


E141422

- A **AUTO:** Press the button to select automatic operation. The system automatically controls the temperature, amount and distribution of the airflow to reach and maintain your previously selected temperature.
- B **Fan speed:** Controls the volume of air circulated in your vehicle. Press the buttons to select the desired fan speed. The setting is shown in the display.
- C **On and off button:** Press the button to switch the system on and off.
- D **MAX Defrost:** Press the button to distribute outside air through the windshield air vents. Air conditioning is automatically selected. The fan is set to the highest speed and the temperature to HI. When the air distribution is set in this position you are unable to select recirculated air or manually adjust the temperature control. Press the **AUTO** button to return to auto mode.
- E **MAX A/C:** Press the button to distribute maximum air conditioning through the instrument panel air vents. This mode is more economical and efficient than normal air conditioning.
- F **Recirculated air:** Press the button to switch between outside air and recirculated air. The air currently in the passenger compartment recirculates. This can reduce the time needed to cool the interior and reduce unwanted odors from entering your vehicle.
- G **Defrost:** Press the button to distribute air through the windshield air vents. You can also use this setting to defog and clear the windshield of a thin covering of ice.
- H **Instrument panel:** Press the button to distribute air through the instrument panel air vents.

Climate Control

- I **Footwell:** Press the button to distribute air through the footwell air vents.
- J **Air conditioning:** Press the button to switch the air conditioning on or off. Air conditioning cools your vehicle using outside air. To improve air conditioning when starting your vehicle, drive with the windows slightly open for two to three minutes.

Temperature Control

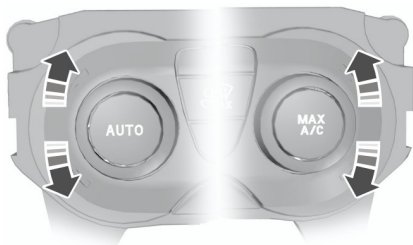

E133115

You can set the temperature between 60°F (15.5°C) and 85°F (29.5°C). In position LO, the system switches to permanent cooling. In position HI, the system switches to permanent heating.

Note: *If you select either position LO or HI, the system does not regulate a stable temperature.*

Mono Mode

In this mode, the temperature settings for both the driver side and passenger side are linked. If you adjust the setting using the rotary control on the driver side, the system adjusts the temperature to the same setting on the passenger side.

Switching Mono Mode Off

Select a temperature for the passenger side using the rotary control on the passenger side. Mono mode automatically switches off. The temperature on the driver side remains unchanged. You can now adjust the driver side and passenger side temperatures independently. The temperature settings for each side are shown in the display.

Switching Mono Mode Back On

Press and hold the **AUTO** button. The passenger side temperature is adjusted to the driver side temperature setting.

HINTS ON CONTROLLING THE INTERIOR CLIMATE

General Hints

Note: *Prolonged use of recirculated air may cause the windows to fog up.*

Note: *A small amount of air may be felt from the footwell air vents regardless of the air distribution setting.*

Note: *To reduce humidity build-up inside your vehicle, do not drive with the system switched off or with recirculated air always switched on.*

Note: *Do not place objects under the front seats as this may interfere with the airflow to the rear seats.*

Note: *Remove any snow, ice or leaves from the air intake area at the base of the windshield.*

Climate Control

Manual Climate Control

Note: To reduce fogging of the windshield during humid weather, adjust the air distribution control to the windshield air vents position. Increase the temperature and fan speed to improve clearing, if required.

Automatic Climate Control

Note: Do not adjust the settings when your vehicle interior is extremely hot or cold. The system automatically adjusts to the previously stored settings. For the system to function efficiently, the instrument panel and side air vents should be fully open.

Note: At low ambient temperatures with AUTO selected, the air stream is directed toward the windshield and side windows for as long as the engine remains cold.

Note: When the system is switched off, outside air is prevented from entering your vehicle.

Note: When the system is in AUTO mode, and the interior and exterior temperatures are high, the system automatically selects recirculated air to maximize cooling of the interior. When the selected air temperature is reached, the system automatically selects outside air.

Note: When you select windshield defrosting and defogging, the instrument panel and footwell level functions automatically switch off and air conditioning switches on. Outside air flows into your vehicle.

Heating the Interior Quickly

	Vehicle With Manual Climate Control	Vehicle With Automatic Climate Control
1	Adjust the fan speed to the highest speed setting.	Press the high fan speed button control.
2	Adjust the temperature control to the highest setting.	Adjust the temperature control to the highest setting.
3	Adjust the air distribution control to the footwell air vents position.	Press the footwell button to distribute air to the footwell air vents.

Climate Control

Recommended Settings for Heating

	Vehicle With Manual Climate Control	Vehicle With Automatic Climate Control
1	Adjust the fan speed to the second speed setting.	Press the slow fan speed button.
2	Adjust the temperature control to the midway point of the hot settings.	Adjust the temperature control to the midway point of the hot settings.
3	Adjust the air distribution control to the footwell and windshield air vents position.	Press the footwell and windshield air distribution buttons.
4		Close the instrument panel air vents. Open the side air vents and direct them toward the side windows.

Cooling the Interior Quickly

	Vehicle With Manual Climate Control	Vehicle With Automatic Climate Control
1	Adjust the fan speed to the highest speed setting.	Press the AUTO button.
2	Adjust the temperature control to the MAX A/C position.	Adjust the temperature control to the desired setting.
3	Adjust the air distribution control to the instrument panel air vents position.	

Recommended Settings for Cooling

	Vehicle With Manual Climate Control	Vehicle With Automatic Climate Control
1	Adjust the fan speed to the second speed setting.	Press the slow fan speed button.
2	Adjust the temperature control to the midway point of the cold settings.	Adjust the temperature control to the midway point of the cold settings.
3	Adjust the air distribution control to the instrument panel air vents position.	Press the instrument panel vent button to distribute air to the instrument panel air vents.

Climate Control

Vehicle Stationary for Extended Periods During Extreme High Ambient Temperatures

	Vehicle With Manual Climate Control	Vehicle With Automatic Climate Control
1	Apply the parking brake.	Apply the parking brake.
2	Move the transmission selector lever to position P.	Move the transmission selector lever to position P.
3	Adjust the temperature control to the MAX A/C position.	Press the MAX A/C button.
4	Adjust the fan speed to the lowest speed setting.	

Side Window Defogging in Cold Weather

	Vehicle With Manual Climate Control	Vehicle With Automatic Climate Control
1	Adjust the air distribution control to the instrument panel and footwell air vents positions.	Press the windshield defrosting and defogging button.
2	Press the A/C button.	Adjust the temperature control to the desired setting.
3	Adjust the temperature control to the desired setting.	
4	Adjust the fan speed to the highest setting.	
5	Direct the instrument panel side air vents toward the side windows.	
6	Close the instrument panel vents.	

Climate Control

Maximum Cooling Performance in Instrument Panel or Instrument Panel and Footwell Positions

1. Adjust the temperature control to the lowest setting.
2. Press the A/C and recirculated air buttons.
3. Adjust the fan speed to the highest setting initially and then adjust it to suit the desired comfort level.

HEATED WINDOWS AND MIRRORS

Note: Make sure the engine is running before operating the heated windows.

Heated Windshield



Press the button to clear the window of thin ice and fog.

Heated Rear Window



Press the button to clear the window of thin ice and fog. Press the button to switch the system off. The heated rear window will automatically turn off after a short period of time.

Note: Do not use razor blades or other sharp objects to clean the inside of the rear window or to remove decals from the inside of the rear window. This may cause damage to the heated grid lines and will not be covered by your warranty.

Heated Exterior Mirror (If Equipped)

Note: Do not remove ice from the mirrors with a scraper or attempt to readjust the mirror glass if it is frozen in place. These actions could cause damage to the glass and mirrors.

Note: Do not clean the housing or glass of any mirror with harsh abrasives, fuel or other petroleum-based cleaning products.

Both mirrors are heated to remove ice, mist and fog when the heated rear window is switched on.

AUXILIARY HEATER

Fuel Operated Parking Heater

WARNING



Do not use the fuel operated parking heater at fuel filling stations or near sources of combustible vapors, dust or in enclosed spaces. This could result in serious personal injury or death.

The system warms the engine and the vehicle interior, it uses fuel from the vehicle fuel tank. The system will only operate when your vehicle is stationary with the engine switched off.

Used correctly the system will:

- Warm the engine and the vehicle interior.
- Keep the windows clear of ice in the event of frost and prevent condensation.
- Avoid cold starts to assist the engine to reach operating temperature sooner.

Following a heating cycle, if you do not start the engine the system will not turn on the next programmed heating cycle.

Climate Control

Following a heating cycle we recommend that you drive your vehicle for at least the same period of time as the heating cycle. This prevents the vehicle battery from running out of charge.

We recommend you switch the system on for approximately 10 minutes every month to prevent the water pump or heater motor seizing.

The system will only operate if there is a minimum of 7.5 liters (1.6 gallons) of fuel in the vehicle fuel tank and the outside air temperature is below 59°F (15°C). The system will not operate if the battery charge level is low.

Note: When the system is operating, exhaust fumes will come from under your vehicle. This is normal.

Note: On vehicles with manual climate control, heating the vehicle interior will depend on the heater control settings. See **Climate Control** (page 88).

Programming the Fuel Operated Parking Heater

Use the information display controls on the steering wheel. See **Information Displays** (page 69).

Note: The time and date on your vehicle's clock must be set correctly. See **Clock** (page 75).

Note: You must program the time at least 70 minutes before the time you wish to set.

Note: The programmed time is when you want your vehicle to be warm and ready to drive, not when the heater turns on.

To program the fuel operated parking heater, scroll to:

Message	Action and Description
Settings	Press the OK button.
Convenience	Press the OK button.
Park heater	Press the OK button.
Select one of the following:	
Time 1	Allows you to program a heating cycle for each day of the week. These times will remain stored and the system will warm up your vehicle at the programmed times.
Time 2	Allows you to program a second heating cycle for each day of the week. These times will remain stored and the system will warm up your vehicle at the programmed times. Select to set a second heating cycle, for example different times on different days or twice on the same day.
Once	Allows you to program one heating cycle for a specific day.
Heat now	Switches the system on immediately.

Climate Control

Programming the Time Functions

Set the time you want your vehicle to be warm and ready to drive. Use the information display controls on the steering wheel. See **Information Displays** (page 69).

1. Select the desired days you want the system to warm up your vehicle. Highlight each desired day and press the **OK** button.
2. Highlight the time at the top of the menu and press the **OK** button. The hours will flash.
3. Set the hours using the up and down arrow buttons.
4. Press the right arrow button. The minutes will flash. Set the minutes using the up and down arrow buttons. Press the **OK** button.

Programming the Once Function

Selecting this function allows you to program one heating cycle for one specific day.

Set the time you want your vehicle to be warm and ready to drive. Use the information display controls on the steering wheel. See **Information Displays** (page 69).

1. Highlight the time at the top of the menu and press the **OK** button. The hours start to flash.
2. Set the hours using the up and down arrow buttons.
3. Press the right arrow button. Set the minutes using the up and down arrow buttons. Press the **OK** button.

Switching Programmed Functions Off

Use the information display controls on the steering wheel. See **Information Displays** (page 69).

To switch the programmed functions off, scroll to:

Message	Action and Description
Settings	Press the OK button.
Convenience	Press the OK button.
Park heater	Press the OK button.
Select one of the following:	
Time 1	Uncheck the active programmed heating cycles as required.
Time 2	Uncheck the active programmed heating cycles as required.
Once	Uncheck the active programmed heating cycles as required.

Climate Control

Switching the Heat Now Function On

WARNING



Do not use the fuel operated parking heater at fuel filling stations or near sources of combustible vapors, dust or in enclosed spaces. This could result in serious personal injury or death.

Selecting this function allows you to switch the system on immediately.

Use the information display controls on the steering wheel. See **Information Displays** (page 69).

To switch the heat now function on, scroll to:

Message	Action and Description
Settings	Press the OK button.
Convenience	Press the OK button.
Park heater	Press the OK button.
Heat now	Press the OK button. An X appears in the box when the heater is switched on. To switch the heater off, uncheck the option.

Switching the Heat Now Function On and Off Using the Remote Control

Selecting this function allows you to switch the system on immediately using the remote control.

Note: *The vehicle does not need to be unlocked.*

1. Press the **ON** button on the remote control to switch the system on.
2. Press the **OFF** button on the remote control to switch the system off.

Fuel Operated Heater

WARNING



Do not use the fuel operated parking heater at fuel filling stations or near sources of combustible vapors, dust or in enclosed spaces. This could result in serious personal injury or death.

The heater operates by warming the engine cooling system, it uses fuel from the vehicle fuel tank. The system will only operate when your vehicle is stationary with the engine switched off.

The system will only operate if there is a minimum of 7.5 liters (1.6 gallons) of fuel in the vehicle fuel tank. The system will not operate if the battery charge level is low.

The system automatically turns on and off depending on the engine coolant temperature when the outside air temperature is below 37°F (3°C), unless you have switched it off.

Note: *The default setting is on.*

Note: *When the system is operating, exhaust fumes will come from under your vehicle. This is normal.*

Note: *On vehicles with manual climate control, heating the vehicle interior will depend on the heater control settings. See **Climate Control** (page 88).*

Climate Control

Use the information display controls on the steering wheel. See **Information Displays** (page 69).


To switch the auxiliary heater on and off, scroll to:


Message	Action and Description
Settings	Press the OK button.
Convenience	Press the OK button.
Aux heater	Press the OK button. An X appears in the box when the system is switched on.


Seats

SITTING IN THE CORRECT POSITION

WARNINGS

 Do not recline the seat backrest too far as this can cause the occupant to slide under the safety belt, resulting in serious injury in the event of a crash.

 Sitting improperly, out of position or with the seat backrest reclined too far, can result in serious injury or death in the event of a crash. Always sit upright against your seat backrest, with your feet on the floor.


 Do not place objects higher than the seat backrest to reduce the risk of serious injury in the event of a crash or during heavy braking.


- Adjust the head restraint so that the top of it is level with the top of your head and as far forward as possible. Make sure that you remain comfortable.
- Keep sufficient distance between yourself and the steering wheel. We recommend a minimum of 10 inches (25 centimeters) between your breastbone and the airbag cover.
- Hold the steering wheel with your arms slightly bent.
- Bend your legs slightly so that you can press the pedals fully.
- Position the shoulder strap of the safety belt over the center of your shoulder and position the lap strap tightly across your hips.


Make sure that your driving position is comfortable and that you can maintain full control of your vehicle.


HEAD RESTRAINTS

WARNINGS

 Fully adjust the head restraint before you sit in or operate your vehicle. This will help minimize the risk of neck injury in the event of a collision. Do not adjust the head restraint when your vehicle is moving.

 The head restraint is a safety device. Whenever possible it should be installed and properly adjusted when the seat is occupied.

 Install the head restraint properly to help minimize the risk of neck injury in the event of a collision.

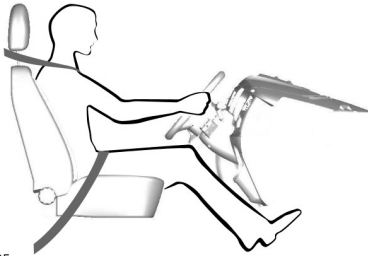

E68595


When you use them properly, the seat, head restraint, safety belt and airbags will provide optimum protection in the event of a crash.

We recommend that you follow these guidelines:

- Sit in an upright position with the base of your spine as far back as possible.
- Do not recline the seat backrest more than 30 degrees.


Seats

Front seat head restraint

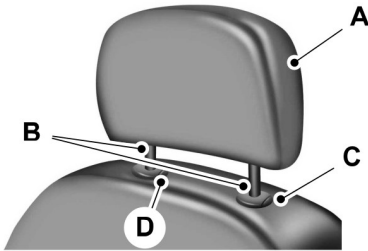

E138642

Rear head restraints

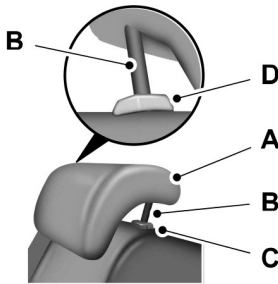

E138645

The head restraints consist of:

- A an energy absorbing head restraint
- B two steel stems
- C guide sleeve adjust and unlock button
- D guide sleeve unlock and remove button

Note: Adjust the seat back to an upright driving position before adjusting the head restraint. Adjust the head restraint so that the top of it is level with the top of your head and as far forward as possible. Make sure that you remain comfortable. If you are extremely tall, adjust the head restraint to its highest position.

Adjusting the Head Restraint

Raising the Head Restraint

Pull the head restraint up.

Lowering the Head Restraint

1. Press and hold button C.
2. Push the head restraint down.

Removing the Head Restraint

1. Pull the head restraint up until it reaches its highest position.
2. Press and hold buttons C and D.
3. Pull the head restraint up.

Installing the Head Restraint

Align the steel stems into the guide sleeves and push the head restraint down until it locks.

Tilting the Head Restraint

The front head restraints may have a tilting feature for extra comfort. To tilt the head restraint, do the following:



E144727

1. Adjust the seat back to an upright driving or riding position.
2. Pivot the head restraint forward toward your head to the desired position.

Seats

After the head restraint reaches the forward-most tilt position, pivot it forward again to release it to the rearward, un-tilted position.

MANUAL SEATS

WARNING



Do not adjust the driver's seat or seatback when your vehicle is moving.

Moving the Seat Backward and Forward



E130249

WARNING




Rock the seat backward and forward after releasing the lever to make sure that it is fully engaged.

Adjusting the Lumbar Support




E152451

Adjusting the Height of the Driver's Seat

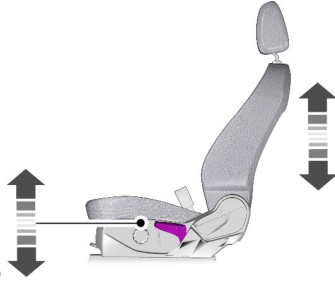

E70730


Recline Adjustment

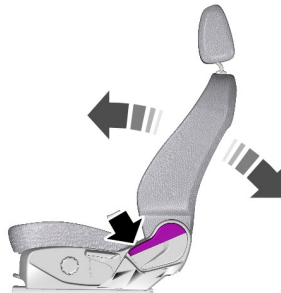

E138646



Seats

WARNING


 Do not place cargo or any objects behind the seatback before returning it to the original position. Pull on the seatback to make sure that it has fully latched after returning the seatback to its original position. An unlatched seat may become dangerous if you stop suddenly or have a collision.

POWER SEATS

WARNINGS

-  Do not adjust the driver's seat or seatback when your vehicle is moving. This could result in loss of vehicle control, serious personal injury or death.
-  Do not place cargo or any objects behind the seatback before returning it to the original position.

10-Way

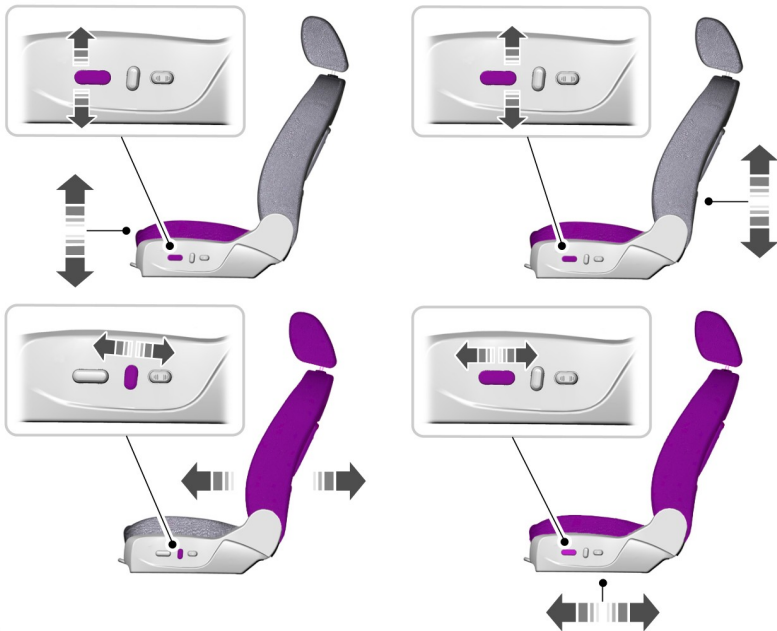

E138647

Seats

Power Lumbar



E138648

REAR SEATS

Folding the Seatback

WARNING



When folding the seatbacks down, take care not to get your fingers caught between the seatback and seat frame.



E159654

With the seat empty, pull the lever up to fold the seatback forward.

Note: Lower the head restraints. See **Head Restraints** (page 100).

Unfolding the Seatback

WARNINGS



When folding the seatbacks up, make sure that the safety belts are visible to an occupant and not caught behind the seat.



Make sure that the seats and the seatbacks are secure and fully engaged in their catches.

Recline Adjustment

With the seat occupied, pull the lever up to recline the seat backward.

HEATED SEATS (If Equipped)

WARNING



People who are unable to feel pain to their skin because of advanced age, chronic illness, diabetes, spinal cord injury, medication, alcohol use, exhaustion or other physical conditions, must exercise care when using the heated seat. The heated seat may cause burns even at low temperatures, especially if used for long periods of time. Do not place anything on the seat that insulates against heat, such as a blanket or cushion. This may cause the heated seat to overheat. Do not puncture the seat with pins, needles or other pointed objects. This may damage the heating element which may cause the heated seat to overheat. An overheated seat may cause serious personal injury.

Seats

Do not do the following:

- Place heavy objects on the seat.
- Operate the heated seat if water or any other liquid is spilled on the seat. Allow the seat to dry thoroughly.
- Operate the heated seats unless the engine is running. Doing so can cause the battery to lose charge.



E138653

Adjust the control to the desired heat setting.

REAR SEAT ARMREST (If Equipped)



E138656

Fold the armrest down to use the armrest and cupholder.

Auxiliary Power Points

12 Volt DC Power Point

WARNING



Do not plug optional electrical accessories into the cigar lighter socket. Incorrect use of the lighter can cause damage not covered by your warranty, and can result in fire or serious injury.

Note: Do not insert objects other than an accessory plug into the power point. This will damage the outlet and blow the fuse.

Note: Do not hang any type of accessory or accessory bracket from the plug.

Note: Do not use the power point over the vehicle capacity of 12 volts DC 180 watts or a fuse may blow.

Note: Do not use the power point for operating a cigar lighter element.

Note: Incorrect use of the power point can cause damage not covered by your warranty.

Note: Always keep the power point caps closed when not in use.

Note: The 12 volt power point remains on after you switch off the ignition. Leaving devices plugged in for extended periods of time could result in a dead battery.

Run the engine for full capacity use of the power point. To prevent the battery from running out of charge:

- Do not use the power point longer than necessary when the engine is not running.
- Do not leave devices plugged in overnight or when your vehicle is parked for extended periods.

Location

Power points may be found:

- On the center console.
- On the rear of the center console.
- In the luggage compartment.

AC Power Point (If Equipped)


WARNING



Do not keep electrical devices plugged in the power point whenever the device is not in use. Do not use any extension cord with the power point, since it will defeat the safety protection design. Doing so may cause the power point to overload due to powering multiple devices that can reach beyond the 150 watt load limit and could result in fire or serious injury.

Note: The power point will turn off when the ignition is switched off or the battery voltage drops below 11 volts.

Note: Depending on the country for which your vehicle was originally built, the voltage supply will be either 110 volts or 230 volts.

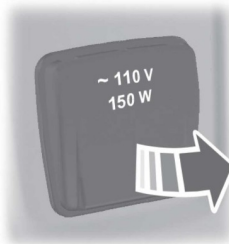

E143941

The power point is used for powering electrical devices that require up to 150 watt. It is located on the rear of the center console.

Auxiliary Power Points

When the indicator light, located on the power point, is:

- On — power point is working, ignition is on and a device is plugged in.
- Off — power point is off, ignition is off or no device is plugged in.
- Flashing — power point is in fault mode.

The power outlet temporarily turns off power when in fault mode if the device exceeds the 150 watt limit. Unplug your device and switch the ignition off. Switch the ignition back on, but do not plug your device back in. Let the system cool off and switch the ignition off to reset the fault mode. Switch the ignition back on and make sure the indicator light remains on.

The power point is not designed for electric devices such as:

- Cathode ray tube type televisions.
- Motor loads, such as vacuum cleaners, electric saws and other electric power tools, compressor-driven refrigerators, etc.
- Measuring devices, which process precise data, such as medical equipment, measuring equipment, etc.
- Other appliances requiring an extremely stable power supply: microcomputer-controlled electric blankets, touch sensor lamps, etc.

Storage Compartments

CUP HOLDERS


Note: *Stow items in the cupholder carefully as items may become loose during hard braking, acceleration or crashes, including hot drinks which may spill.*

WARNING



Use only soft cups in the cup holders. Hard objects can injure you in a crash.

OVERHEAD CONSOLE

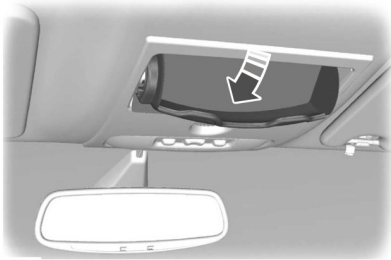

E75193

Press near the rear edge of the door to open it.

FOLDING TRAY

WARNING



Do not use the trays when your vehicle is moving. Make sure that you secure the trays in the lowered position before setting off.





E72630


Starting and Stopping the Engine


GENERAL INFORMATION

WARNINGS

 Extended idling at high engine speeds can produce very high temperatures in the engine and exhaust system, creating the risk of fire or other damage.

 Do not park, idle or drive your vehicle on dry grass or other dry ground cover. The emission system heats up the engine compartment and exhaust system, creating the risk of fire.

 Do not start the engine in a closed garage or in other enclosed areas. Exhaust fumes can be toxic. Always open the garage door before you start the engine.

 If you smell exhaust fumes inside your vehicle, have your vehicle checked by an authorized dealer immediately. Do not drive your vehicle if you smell exhaust fumes.

If you disconnect the battery, your vehicle may exhibit some unusual driving characteristics for approximately 5 miles (8 kilometers) after you reconnect it. This is because the engine management system must realign itself with the engine. You can disregard any unusual driving characteristics during this period.

The powertrain control system meets all Canadian interference-causing equipment standard requirements regulating the impulse electrical field or radio noise.

When you start the engine, avoid pressing the accelerator pedal before and during operation. Only use the accelerator pedal when you have difficulty starting the engine.

IGNITION SWITCH



E72128

0 (off) - The ignition is off.

Note: When you switch the ignition off and leave your vehicle, do not leave your key in the ignition. This could cause your vehicle battery to lose charge.

I (accessory) - Allows the electrical accessories such as the radio to operate while the engine is not running.


Note: Do not leave the ignition key in this position for too long to avoid your vehicle battery losing charge.

II (on) - All electrical circuits operational. Warning lamps and indicators are illuminated.

III (start) - cranks the engine. Release the key as soon as the engine starts.

KEYLESS STARTING

WARNING

 Always check that the steering wheel lock is deactivated before attempting to move your vehicle. Failure to deactivate the steering wheel lock could result in a crash.

Note: The system may not function if the remote control is close to metal objects or electronic devices such as cell phones.

Starting and Stopping the Engine

Note: The ignition will automatically switch off if your vehicle is left unattended. This is to prevent the vehicle battery from losing charge.

Note: A valid passive key must be located inside your vehicle to switch the ignition on and start the engine.

Switching the Ignition On (Accessory Mode)



E85766

Press the button once without your foot on the brake or clutch pedal. It is located on the instrument panel near the steering wheel. All electrical circuits and accessories are operational and the warning lamps and indicators illuminate.

Press the button again without your foot on the brake or clutch pedal to turn your vehicle off completely.

Starting Your Vehicle

Manual Transmission

1. Fully depress the clutch pedal.
2. Briefly press the button.

Note: Releasing the clutch pedal during engine start will stop the engine cranking and return to ignition on.

Automatic Transmission

1. Move the transmission selector lever to park.
2. Fully depress the brake pedal.

3. Briefly press the button.

Note: Releasing the brake pedal during engine start will stop the engine cranking and return to ignition on.

Diesel Engine


Note: Engine cranking will not commence until the engine glow plug cycle has been completed. This may take several seconds in extremely cold conditions.

Failure to Start

The system does not function if:

- The passive key frequencies are jammed.
- The passive key battery has no charge.

If you are unable to start your vehicle, do the following.

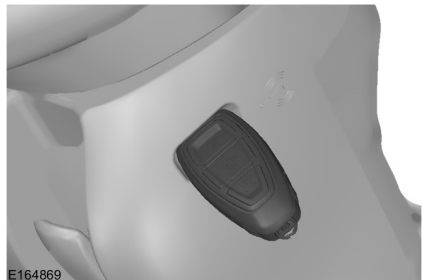

E164869

1. Place the passive key into the slot next to the symbol on the steering column.
2. With the passive key in this position, you can use the button to switch the ignition on and start your vehicle.

Manual Transmission

If the engine does not crank when the clutch pedal has been fully depressed and the button is pressed:

1. Fully depress both the clutch and brake pedals.

Starting and Stopping the Engine

2. Press the button until the engine has started.

Note: *Releasing the clutch pedal during engine start will stop the engine cranking and return to ignition on. A message will be shown in the display.*

Stopping the Engine When Your Vehicle is Stationary

Note: *The ignition, all electrical circuits warning lamps and indicators will be switched off.*

Manual Transmission

Briefly press the button.

Automatic Transmission

1. Move the transmission selector lever to park.
2. Press the button.

Stopping the Engine When Your Vehicle is Moving

WARNING



Stopping the engine when your vehicle is moving will result in a loss of brake and steering assistance. The steering will not lock, but higher effort will be required. When the ignition is switched off some electrical circuits, warning lamps and indicators may also be off.

1. Press and hold the button for a moment, or press it three times within two seconds.
2. Move the transmission selector lever to neutral and use the brakes to bring your vehicle to a safe stop.
3. When your vehicle has stopped, move the transmission selector lever to park and switch the ignition off.

Fast Restart

The fast restart feature allows you to restart your vehicle within 10 seconds of switching it off, even if a valid passive key is not detected.

Within 10 seconds of switching your vehicle off, press the brake pedal and press the button. After 10 seconds have expired, you can no longer start your vehicle if a valid passive key is not detected.

Once your vehicle has started, it remains running until you press the button, even if a valid passive key has not been detected. If you open and close a door while your vehicle is running, the system searches for a valid passive key. You cannot start your vehicle if a valid passive key is not detected within 10 seconds.

Manual Transmission

If the engine does not crank when the clutch pedal has been fully depressed and the button is pressed:

1. Fully depress both the clutch and brake pedals
2. Press the button until the engine has started.

Note: *Releasing the clutch pedal during engine start will stop the engine cranking and return to ignition on. A message will be shown in the display.*

STEERING WHEEL LOCK

WARNING



Always check that the steering is unlocked before attempting to move your vehicle.

Vehicles without Keyless Starting

To lock the steering wheel:

Starting and Stopping the Engine

1. Remove the key from the ignition switch.
2. Rotate the steering wheel slightly to engage the lock.

Vehicles with Keyless Starting

Note: *The steering wheel lock does not engage when the ignition is on or if your vehicle is moving.*

Your vehicle has an electronically controlled steering wheel lock. This operates automatically.

The steering wheel lock engages after a short period after you have parked your vehicle and the passive key is outside of your vehicle.

Unlocking the Steering Wheel

Vehicles with Automatic Transmission

Switch the ignition on or press the brake pedal.

Vehicles with Manual Transmission

Switch the ignition on or press the clutch pedal.

STARTING A GASOLINE ENGINE

Note: *You can only operate the starter for a limited period of time, for example 10 seconds. The number of start attempts is limited to approximately six. If you exceed this limit, the system will not allow you to try again until a period of time has elapsed, for example 30 minutes.*

Cold or Hot Engine

Vehicles with Manual Transmission

Note: *Do not touch the accelerator pedal.*

Note: *Releasing the clutch pedal while the engine is starting will stop the engine cranking and return to ignition on.*

1. Fully depress the clutch pedal.
2. Start the engine.

Vehicles with Automatic Transmission

Note: *Do not touch the accelerator pedal.*

1. Move the transmission selector lever to position **P** or **N**.
2. Start the engine.

All Vehicles

If the engine does not start within 10 seconds, wait for a short period and try again.

If the engine does not start after three attempts, wait 10 seconds and follow the flooded engine procedure.

If you have difficulty starting the engine when the temperature is below -13°F (-25°C), press the accelerator pedal to the mid-way point of its travel and try again.

Flooded Engine

Vehicles with Manual Transmission

1. Fully depress the clutch pedal.
2. Fully depress the accelerator pedal and hold it there.
3. Start the engine.

Vehicles with Automatic Transmission

1. Move the transmission selector lever to position **P** or **N**.
2. Fully depress the accelerator pedal and hold it there.
3. Start the engine.

All Vehicles

If the engine does not start, repeat the cold or hot engine procedure.

Starting and Stopping the Engine

Engine Idle Speed after Starting

The speed at which the engine idles immediately after starting is optimized to minimize vehicle emissions and maximize cabin comfort and fuel economy.

The idle speed will vary depending on certain factors. These include vehicle component and ambient temperatures as well as electrical and climate system demands.

Failure to Start

Vehicles with Manual Transmission

If the engine does not crank when the clutch pedal has been fully depressed and the ignition key is turned to position **III**.

1. Fully depress the clutch and brake pedals.
2. Turn the key to position **III** until the engine has started.

STARTING A DIESEL ENGINE

Cold or Hot Engine

All Vehicles

Note: When the temperature is below 5°F (-15°C), you may need to crank the engine for up to 10 seconds.

Note: You can only operate the starter for a limited period of time.

Note: After a limited number of attempts to start your engine, the system will not allow you to try again until a period of time has elapsed, for example 30 minutes.



Switch the ignition on and wait until the glow plug indicator goes off.

Vehicles With Manual Transmission

Note: Do not touch the accelerator pedal.

Note: Releasing the clutch pedal while the engine is starting will stop the engine cranking and return to ignition on.

1. Fully depress the clutch pedal.
2. Start the engine.

Vehicles With Automatic Transmission

Note: Do not touch the accelerator pedal.

Note: Releasing the brake pedal while the engine is starting will stop the engine cranking and return to ignition on.

1. Move the transmission selector lever to position **P** or **N**.
2. Fully depress the brake pedal.
3. Start the engine.

Failure to Start

Vehicles With Manual Transmission

If the engine does not crank when the clutch pedal has been fully depressed and the ignition key is turned to position **III**.

1. Fully depress the clutch and brake pedals.
2. Turn the key to position **III** until the engine has started.

DIESEL PARTICULATE FILTER

The filter forms part of the emissions reduction system on your vehicle. It filters harmful diesel particulates (soot) from the exhaust gas.

Starting and Stopping the Engine

Regeneration

WARNING



Do not park or idle your vehicle over dry leaves, dry grass or other combustible materials. The regeneration process creates very high exhaust gas temperatures and the exhaust will radiate a considerable amount of heat during and after regeneration and after you have switched the engine off. This is a potential fire hazard.

Note: Avoid running out of fuel.

Note: During regeneration at low speed or engine idle, you may smell a hot metallic odor and could notice a clicking metallic sound. This is due to the high temperatures reached during regeneration and is normal.

Note: Changes in the engine or exhaust sound may be heard during the regeneration process.

Note: After you have switched your engine off the fans may continue to run for a short period of time.

The diesel particulate filter on your vehicle requires periodic regeneration to maintain its correct function. Your vehicle will carry out this process automatically.

If your journeys meet one of the following conditions:

- You drive only short distances.
- You frequently switch the ignition on and off.
- Your journeys contain a high level of acceleration and deceleration.

You must carry out occasional trips with the following conditions to assist the regeneration process:

- Drive your vehicle in more favorable conditions, which you will find at higher vehicle speeds in normal driving, on a main road or freeway for a minimum of 20 minutes. This drive may include short stops that will not affect the regeneration process.
- Avoid prolonged idling and always observe speed limits and road conditions.
- Do not switch the ignition off.
- Select a suitable gear to ideally maintain engine speed between 1500 and 3000 RPM.

SWITCHING OFF THE ENGINE

Vehicles With a Turbocharger

WARNING



Do not switch the engine off when it is running at high speed. If you do, the turbocharger will continue running after the engine oil pressure has dropped to zero. This will lead to premature turbocharger bearing wear.

Release the accelerator pedal. Wait until the engine has reached idle speed and then switch it off.

Unique Driving Characteristics

AUTO-START-STOP

Note: For vehicles with auto-start-stop, the battery requirement is different. It must be replaced by one of exactly the same specification as the original.

The system reduces fuel consumption and CO₂ emissions by shutting down the engine when your vehicle is idling, for example at traffic lights. The engine will automatically restart when you press the clutch pedal or when required by a vehicle system, for example to recharge the battery.

To obtain maximum benefit from the system, move the transmission lever to neutral and release the clutch pedal during any stop of longer than three seconds.

Using Auto-Start-Stop

WARNINGS



The engine may restart automatically if required by the system.



Switch the ignition off before opening the hood or carrying out any maintenance.



Always switch the ignition off before leaving your vehicle, as the system may have shut down the engine but the ignition will still be live.

Note: The system only operates when the engine is warm and the outside temperature is within the operating temperature limits of the system.

Note: If you stall the engine, and then press the clutch pedal within a short period of time, the system will automatically restart the engine.

Note: The auto-start-stop indicator will illuminate green when the engine shuts down. See **Warning Lamps and Indicators** (page 65).



Note: When the auto-start-stop indicator flashes amber, shift into neutral or press the clutch pedal.

Note: If the system detects a malfunction, it will switch off. Have your vehicle checked by an authorized dealer.

Note: When you switch the system off, the switch will illuminate.

Note: The system automatically turns on every time you switch the ignition on. To switch the system off, press the switch in the instrument panel. The system will only be switched off for the current ignition cycle. To turn it on, press the switch again. For item location: See **At a Glance** (page 11).

To Stop the Engine

1. Stop your vehicle.
2. Shift into neutral.
3. Release the clutch pedal.
4. Release the accelerator pedal.

The system may not shut down the engine under certain conditions, for example:

- To maintain the interior climate.
- Low battery voltage.
- The outside temperature is too low or too high.
- The driver door has been opened.
- Low engine operating temperature.
- Low brake system vacuum.
- If a road speed of 3 mph (5 km/h) has not been exceeded.
- The driver safety belt has not been fastened.

To Re-Start the Engine

Note: The transmission must be in neutral. Press the clutch pedal.

Unique Driving Characteristics

The system may automatically restart the engine under certain conditions, for example:

- Low battery voltage.
- To maintain the interior climate.

Fuel and Refueling

SAFETY PRECAUTIONS

WARNINGS



Do not overfill the fuel tank. The pressure in an overfilled tank may cause leakage and lead to fuel spray and fire.



The fuel system may be under pressure. If you hear a hissing sound near the fuel filler door (Easy Fuel capless fuel system), do not refuel until the sound stops. Otherwise, fuel may spray out, which could cause serious personal injury.



Automotive fuels can cause serious injury or death if misused or mishandled.



Flow of fuel through a fuel pump nozzle can produce static electricity. This can cause a fire if you are filling an ungrounded fuel container.



Fuel ethanol and gasoline may contain benzene, which is a cancer-causing agent.



When refueling always shut the engine off and never allow sparks or open flames near the filler neck. Never smoke or use a cell phone while refueling. Fuel vapor is extremely hazardous under certain conditions. Avoid inhaling excess fumes.

Observe the following guidelines when handling automotive fuel:

- Extinguish all smoking materials and any open flames before refueling your vehicle.
- Always turn off the vehicle before refueling.
- Automotive fuels can be harmful or fatal if swallowed. Fuel such as gasoline is highly toxic and if swallowed can cause death or permanent injury. If fuel is swallowed, call a physician immediately, even if no symptoms are immediately apparent. The toxic effects of fuel may not be visible for hours.
- Avoid inhaling fuel vapors. Inhaling too much fuel vapor of any kind can lead to eye and respiratory tract irritation. In severe cases, excessive or prolonged breathing of fuel vapor can cause serious illness and permanent injury.
- Avoid getting fuel liquid in your eyes. If fuel is splashed in the eyes, remove contact lenses (if worn), flush with water for 15 minutes and seek medical attention. Failure to seek proper medical attention could lead to permanent injury.
- Fuels can also be harmful if absorbed through the skin. If fuel is splashed on the skin, clothing or both, promptly remove contaminated clothing and wash skin thoroughly with soap and water. Repeated or prolonged skin contact with fuel liquid or vapor causes skin irritation.
- Be particularly careful if you are taking "Antabuse" or other forms of disulfiram for the treatment of alcoholism. Breathing gasoline vapors, or skin contact could cause an adverse reaction. In sensitive individuals, serious personal injury or sickness may result. If fuel is splashed on the skin, promptly wash skin thoroughly with soap and water. Consult a physician immediately if you experience an adverse reaction.

Fuel and Refueling

FUEL QUALITY - GASOLINE

WARNINGS



Do not mix gasoline with oil, diesel or other liquids. This could cause a chemical reaction.



Do not use leaded gasoline or gasoline with additives containing other metallic compounds (e.g. manganese-based). They could damage the emission system.

Note: We recommend that you use only high quality fuel.

Note: We do not recommend the use of additional additives or other engine treatments for normal vehicle use.

Use minimum 95 octane unleaded gasoline that meets the specification defined by EN 228 or the equivalent national specification.

Your vehicle is suitable for use with ethanol blends up to 10% (E5 and E10).

Long-Term Storage

Most gasoline contains ethanol. We recommend that you fill the fuel tank with fuel that does not contain ethanol if you intend to store your vehicle for more than two months. Alternatively, we recommend that you seek advice from an authorized dealer.

FUEL QUALITY - 2.0L DURATORQ-TDCI (DW) DIESEL

Choosing the Right Fuel



E185351

Use only Regular Diesel with a pump cetane rating of 48 or higher. We recommend using Premium Diesel with a cetane rating of 55 or higher for optimal performance of your vehicle. Premium Diesel is recommended for severe duty usage, for example fully loaded or trailer tow.

The use of diesel with a cetane rating of 47 or lower could lead to engine damage that may not be covered by the vehicle Warranty. Some fuel stations offer fuels posted as Regular Diesel with a cetane rating below 48, particularly in high altitude areas. Fuels with cetane rating below 48 are not recommended.

Do not use any fuel other than those recommended because it could lead to engine damage that may not be covered by the vehicle Warranty.

Note: Use of any fuel other than those recommended can impair the emission control system and cause a loss of vehicle performance.

Do not use:

- Gasoline.
- Fuel with methanol.
- Fuel containing metallic based additives, including manganese-based compounds.

Fuel and Refueling

Do not be concerned if the engine sometimes knocks lightly. However, if it knocks heavily under most driving conditions while you are using fuel with the recommended cetane rating, contact an authorized dealer to prevent any engine damage.

RUNNING OUT OF FUEL


Avoid running out of fuel because this situation may have an adverse effect on powertrain components.


If you have run out of fuel:

- You may need to cycle the ignition from off to on several times after refueling to allow the fuel system to pump the fuel from the tank to the engine. On restarting, cranking time will take a few seconds longer than normal. With keyless ignition, just start the engine. Crank time will be longer than usual.
- Normally, adding 1 gallon (4.6 liters) of fuel is enough to restart the engine. If your vehicle is out of fuel and on a steep grade, more than 1 gallon (4.6 liters) may be required.

Refueling with a Portable Fuel Container

WARNINGS

 Do not insert the nozzle of portable fuel containers or aftermarket funnels into the capless fuel system, they could become stuck. This could damage the fuel system and its seal, and may cause fuel to run onto the ground instead of filling the tank, which could result in serious personal injury.

 Do not try to pry open or push open the capless fuel system with foreign objects. This could damage the fuel system and its seal and cause injury to you or others.

Note: Do not use aftermarket funnels; they will not work with the capless fuel system and can damage it. The included funnel has been specially designed to work safely with your vehicle.

When filling your vehicle's fuel tank from a portable fuel container, use the funnel included with your vehicle.




E157452

1. Locate the plastic funnel inside the foam box in the spare wheel well.
2. Slowly insert the funnel into the capless fuel system.
3. Fill your vehicle with fuel from the portable fuel container.
4. When done, clean the funnel or properly dispose of it. Extra funnels can be purchased from your authorized dealer if you choose to dispose of the funnel.

Fuel and Refueling






CATALYTIC CONVERTER

WARNING

 Do not park or idle your vehicle over dry leaves, dry grass or other combustible materials. The exhaust will radiate a considerable amount of heat during use, and after you have switched the engine off. This is a potential fire hazard.



Driving with a Catalytic Converter

WARNINGS





-  Avoid running out of fuel.
-  Do not crank the engine for long periods.
-  Do not run the engine when a spark plug lead is disconnected.
-  Do not push-start or tow-start your vehicle. Use booster cables. See **Jump Starting the Vehicle** (page 174).
-  Do not switch the ignition off when driving.

REFUELING

WARNINGS

-  Do not attempt to start the engine if you have filled the fuel tank with the incorrect fuel. This could damage the engine. Have your vehicle checked by an authorized dealer immediately.
-  Do not use any kind of flames or heat near the fuel system. The fuel system is under pressure. There is a risk of injury if the fuel system is leaking.

WARNINGS

-  If you use a high pressure spray to wash your vehicle, only spray the fuel filler flap briefly from a distance not less than 8 inches (200 millimeters).
-  We recommend that you wait at least 10 seconds before removing the fuel nozzle to allow any residual fuel to drain into the fuel tank.
-  Stop refueling after the fuel nozzle stops the second time. Additional fuel will fill the expansion space in the fuel tank which could lead to fuel overflowing. Fuel spillage could be hazardous to other road users.
-  Do not remove the fuel nozzle from its fully inserted position during the entire refueling process.


Note: Your vehicle does not have a fuel filler cap.



E135934

1. Press the flap to open it. Open the flap fully until it engages.


Fuel and Refueling

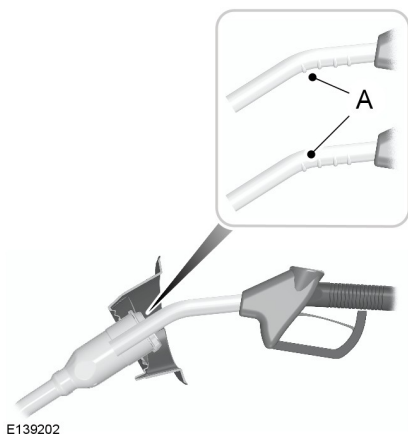

E1139202


Note: When you insert the correct size fuel nozzle, a spring loaded inhibitor will open. This helps to avoid filling up with the incorrect fuel.

2. Insert the fuel nozzle up to and including the first notch on the fuel nozzle A. Keep it resting on the cover of the fuel pipe opening.

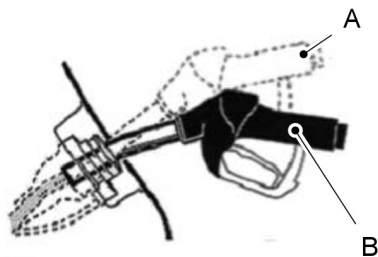


E1139203

3. Hold the fuel nozzle in position B during refueling. Holding the fuel nozzle in position A can affect the flow of fuel and shut off the fuel nozzle before the fuel tank is full.

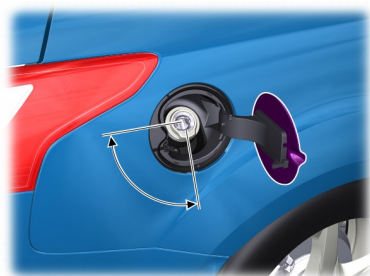

E152137

4. Operate the fuel nozzle within the area shown.

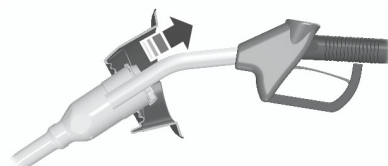

E119081

5. Slightly raise the fuel nozzle to remove it.

FUEL CONSUMPTION

We derive CO₂ and fuel consumption figures in laboratory tests according to Regulation (EC) 715/2007 or CR (EC) 692/2008 and subsequent amendments.

They are intended as a comparison between makes and models of vehicles. They are not intended to represent the real world fuel consumption you may get from your vehicle.

Real world fuel consumption is governed by many factors, for example driving style, high speed driving, stop-start driving, air conditioning usage, the accessories fitted, payload and towing.

Fuel and Refueling

The advertised capacity is the indicated capacity and the empty reserve combined. Indicated capacity is the difference in the amount of fuel in the fuel tank and when the fuel gauge indicates empty. Empty reserve is the amount of fuel in the fuel tank after the fuel gauge indicates empty.

Note: *The amount of fuel in the empty reserve varies and should not be relied upon to increase driving range. When refueling your vehicle after the fuel gauge indicates empty, you might not be able to refuel the full amount of the advertised capacity due to the empty reserve still present in the fuel tank.*

Filling the Fuel Tank

For consistent results when refueling:

- Switch the ignition off.
- Allow no more than two automatic shut-offs when refueling.

Results are most accurate when the refueling method is consistent.

Calculating Fuel Economy

Do not measure fuel economy during the first 1,000 mi (1,600 km) of driving (this is the engine break-in period). A more accurate measurement is obtained after 2,500 mi (4,000 km). Also, fuel expense, frequency of fill ups or fuel gauge readings are not accurate ways to measure fuel economy.

1. Fill the fuel tank completely and record the initial odometer reading.
2. Each time you fill the fuel tank, record the amount of fuel added.
3. After at least three fill ups, fill the fuel tank and record the current odometer reading.
4. Subtract your initial odometer reading from the current odometer reading.
5. Calculate fuel economy by dividing miles traveled by gallons used (For Metric: Multiply liters used by 100, then divide by kilometers traveled).

Keep a record for at least one month and record the type of driving (city or freeway). This provides an accurate estimate of your vehicle's fuel economy under current driving conditions. Additionally, keeping records during summer and winter show how temperature impacts fuel economy. In general, your vehicle will use more fuel in cold temperatures.

Fuel and Refueling

TECHNICAL SPECIFICATIONS

Fuel Consumption Figures


Variant	Urban	Extra-Urban	Combined	CO2 Emissions
	l/100 km (mpg)	l/100 km (mpg)	l/100 km (mpg)	g/km
2.0L Duratorq-TDCi - DW with manual transmission and front-wheel drive	6.3 (44.8)	4.7 (60.1)	5.3 (53.3)	139
2.0L Duratorq-TDCi - DW with manual transmission and all-wheel drive	7.2 (39.2)	5.1 (55.4)	5.9 (47.9)	154
2.0L Duratorq-TDCi - DW with automatic transmission	7.4 (38.2)	5.5 (51.4)	6.2 (45.6)	162
2.5L engine all vehicle configurations	11.2 (25.2)	6.4 (44.1)	8.1 (34.9)	193

Transmission

MANUAL TRANSMISSION

Selecting Reverse Gear

Do not engage reverse gear when your vehicle is moving. This can cause damage to the transmission.

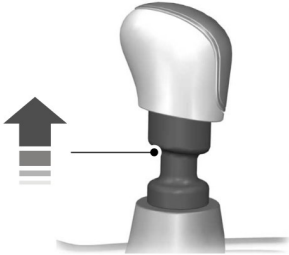


E99067

Raise the collar when you select reverse gear.

AUTOMATIC TRANSMISSION

WARNING

 Always set the parking brake fully and make sure you shift the gearshift lever to park (P). Switch the ignition off and remove the key whenever you leave your vehicle.


Selector Lever Positions



E133124

- P Park
- R Reverse
- N Neutral
- D Drive
- S Sport mode and manual shifting
- + Manual shift up
- Manual shift down

WARNING


 Apply the brakes before shifting the gearshift lever to a forward or reverse gear. Keep the brakes applied until you are ready to move off.

Press the button on the front of the gearshift lever to shift to each position.

The gearshift lever position will be shown in the instrument cluster display.

Park (P)

WARNINGS

 Shift the gearshift lever to park (P) only when your vehicle is stationary.

Transmission

WARNINGS



Apply the parking brake and shift the gearshift lever to park (P) before leaving your vehicle. Make sure that the gearshift lever is latched in position.

In this position, power is not transmitted to the driven wheels and the transmission is locked. You can start the engine with the gearshift lever in this position.

Note: A warning tone sounds if you open the driver door and you have not shifted the gearshift lever to park (P).

Reverse (R)

WARNINGS



Shift the gearshift lever to reverse (R) only when your vehicle is stationary and the engine is at idle speed.



Always come to a complete stop before shifting the gearshift lever out of reverse (R).

Shift the gearshift lever to reverse (R) to allow your vehicle to move backward.

Neutral (N)

In this position, power is not transmitted to the driven wheels but the transmission is not locked. You can start the engine with the gearshift lever in this position.

Drive (D)

Shift the gearshift lever to drive (D) to allow your vehicle to move forward and shift automatically through the forward gears.

The transmission will shift to the appropriate gear for optimum performance based on ambient temperature, road gradient, vehicle load and your input.

Drive (D) mode also provides a kickdown function. See Kickdown.

Note: A shift will occur only when your vehicle speed and the engine speed are appropriate.

Note: You may temporarily override the current gear selected using the + or - buttons.

Sport Mode and Manual Shifting

Sport Mode (S)

Switch on sport mode by shifting the gearshift lever to Sport (S). Sport mode will remain on until either you shift manually up or down the gears using the + or - buttons or shift the gearshift lever to drive (D).

Note: In sport mode the transmission operates as normal but gears are selected more quickly and at higher engine speeds.

Manual Shifting

WARNING



Do not hold the + or - buttons permanently in.

Press the - button to shift down and press the + button to shift up.

Gears may be skipped by pressing the buttons repeatedly at short intervals.

Manual mode also provides a kickdown function. See Kickdown.

Note: The transmission will automatically downshift when the engine speed is too low.

Hints on Driving with an Automatic Transmission

WARNING



Do not idle the engine for long periods of time in drive (D) with the brakes applied.

Transmission

Moving Off

1. Press the brake pedal.
2. Shift the gearshift lever to drive (D), reverse (R) or sport (S).
3. Release the parking brake.
4. Release the brake pedal and press the accelerator pedal.

Stopping

1. Release the accelerator pedal and press the brake pedal.
2. Apply the parking brake.
3. Shift the gearshift lever to neutral (N) or park (P).

Kickdown

Press the accelerator pedal fully with the gearshift lever in the drive (D) position to shift to the next lowest gear for optimum performance. Release the accelerator pedal when you no longer require kickdown.

If Your Vehicle Gets Stuck In Mud or Snow




If your vehicle gets stuck in mud or snow, it may be rocked out by shifting between forward and reverse gears, stopping between shifts in a steady pattern. Press lightly on the accelerator in each gear.

Note: Do not rock your vehicle if the engine is not at normal operating temperature or damage to the transmission may occur.

Note: Do not rock your vehicle for more than a minute or damage to the transmission and tires may occur, or the engine may overheat.


Emergency Park Position Release Lever

WARNINGS

-  Do not drive your vehicle until you verify that the brake lamps are working.
-  This procedure requires you to shift the gearshift lever out of park (P) causing your vehicle to roll. Make sure you fully set the parking brake before attempting to release the gearshift lever.
-  If you release the parking brake and the brake warning lamp remains illuminated, the brakes may not be working correctly. The system has detected a fault that requires service.

In the event of an electrical malfunction or if the vehicle battery has no charge, use the following procedure to shift the gearshift lever from the park (P) position.

1. Apply the parking brake and switch the ignition off.

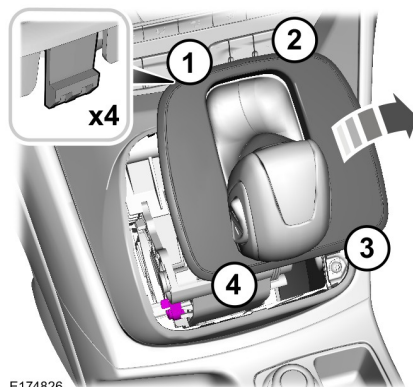

E174826


2. Using a screwdriver, remove the gearshift lever housing cover.

Transmission



E142627

3. Locate the white lever, situated on the left hand side of the gearshift lever.

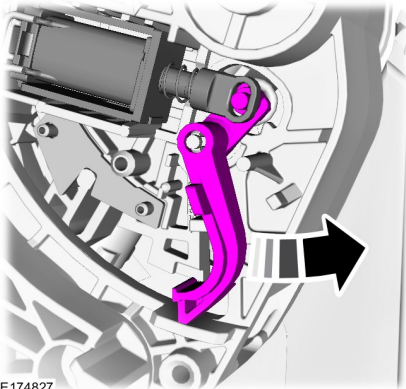





E174827

4. Move the white lever toward the rear of the vehicle and move the gearshift lever out of park (P) and into neutral (N).
5. Replace the gearshift lever housing cover, apply the brake pedal, switch the ignition on and release the parking brake.

Note: See an authorized dealer as soon as possible.

HILL START ASSIST

WARNINGS

-  The system does not replace the parking brake. When you leave your vehicle, always apply the parking brake and move the transmission selector lever into position **P** (Park).
-  You must remain in your vehicle once you have turned the system on.
-  During all times, you are responsible for controlling your vehicle, supervising the system and intervening, if required.
-  If the engine is revved excessively or if a malfunction is detected, the system will turn off.

The system makes it easier to pull away when your vehicle is on a slope without the need to use the parking brake.

When the system is active, your vehicle will remain stationary on the slope for two to three seconds after you release the brake pedal. This allows you time to move your foot from the brake to the accelerator pedal. The brakes are released automatically once the engine has developed sufficient drive to prevent your vehicle from rolling down the slope. This is an advantage when pulling away on a slope, (for example from a car park ramp, traffic lights or when reversing uphill into a parking space).

The system will turn on automatically on any slope which can result in significant vehicle rollback.

Using Hill Start Assist

1. Press the brake pedal to bring your vehicle to a complete standstill. Keep the brake pedal pressed.

Transmission

2. If the sensors detect that your vehicle is on a slope, the system will turn on automatically.
3. When you remove your foot from the brake pedal, your vehicle will remain on the slope without rolling away for approximately two or three seconds. This hold time will automatically be extended if you are in the process of driving off.
4. Drive off in the normal manner. The brakes will be released automatically.

Switching the System On and Off

Note: *You can only switch the system on and off if your vehicle has a manual transmission.*

Note: *The system will remain on or off depending on how it was last set.*

Your vehicle comes with this feature already enabled. If required, you can switch this feature off using the information display. See (page 69).

Four-Wheel Drive (If Equipped)

PRINCIPLE OF OPERATION

This system is a proactive system. It has the ability to anticipate wheel slip and transfer torque to the rear wheels before slip occurs. Even when wheel slip is not present, the system is continuously making adjustments to the torque distribution, in an attempt to improve straight line and cornering behavior, both on and off road.

The system automatically turns on every time you switch the ignition on.

All components of the system are sealed and do not require maintenance.

USING FOUR-WHEEL DRIVE

Note: When a system malfunction is present, a warning message will be displayed in the information display. See **Information Messages** (page 75). This means the system is not functioning correctly and has defaulted to front-wheel drive only. Have your vehicle checked by an authorized dealer.

Note: A message will be displayed in the information display when the system overheats and switches to front-wheel drive. This condition may occur if you operate your vehicle in extreme high load conditions or with excessive wheel slip, (i.e. deep sand). To resume four-wheel drive function as soon as possible, stop your vehicle in a safe location and switch the ignition off. After the system cools and normal four-wheel drive functionality resumes, a message will be displayed for approximately five seconds.

Note: If a warning message appears in the information display when using the spare tire, it should turn off after reinstalling the repaired or replaced road tire and you switch the ignition on.

Note: It is recommended that you reinstall the repaired tire or replace the tire as soon as possible. Major dissimilar tire sizes between the front and rear axles could cause system damage or default the system to front-wheel drive.

The system gives your vehicle some limited off-road capabilities. Operating your vehicle in conditions other than moderate sand, snow, mud or rough roads could subject it to excessive stress and heat which could result in system damage. This will not be covered by your vehicle warranty.



E142669

A graphic will be displayed in the information display to advise you of the power distribution between the front and rear wheels. The more the area is filled the more power is being distributed to that wheel.

Driving in Special Conditions With Four-Wheel Drive

Four-wheel drive vehicles are suitable for driving on sand, snow, mud and rough roads and have operating characteristics that are somewhat different from conventional vehicles, both on and off the freeway.

Note: It may be useful to switch Traction control off. This allows for more wheel spin and engine torque in certain off road conditions or if your vehicle becomes stuck.

Four-Wheel Drive (If Equipped)

When driving at slow speeds off road under high load conditions, use a low gear when possible. Low gear operation will maximize the engine and transmission cooling capability.

Under severe operating conditions, the air conditioning may cycle on and off to prevent the engine from overheating.

Basic Operating Principles

- Drive slower in strong crosswinds which can affect the normal steering characteristics of your vehicle.
- When driving your vehicle on surfaces made slippery by loose sand, water, gravel, snow or ice proceed with care.

If Your Vehicle leaves the Road

If your vehicle leaves the road, reduce your vehicle speed and avoid severe braking. When your vehicle speed has been reduced ease your vehicle back onto the road. Do not turn the steering wheel sharply while returning your vehicle to the road.

It may be safer to stay on the shoulder of the road and slow down gradually before returning to the road. You may lose control if you do not slow down or if you turn the steering wheel too sharply or abruptly.

It may be less risky to strike small objects, such as freeway reflectors, with minor damage to your vehicle rather than attempt a sudden return to the road which could cause your vehicle to slide sideways out of control or roll over. Remember, your safety and the safety of others should be your primary concern.

Emergency Maneuvers

In an unavoidable emergency situation where a sudden sharp turn must be made, remember to avoid over-driving your vehicle (i.e. turn the steering wheel only as rapidly and as far as required to avoid the emergency). Excessive steering can result

in loss of vehicle control. Apply smooth pressure to the accelerator pedal or brake pedal when changes in vehicle speed are required. Avoid abrupt steering, acceleration and braking. This could result in an increased risk of vehicle roll over, loss of vehicle control and personal injury. Use all available road surface to bring your vehicle to a safe direction of travel.

In the event of an emergency stop, avoid skidding the tires and do not attempt any sharp steering wheel movements.

If your vehicle goes from one type of surface to another (i.e. from concrete to gravel) there will be a change in the way your vehicle responds to a maneuver (i.e. steering, acceleration or braking).

Sand

When driving over sand, try to keep all four wheels on the most solid area of the trail. Avoid reducing the tire pressures but shift to a lower gear and drive steadily through the terrain. Apply the accelerator slowly and avoid excessive wheel slip.

Do not drive your vehicle in deep sand for an extended period of time. This will cause the system to overheat. A message will be displayed in the information display. See **Information Messages** (page 75).

To resume operation, switch the ignition off and allow the system to cool down for a minimum of 15 minutes. After the system has cooled down, a message will be displayed briefly in the information display. See **Information Messages** (page 75).

When driving at slow speeds in deep sand under high outside temperatures, use a low gear when possible. Low gear operation will maximize the engine and transmission cooling capability.

Four-Wheel Drive (If Equipped)

Avoid driving at excessive speeds, this causes vehicle momentum to work against you and your vehicle could become stuck to the point that assistance may be required from another vehicle. Remember, you may be able to back out the way you came if you proceed with caution.

Mud and Water

Mud

Be cautious of sudden changes in vehicle speed or direction when you are driving in mud. Even four-wheel drive vehicles can lose traction in slick mud. If your vehicle does slide, steer in the direction of the slide until you regain control of your vehicle.

After driving through mud, clean off residue stuck to rotating driveshafts and tires. Excess mud stuck on tires and rotating driveshafts can cause an imbalance that could damage drive components.

Water

If you must drive through high water, drive slowly. Traction or brake capability may be limited.

When driving through water, determine the depth and avoid water higher than the bottom of the wheel rims. If the ignition system gets wet, your vehicle may stall.

Once through water, always try the brakes. Wet brakes do not stop your vehicle as effectively as dry brakes. Drying can be improved by applying light pressure to the brake pedal while moving slowly.

Note: *Driving through deep water may damage the transmission. If the front or rear axle is submerged in water, the axle lubricant and power transfer unit lubricant should be checked and changed if necessary.*

Driving on Hilly or Sloping Terrain

Although natural obstacles may make it necessary to travel diagonally up or down a hill or steep incline, you should always try to drive straight up or straight down.

Note: *Avoid turning on steep slopes or hills. A danger lies in losing traction, slipping sideways and possible vehicle roll over. Whenever driving on a hill, determine beforehand the route you will use. Do not drive over the crest of a hill without seeing what conditions are on the other side. Do not drive in reverse over a hill without the aid of an observer.*

When climbing a steep slope or hill, start in a lower gear rather than downshifting to a lower gear from a higher gear once the ascent has started. This reduces strain on the engine and the possibility of stalling.

If your vehicle stalls, do not try to turn around because this could cause vehicle roll over. It is better to reverse back to a safe location.

Apply just enough power to the wheels to climb the hill. Too much power will cause the tires to slip, spin or lose traction, resulting in loss of vehicle control.



E143949

Four-Wheel Drive (If Equipped)

Descend a hill in the same gear you would use to climb up the hill to avoid excessive brake application and brake overheating. Do not descend in neutral. Disengage overdrive or move the transmission selector lever to a lower gear. When descending a steep hill, avoid sudden hard braking as you could lose control. The front wheels have to be turning in order to steer your vehicle.

Your vehicle has anti-lock brakes, therefore apply the brakes steadily. Do not pump the brake pedal.

Driving on Snow and Ice

WARNING



If you are driving in slippery conditions that require tire chains or cables, then it is critical that you drive cautiously. Keep speeds down, allow for longer stopping distances and avoid aggressive steering to reduce the chances of a loss of vehicle control which can lead to serious injury or death. If the rear end of your vehicle slides while cornering, steer in the direction of the slide until you regain control of your vehicle.

Note: Excessive tire slippage can cause transmission damage.

Four-wheel drive vehicles have advantages over two-wheel drive vehicles in snow and ice but can skid like any other vehicle. Should you start to slide while driving on snowy or icy roads, turn the steering wheel in the direction of the slide until you regain control.

Avoid sudden applications of power and quick changes of direction on snow and ice. Apply the accelerator slowly and steadily when starting from a full stop.

Avoid sudden braking. Although a four-wheel drive vehicle may accelerate better than a two-wheel drive vehicle in snow and ice, it will not stop any faster as braking occurs at all four wheels. Do not become overconfident as to road conditions.

Make sure you allow sufficient distance between you and other vehicles for stopping. Drive slower than usual and consider using one of the lower gears. In emergency stopping situations, apply the brake steadily. As your vehicle has a four wheel anti-lock brake system, do not pump the brake pedal. See **Hints on Driving With Anti-Lock Brakes** (page 134).

If Your Vehicle Gets Stuck In Mud or Snow

If your vehicle gets stuck in mud or snow, it may be rocked out by shifting between forward and reverse gears, stopping between shifts in a steady pattern. Press lightly on the accelerator in each gear.

Note: Do not rock your vehicle if the engine is not at normal operating temperature, damage to the transmission may occur.

Note: Do not rock your vehicle for more than a minute, damage to the transmission and tires may occur or the engine may overheat.

Maintenance and Modifications

The suspension and steering systems on your vehicle have been designed and tested to provide predictable performance whether loaded or empty. For this reason, we strongly recommend that you do not make modifications such as adding or removing parts (i.e. lift kits or stabilizer bars) or by using replacement parts not equivalent to the original factory equipment.

Four-Wheel Drive (If Equipped)

We recommend that you use caution when your vehicle has either a high load or device (i.e. ladder or luggage racks). Any modifications to your vehicle that raise the center of gravity may cause your vehicle to roll over when there is a loss of vehicle control.

Failure to maintain your vehicle correctly may void the warranty, increase your repair cost, reduce vehicle performance and operational capabilities and adversely affect you and your passenger's safety. We recommend you frequently inspect your vehicle's chassis components when your vehicle is subject to off road usage.

Brakes

GENERAL INFORMATION

WARNING



Driving while distracted can result in loss of vehicle control, crash and injury. We strongly recommend that you use extreme caution when using any device that may take your focus off the road. Your primary responsibility is the safe operation of your vehicle. We recommend against the use of any handheld device while driving and encourage the use of voice-operated systems when possible. Make sure you are aware of all applicable local laws that may affect the use of electronic devices while driving.

Note: *Occasional brake noise is normal. If a metal-to-metal, continuous grinding or continuous squeal sound is present, the brake linings may be worn-out. If your vehicle has continuous vibration or shudder in the steering wheel while braking, have your vehicle checked by an authorized dealer.*

Note: *Brake dust may accumulate on the wheels, even under normal driving conditions. Some dust is inevitable as the brakes wear. See **Cleaning the Alloy Wheels** (page 208).*

Note: *Depending on applicable laws and regulations in the country for which your vehicle was originally built, the brake lamps may flash during heavy braking. Following this the hazard warning flashers may also flash when your vehicle comes to a stop.*

Wet brakes result in reduced braking efficiency. Gently press the brake pedal a few times when driving from a car wash or standing water to dry the brakes.

Brake Over Accelerator

In the event the accelerator pedal becomes stuck or entrapped, apply steady and firm pressure to the brake pedal to slow the vehicle and reduce engine power. If you experience this condition, apply the brakes and bring your vehicle to a safe stop. Shift the transmission to park (P) (automatic transmission) or to a low gear (manual transmission), switch the engine off and apply the parking brake. Inspect the accelerator pedal and the area around it for any items or debris that may be obstructing its movement. If none are found and the condition persists, have your vehicle towed to the dealer for service.

Brake Assist

Brake assist detects when you brake heavily by measuring the rate at which you press the brake pedal. It provides maximum braking efficiency as long as you press the pedal. Brake assist can reduce stopping distances in critical situations.

Anti-lock Brake System

This system helps you maintain steering control and vehicle stability during emergency stops by keeping the brakes from locking.

HINTS ON DRIVING WITH ANTI-LOCK BRAKES

Note: *When the system is operating, the brake pedal will pulse and may travel further. Maintain pressure on the brake pedal. You may also hear a noise from the system. This is normal.*

The anti-lock braking system will not eliminate the risks when:

- You drive too closely to the vehicle in front of you.
- Your vehicle is hydroplaning.

Brakes

- You take corners too fast.
- The road surface is poor.

PARKING BRAKE

WARNING



Always set the parking brake fully and make sure you shift the gearshift lever to park (P). Switch the ignition off and remove the key whenever you leave your vehicle.

Note: *Do not press the release button while pulling the lever up.*

To apply the parking brake:

1. Press the foot brake pedal firmly.
2. Pull the parking brake lever up to its fullest extent.

Note: *If you park your vehicle on a hill and facing uphill, shift the gearshift lever to park (P) and turn the steering wheel away from the curb.*

Note: *If you park your vehicle on a hill and facing downhill, shift the gearshift lever to park (P) and turn the steering wheel toward the curb.*

To release the parking brake:

1. Press the brake pedal firmly.
2. Pull the lever up slightly.
3. Press the release button and push the lever down.

Traction Control

PRINCIPLE OF OPERATION

The traction control system helps avoid drive wheel spin and loss of traction.

If your vehicle begins to slide, the system applies the brakes to individual wheels and, when needed, reduces engine power at the same time. If the wheels spin when accelerating on slippery or loose surfaces, the system reduces engine power in order to increase traction.

USING TRACTION CONTROL

Traction control forms part of the stability control system.

Note: *The system automatically turns on every time you switch the ignition on.*

In certain situations (e.g. stuck in snow or mud), turning the system off may be beneficial as this allows the wheels to spin with full engine power.

You can switch the system off and on using the information display. See **General Information** (page 69).

Stability Control

PRINCIPLE OF OPERATION

Electronic Stability Program

WARNING



The system does not relieve you of your responsibility to drive with due care and attention. Failure to do so could result in loss of vehicle control, personal injury or death.


Stability Control Warning Lamp

While driving, it flashes when the system is operating. See **Warning Lamps and Indicators** (page 65).

USING STABILITY CONTROL

Note: *The system automatically switches on every time you switch the ignition on.*

You can switch the system on and off using the information display. See (page 69).

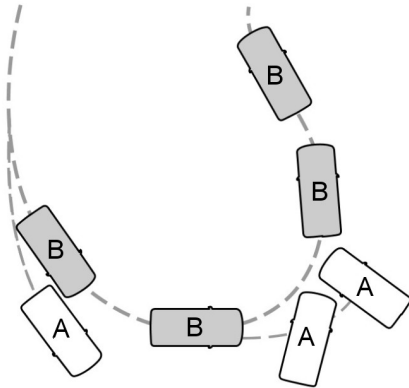

E72903

- A Without ESP
- B With ESP

The system supports stability when your vehicle starts to slide away from your intended path. The system performs this by braking individual wheels and reducing engine torque as required.

The system also provides an enhanced traction control function by reducing engine torque if the wheels spin when you accelerate. This improves your ability to pull away on slippery roads or loose surfaces, and improves comfort by limiting wheel spin in hairpin bends.

Parking Aids

PRINCIPLE OF OPERATION

WARNINGS



The system does not relieve you of your responsibility to drive with due care and attention.



If your vehicle has a non-Ford approved trailer tow module the system may not correctly detect objects.



The sensors may not detect objects in heavy rain or other conditions that cause disruptive reflections.



The sensors may not detect objects with surfaces that absorb ultrasonic waves.



The system does not detect objects that are moving away from your vehicle. They will only be detected shortly after they start to move toward your vehicle.



Take particular care when reversing with a tow ball arm or a rear fitted accessory. For example, a bicycle carrier. The rear parking aid will only indicate the approximate distance from the rear bumper to an object.



If you use a high pressure spray to wash your vehicle, only spray the sensors briefly from a distance not less than eight inches (20 centimeters).

Note: If your vehicle has a tow ball arm, the system is turned off automatically when trailer lamps (or lighting boards) are connected to the 13-pin socket through a Ford approved trailer tow module.

Note: Keep the sensors free from dirt, ice or snow. Do not clean with sharp objects.

Note: The system may emit false alerts if it detects a signal using the same frequency as the sensors or if your vehicle is fully loaded.

Note: The outer sensors may detect the side walls of a garage. If the distance between the outer sensors and the side wall remains constant for three seconds, the alert will turn off. As you continue the inner sensors will detect objects directly behind your vehicle.

PARKING AID

WARNINGS



To help avoid personal injury, read and understand the limitations of the system as contained in this section. Sensing is only an aid for some (generally large and fixed) objects when moving in reverse on a flat surface at parking speeds. Traffic control systems, inclement weather, air brakes and external motors and fans may also affect the function of the sensing system; this may include reduced performance or a false activation.



To help avoid personal injury, always use caution when in reverse and when using the sensing system.



This system is not designed to prevent contact with small or moving objects. The system is designed to provide a warning to assist you in detecting large stationary objects to avoid damaging your vehicle. The system may not detect smaller objects, particularly those close to the ground.



Certain add-on devices such as large trailer hitches, bike or surfboard racks and any device that may block the normal detection zone of the system, may create false beeps.


Note: Keep the sensors located on the bumper or fascia free from snow, ice and large accumulations of dirt. If the sensors are covered, the system's accuracy can be affected. Do not clean the sensors with sharp objects.

Parking Aids

Note: *If your vehicle sustains damage to the bumper or fascia, leaving it misaligned or bent, the sensing zone may be altered causing inaccurate measurement of obstacles or false beeps.*

The system warns you of obstacles within a certain range of the bumper area. The system turns on automatically whenever you switch the ignition on. It becomes active when you press the parking aid button or move the transmission selector lever to reverse gear and your vehicle speed is below 8 mph (12 km/h).

When receiving a detection warning, the radio volume is reduced to a predetermined level. After the warning goes away, the radio volume returns to the previous level.

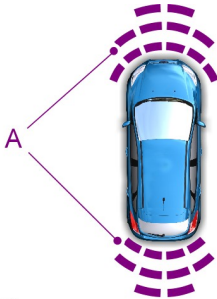

E130382

- A Coverage area of up to 31 inches (80 centimeters) from the front of your vehicle, up to 72 inches (183 centimeters) from the rear bumper and about 6–14 inches (15–35 centimeters) to the side of the front end of your vehicle.

The system sounds an audible warning when obstacles are near either bumper in the following manner:

- Objects detected by the front sensors are indicated by a high-pitched tone from the front speakers.
- Objects detected by the rear sensors are indicated by a lower pitched tone from the rear speakers. As your vehicle moves closer to the obstacle, the rate of the audible warning increases.
- The sensing system reports the obstacle which is closest to the front or rear of your vehicle. For example, if an obstacle is 24 inches (60 centimeters) from the front of your vehicle and at the same time, an obstacle is only 16 inches (40 centimeters) from the rear of your vehicle, the lower pitched tone sounds.
- An alternating warning sounds from the front and rear if there are objects at both bumpers that are closer than 12 inches (30 centimeters).
- If a stationary or receding object is detected further than 12 inches (30 centimeters) from the side of your vehicle, the tone sounds for only three seconds. Once the system detects an object approaching, the warning sounds again.

The system detects certain objects when the transmission selector lever is in reverse:

- and your vehicle is moving toward a stationary object at a speed of 3 mph (5 km/h) or less
- but your vehicle is not moving, and a moving object is approaching the rear of your vehicle at a speed of 3 mph (5 km/h) or less
- and your vehicle is moving at a speed of less than 3 mph (5 km/h) and a moving object is approaching the rear of your vehicle at a speed of less than 3 mph (5 km/h).

Parking Aids

Press the button to switch the system off. It will remain off for the entire ignition cycle. For item location: See **At a Glance** (page 11).

ACTIVE PARK ASSIST (If Equipped)

WARNINGS



At all times you are responsible for controlling your vehicle, supervising the system and intervening if required.



You must observe that the selected space remains clear of obstructions at all times in the manoeuvre.



The system may not detect parked vehicles with overhanging loads, street furniture or other items. You must make sure that the selected space is suitable for parking.



Do not use the system if there is an overhanging item attached to your vehicle roof.



Do not use the system if a trailer is attached to your vehicle.



Do not use the system if a bike rack is attached to the back of your vehicle.



If interrupted before the manoeuvre is completed, the system will turn off. The steering wheel position will not indicate the true position of the steering and you will have to take control of your vehicle.



Make sure that your hands, arms and loose clothing do not get caught in the rotating steering wheel.

Note: After a tire change the system will go through a relearning procedure. During this time the system performance may deteriorate.

The system will detect a suitable parallel parking space and steer your vehicle into the space. The system controls the steering while you control the accelerator, transmission and brakes. You can stop the manoeuvre at any time by holding the steering wheel or pressing the active park assist switch. See **At a Glance** (page 11).

The system will visually and audibly instruct you throughout the manoeuvre to safely park your vehicle.

Using the System

Note: The sensors may not detect objects in heavy rain or other conditions that cause disruptive reflections.

Note: The sensors may not detect objects with surfaces that absorb ultrasonic waves.

Note: The sensors may not detect the curb.

Note: If the traction control system is disabled active park assist will not be available.

The system may not align your vehicle correctly if:


- a spare tire or a significantly worn tire more than the other tires is used
- you use a tire size not recommended by us
- the tires skid
- the weather conditions are poor (heavy rain, snow, fog, etc).

Move forward at a maximum speed of 22 mph (35 km/h) and keep a passing distance between 1.3 - 6.6 feet (0.4 - 2 meters) to the parked vehicles or objects. Press the active park assist switch. See **At a Glance** (page 11). Use the direction indicator to select searching either to the left-hand side or right-hand side of your vehicle.

Note: If you do not make a selection the system will default to the passenger's side.

Parking Aids

Note: The system will not offer a suitable parking space if it does not detect a safe distance to the other object. For example, vehicles parked too close on the opposite side.

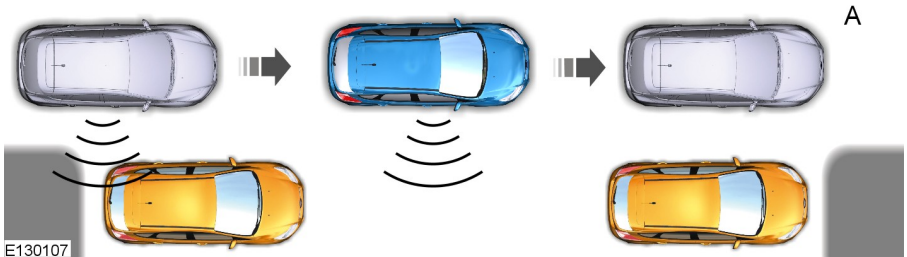

E130107

Note: You can disable the chimes using the information display. See **Personalized Settings** (page 75).

The information and entertainment display will inform you and a chime will be heard when a suitable space is found. To park your vehicle, follow the instructions on the information and entertainment display.

Note: The arrow symbols or graphics in the display indicate on which side of your vehicle the system will park. The display will also advise you when to select reverse gear.

Slow down and stop at approximately position **A**, then follow the system instructions.



E130108

WARNING



You must take full control of your vehicle when the speed exceeds 6 mph (10 km/h) as the system is disabled.

Cautiously move your vehicle backward using the accelerator and brake pedals. Parking aid warning tones will sound. Stop your vehicle when you hear a continuous tone.

You can take control of the manoeuvre by holding the steering wheel. If a message appears in the display, press the active park assist switch to resume. See **At a Glance** (page 11).


Parking Aids


Move your vehicle forward. Stop your vehicle when you hear a continuous tone.


The display will indicate when the system has finished the manoeuvre.


REAR VIEW CAMERA (If Equipped)


WARNINGS

 The rear view camera system is a reverse aid supplement device that still requires the driver to use it in conjunction with the interior and exterior mirrors for maximum coverage.

 Objects that are close to either corner of the bumper or under the bumper, might not be seen on the screen due to the limited coverage of the camera system.

 Back up as slow as possible since higher speeds might limit your reaction time to stop your vehicle.

 Use caution when using the rear video camera and the luggage compartment door is ajar. If the luggage compartment door is ajar, the camera will be out of position and the video image may be incorrect. All guidelines disappear when the luggage compartment door is ajar.

 Use caution when turning camera features on or off. Make sure your vehicle is not moving.

The rear view camera system provides a video image of the area behind your vehicle.

During operation, lines appear in the display which represent your vehicle's path and proximity to objects behind your vehicle.



E142435

The camera is located on the luggage compartment door.

Using the Rear View Camera System

The rear view camera system displays what is behind your vehicle when you place the transmission in reverse (R).

Note: *The reverse sensing system is not effective at speeds above 7 mph (12 km/h) and may not detect certain angular or moving objects.*

The system uses three types of guides to help you see what is behind your vehicle:

- Active guidelines: Show the intended path of your vehicle when reversing.
- Fixed guidelines: Show the actual path your vehicle is moving in while reversing in a straight line. This can be helpful when backing into a parking space or aligning your vehicle with another object behind you.
- Centerline: Helps align the center of your vehicle with an object (for example, a trailer).

Note: *If the transmission is in reverse (R) and the luggage compartment is ajar, no rear view camera features display.*

Parking Aids


Note: When towing, the camera only sees what is towed behind your vehicle. This might not provide adequate coverage as it usually provides in normal operation and some objects might not be seen. In some vehicles, the guidelines may disappear once the trailer tow connector is engaged.

The camera may not operate correctly under the following conditions:

- Nighttime or dark areas if one or both reverse lamps are not operating.
- Mud, water or debris obstructs the camera's view. Clean the lens with a soft, lint-free cloth and non-abrasive cleaner.
- The rear of your vehicle is hit or damaged, causing the camera to become misaligned.

Camera Guidelines

Note: Active guidelines are only available when the transmission is in reverse (R).

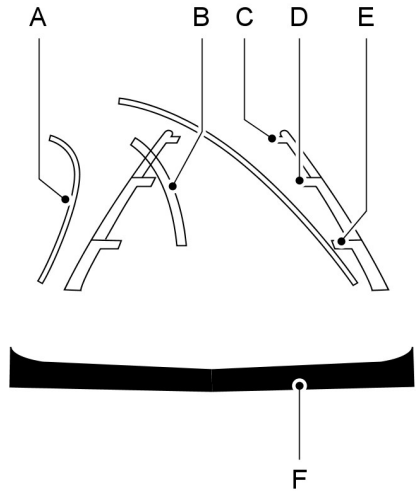

E142436

- A Active guidelines
- B Centerline
- C Fixed guideline: Green zone
- D Fixed guideline: Yellow zone
- E Fixed guideline: Red zone
- F Rear bumper

Active guidelines only show with fixed guidelines. To use active guidelines, turn the steering wheel to point the guidelines toward an intended path. If the steering wheel position changes while reversing, your vehicle might deviate from the original intended path.

The fixed and active guidelines fade in and out depending on the steering wheel position. The active guidelines do not display when the steering wheel position is straight.

Parking Aids

Always use caution while reversing. Objects in the red zone are closest to your vehicle and objects in the green zone are farther away. Objects are getting closer to your vehicle as they move from the green zone to the yellow or red zones. Use the side view mirrors and rear view mirror to get better coverage on both sides and rear of your vehicle.

Manual Zoom

WARNING



When manual zoom is on, the full area behind your vehicle may not show. Be aware of your surroundings when using the manual zoom feature.

Note: *Manual zoom is only available when the transmission is in reverse (R).*

Note: *When you enable manual zoom, only the centerline is shown.*

Selectable settings for this feature are Zoom in (+) and Zoom out (-). Press the symbol in the camera screen to change the view. The default setting is Zoom OFF.

This allows you to get a closer view of an object behind your vehicle. The zoomed image keeps the bumper in the image to provide a reference. The zoom is only active while the transmission is in reverse (R).

Camera System Settings

To access any of the rear view camera system settings, make the following selections in the multifunctional display when the transmission is not in reverse (R):

- With Touch Screen: Settings > Vehicle > Camera Settings
- Without Touch Screen: Menu > Camera Settings

Enhanced Park Aids or Park Pilot (If Equipped)

Selectable settings for this feature are ON and OFF.

The system uses red, yellow and green highlights that appear on top of the video image when any of the sensing systems detect an object.

Rear Camera Delay

Selectable settings for this feature are ON and OFF.

The default setting for the rear camera delay is OFF.

When shifting the transmission out of reverse (R) and into any gear other than park (P), the camera image remains in the display until:

- Your vehicle speed sufficiently increases.
- You shift your vehicle into park (P).
- 10 seconds of time elapse.

Cruise Control

PRINCIPLE OF OPERATION

Cruise control lets you maintain a set speed without keeping your foot on the accelerator pedal. You can use cruise control when your vehicle speed is greater than 20 mph (30 km/h).

USING CRUISE CONTROL

WARNINGS



Do not use cruise control in heavy traffic, on winding roads or when the road surface is slippery. This could result in loss of vehicle control, serious injury or death.



When you are going downhill, your vehicle speed may increase above the set speed. The system will not apply the brakes. Change down a gear to assist the system in maintaining the set speed. Failure to do so could result in loss of vehicle control, serious injury or death.

Note: *Cruise control will disengage if your vehicle speed decreases more than 10 mph (16 km/h) below your set speed while driving uphill.*



E166821

The cruise control switches are located on the steering wheel.

Switching Cruise Control On

Press and release **ON**.



The indicator will display in the instrument cluster.

Setting a Speed

1. Accelerate to the desired speed.
2. Press and release **SET+**.
3. Take your foot off the accelerator pedal.

Changing the Set Speed

- Press and hold **SET+** or **SET-**. Release the control when you reach the desired speed.
- Press and release **SET+** or **SET-**. The set speed will change in approximately 1 mph (2 km/h) increments.
- Press the accelerator or brake pedal until you reach the desired speed. Press and release **SET+**.

Canceling the Set Speed

Pull **CAN** toward you and release, or tap the brake pedal. The system will not erase the set speed.

Resuming the Set Speed

Pull **RES** toward you and release.

Switching Cruise Control Off

Note: *You will erase the set speed if you switch the system off.*

Press and release **OFF** or switch the ignition off.

Cruise Control

USING ADAPTIVE CRUISE CONTROL (If Equipped)

WARNINGS



The system is not a crash warning or avoidance system. You must intervene if the system does not detect a vehicle in front of you.



When you use the system you are responsible for maintaining the correct distance and speed. Always pay attention to the traffic conditions and intervene when the system is not maintaining a suitable speed or distance.



The system does not relieve you of your responsibility to drive with due care and attention.



The system does not brake for slow or stationary vehicles, pedestrians, objects in the road, oncoming and crossing vehicles.



Do not use the system in poor visibility, specifically fog, heavy rain, spray or snow.



Do not use the system on icy or slippery roads.



Do not use the system when entering or leaving a freeway.

Note: Only use the system when conditions are favorable, for example on freeways and main roads with steady free flowing traffic.

Note: The radar sensor has a limited field of vision. In some situations it may detect a vehicle other than the one expected or not detect any vehicle at all.

Note: When you switch the system on, it is possible that you will hear some unusual sounds during automatic braking. This is normal and caused by the automatic braking system.

Note: Keep the front of your vehicle free from dirt, metal badges or objects. This includes vehicle front protectors and additional lights which may prevent the sensor from operating.

The system is designed to help you maintain a gap from the vehicle in front of you. If there is no vehicle in front of you the system will maintain a set speed. The system is intended to provide enhanced operation of your vehicle when following other vehicles which are in the same lane and traveling in the same direction.


The system is based on the use of a radar sensor which projects a beam directly forward of your vehicle. This beam will detect any vehicle ahead within the system's range.

The radar sensor is located behind the front grille.


Cruise Control

Detection Beam Issues


A



B



C

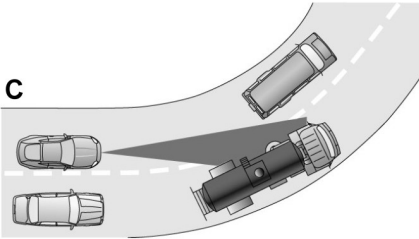

E71621

Detection issues can occur:

- With vehicles that edge into your lane that can only be detected once they have moved fully into your lane (**A**). Motorcyclists may be detected late, or not at all. (**B**)
- With vehicles in front of you when going into and coming out of a bend (**C**). The detection beam will not follow sharp curves in the road.

In these cases the system may brake late or unexpectedly. You should stay alert and intervene if necessary.

Automatic Braking

WARNINGS



You must take immediate action once alerted, as the adaptive cruise control braking will not be sufficient to keep a safe distance to the vehicle in front of you.



In some cases there may be no warning or the warning may be delayed. You should always apply the brakes when necessary.




When following a vehicle, the system will not automatically decelerate to a stop.

If required, the system will automatically brake for you to maintain the set gap between your vehicle and the one detected in front of you. This braking capacity is limited to approximately 30% of the total manual braking capacity to maintain smooth and comfortable cruising. If your vehicle needs to brake more heavily than this and you do not intervene by braking manually, an alarm will sound and a warning symbol will be shown in the display.

Cruise Control

Using the System

Use the steering wheel controls to operate the system.

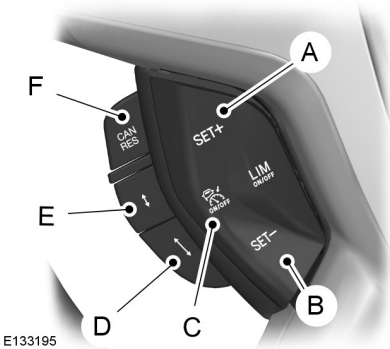

E133195

- A Set speed increase
- B Set speed decrease
- C On and off
- D Gap increase
- E Gap decrease
- F Cancel and resume

Switching the System On

Press switch C. The system is set to standby mode.

Setting a Speed

Note: The system must be in standby mode.

Press switch A or B to select your desired cruise speed. The speed is displayed in the information display and stored as the set speed.

Changing the Set Speed

Note: Vehicle speed may be increased and decreased at intervals of 5 mph or 5 km/h depending on your unit of measure setting.

Note: If the system does not react to these changes the reason may be that the gap interval to the vehicle in front of you prevents an increase in speed.

Press switch A to increase or switch B to decrease the set speed until the desired set speed is shown in the information display. Your vehicle speed will gradually change to the selected speed.


Setting the Vehicle Gap

Note: Use the appropriate gap setting in accordance with local traffic regulations.

Note: The gap setting is time dependent and therefore the distance will automatically adjust with your speed. For example on a gap setting of four bars, the time gap is 1.8 seconds. This will mean that at a speed of 62 mph (100 km/h), the distance to the vehicle in front of you will be maintained at 164 feet (50 meters).

Note: If you depress the accelerator for a short period of time, for example when overtaking, the system will temporarily switch off. It will switch back on when you release the accelerator pedal. A message will be shown in the display.

Note: The gap setting will remain unchanged each time you switch the ignition on.

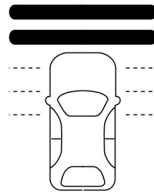


E82311

Cruise Control

The distance between you and the vehicle detected in front of you is maintained by a variable setting. This setting is represented by horizontal bars displayed in the information display. Selecting one bar gives the smallest gap and selecting all bars gives the largest gap. These bars are shown empty when in standby mode and filled when the system is in use.

When the system does not detect a vehicle in front of you, you will only see your vehicle displayed in the information display below the bars. The system will maintain the set speed when conditions permit. The system also maintains the set gap and displays this in the information display.

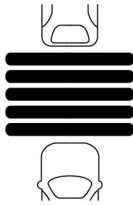

E82312

When the system detects a vehicle in front of you, it will be displayed above the horizontal bars.

This is a follow mode. The system will accelerate or decelerate as necessary to maintain the set gap. The selected gap will determine the acceleration behavior of the system.

Pull switch E to decrease the gap or switch D to increase the gap. The number of bars in the information display represents the set gap.

Note: *The recommended gap setting is four bars.*

Standby Mode

Note: *You will cancel the system if you move the transmission selector lever to neutral or depress the clutch or accelerator pedal for a long period of time.*

Press the brake pedal or pull switch F to cancel the system. The system will return to standby mode allowing you full manual control of your vehicle. The memory will retain the set speed and gap setting.

Pull switch F again to resume. The system will resume with the previously set speed and gap setting if conditions permit.

Switching the System Off

Press switch C.

Note: *This will not retain the stored speed.*

Automatic Switch Off

Note: *A message will be shown in the display if the engine speed drops too low. It will advise you to change down a gear (manual transmission only). If you do not follow this recommendation then the system will automatically switch off.*

Note: *The system will not operate when traction control is off.*

The system is dependent on various other systems, for example anti-lock braking system and electronic stability program. When a safety system has a malfunction or is reacting to an emergency, the system will automatically switch off.

You will hear an audible tone and a message will be shown in the display. You must then intervene and adapt your driving and speed to vehicles in front of you.

An automatic switch off can occur if:

- Your vehicle speed falls below approximately 17 mph (25 km/h).
- The tires lose traction.
- The brake temperature is too high, for example when driving on mountainous or hilly roads.
- The engine speed is too low.
- The radar sensor is covered.
- You apply the parking brake.

Cruise Control

Forward Alert Function

WARNINGS



Never wait for a crash warning. When driving you are responsible for maintaining the correct distance and speed, even when the system is used.



The system will only react to vehicles in front of you traveling in the same direction and will not react to slow or stationary vehicles.



Never drive in a manner to provoke the system. The system is designed to assist in emergencies only.



Warnings may be absent, triggered late or triggered unnecessarily due to detection beam issues. See **Using Adaptive Cruise Control** (page 146).

Adaptive Cruise Control (page 146).

Note: *The brake support system only reduces the crash speed if you brake immediately once alerted.*

Note: *If you depress the brake pedal quick enough, you will maintain full braking. This is regardless of how much force you apply to the pedal.*

Note: *Brake support prepares the braking system for rapid braking by gently applying the brake. You may notice a slight jerk.*

Note: *Crash alerts will only occur when you switch the system on. Brake support is always on and you can not turn it off.*

Note: *You can use the system with or without switching the adaptive cruise control system on.*

Note: *The system uses the same radar sensors as adaptive cruise control and therefore has the same limitations. See **Using Adaptive Cruise Control** (page 146).*

The system is designed to assist you by warning you of the risk of a crash with the vehicle in front of you.

The system is designed to alert you by warning chimes and a visual warning in the information display.

Brake support is turned on to enable full braking effectiveness and reduce the severity of a crash with the vehicle in front of you.

Switching the System On and Off

You can switch the system on and off using the information display. See (page 69).

Note: *When you switch the system off, a warning indicator will remain illuminated in the information display. See **Warning Lamps and Indicators** (page 65).*

Note: *The system status and settings will remain unchanged each time you switch the ignition on.*

Adjusting the Warning Sensitivity

This will determine how early the system alerts you. You can adjust the sensitivity using the steering wheel controls. See (page 69).

Driving Aids

SPEED LIMITER

Principle of Operation

WARNING



When you are going downhill, your speed may increase above the set speed. The system will not apply the brakes but a warning will be given.

The system allows you to set a speed, to which your vehicle then becomes limited. The set speed will become the effective maximum speed of your vehicle, but with the option to temporarily exceed this limit if required.

Using the System

Note: *The set speed limit can be intentionally exceeded for a short period of time if required, for example when overtaking.*

The system is operated by adjustment controls mounted on the steering wheel.



E133198

- A Set speed increase
- B On and off

- C Set speed decrease
- D Cancel and resume

Switching the System On and Off

Press switch B. The information display will prompt you to set a speed.

Setting the Speed Limit

Use the cruise control switches to alter the maximum speed setting.

Press switch A or C to select your desired speed limit. The speed is displayed in the information display and stored as the set speed.

Pull switch D to cancel the limiter and place it in standby mode. The information display will confirm this has been turned off by showing the set speed crossed out.

Pull switch D again to resume the limiter. The information display will confirm this has been turned on by showing the set speed again.

Intentionally Exceeding the Set Speed Limit

Depress the accelerator fully to temporarily turn the system off. The system will turn on once your vehicle speed drops below the set speed.

System Warnings

If you accidentally exceed the set speed, it will flash in the information display and you will hear an audible warning chime. If you intentionally exceed the set speed, it will flash in the information display.

Driving Aids

DRIVER ALERT (If Equipped)

Principle of Operation

WARNINGS



The system does not relieve you of your responsibility to drive with due care and attention.



At all times you are responsible for controlling your vehicle, supervising the system and intervening if required.



If the sensor becomes blocked the system may not function.



Take regular rest breaks as required and do not wait for the system to warn you if you feel tired.



Take rest breaks only where it is safe to do so.



Certain driving styles and behavior may result in the system issuing a warning even if you are not feeling tired.



In cold and severe weather conditions the system may not function. Rain, snow, spray and large contrasts in lighting can all influence the sensor.



The system will not operate if the sensor cannot track the road lane markings.



The system may not operate in areas during roadwork construction.



The system may not operate on roads with sharp bends or narrow lanes.



Do not carry out windshield repairs in the immediate area surrounding the sensor.



If your vehicle has a suspension kit not approved by us, the system may not function correctly.

Note: Keep the windshield free from obstructions such as bird droppings, insects and snow or ice.

Note: The system assists you when driving on fast main roads and freeways.

Note: The system calculates an alertness level at vehicle speeds above approximately 40 mph (65 km/h).

The system automatically monitors your driving behavior.

The system is designed to alert you if it detects that you are becoming drowsy or if your driving deteriorates.

Using Driver Alert

Switching the System On and Off

Note: The system will remain on or off depending on how it was last set.

Switch the system on using the information display. See **Information Displays** (page 69).

The system will calculate your alertness level based upon your driving behavior in relation to the lane markings and other factors.

System Warnings

Note: The system will not issue warnings below approximately 40 mph (65 km/h).

The warning system has two stages:

1. A temporary warning is issued to advise you to take a rest. This message only appears for a short time.
2. If you do not rest and the system continues to detect that your driving deteriorates, it will issue a further warning. This will remain in the information display until you cancel it. See **Information Messages** (page 75).


Press **OK** on the steering wheel control to remove the warning.

Driving Aids

System Display

When active the system will run automatically in the background and only issue warnings if required. You can view the status at any time using the information display. See (page 69).

The alertness level is shown by six steps as a colored bar.

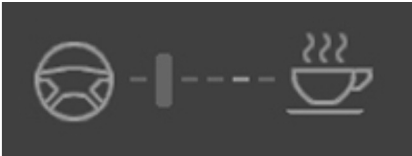

E131358

Alertness level is fine, no rest required.



E131359

Alertness level is critical, indicating that you should take a rest as soon as it is safe to do so.

The status bar will travel from left to right as the calculated alertness level decreases. As the rest icon is approached the color turns from green to yellow and then finally red when a rest break must be taken.

- Green: No rest required.
- Yellow: First (temporary) warning.
- Red: Second warning.

Your alertness level will be shown in grey if:

- the camera sensor cannot track the road lane markings
- your vehicle speed drops below approximately 40 mph (65 km/h).

Resetting the System

You can reset the system by:

- switching the ignition off and on
- stopping your vehicle and then opening and closing the driver's door.

LANE KEEPING SYSTEM (if

Equipped)

Lane Keeping Alert

Principle of Operation

WARNINGS

- ⚠ The system does not relieve you of your responsibility to drive with due care and attention.
- ⚠ At all times you are responsible for controlling your vehicle, supervising the system and intervening if required.
- ⚠ If the sensor becomes blocked the system may not function.
- ⚠ The sensor may incorrectly track lane markings such as other structures or objects. This can result in a false or missed warning.
- ⚠ In cold and severe weather conditions the system may not function. Rain, snow, spray and large contrasts in lighting can all influence the sensor.
- ⚠ The system will not operate if the sensor cannot track the road lane markings.
- ⚠ The system may not operate in areas during roadwork construction.
- ⚠ The system may not operate on roads with sharp bends or narrow lanes.

Driving Aids

WARNINGS



Do not carry out windshield repairs in the immediate area surrounding the sensor.



If your vehicle has a suspension kit not approved by us, the system may not function correctly.

Note: Keep the windshield free from obstructions such as bird droppings, insects and snow or ice.

Note: The system may assist you when driving on fast main roads and freeways.

Note: The system may not operate during hard braking or acceleration and when you are intentionally steering your vehicle.

Note: The system will operate with a minimum of one tracked lane marking.

Note: The system will only operate above vehicle speeds of approximately 40 mph (65 km/h).

The sensor is located behind the interior mirror. It continuously monitors conditions to alert you of unintentional lane drifting at high speeds.

The system will automatically detect and track the lane markings on the road. If your vehicle unintentionally drifts toward the road lane markings, a warning will be shown in the display. There is also a warning given in the form of a vibration felt through the steering wheel.

Using Lane Keeping Alert

Switching the System On and Off

Note: When you switch the system off, a warning indicator will remain illuminated in the information display. See **Warning Lamps and Indicators** (page 65).

Note: The system status and settings will remain unchanged when you switch the ignition on and off.



E132099

Switch the system on and off using the button on the direction indicator stalk.

Press the button twice to switch the system on. Press the button once to switch the system off.

Setting the Steering Wheel Vibration Level

The system has three intensity levels which you can set using the information display. See (page 69).

Setting the System Sensitivity

You can adjust how quickly the system warns you of a dangerous situation. The system has two sensitivity levels which you can set using the information display. See (page 69).

System Warnings



E132651

A column of lane markings are displayed either side of the vehicle graphic.

Driving Aids

The lane markings are color coded as follows:

- Green: The system is ready to warn you of any unintentional lane departure.
- Red: Your vehicle is approaching or is too close to the detected lane boundary. Take immediate safe action to reposition your vehicle.
- Gray: The relevant lane boundary will be suppressed.

Instances where a lane boundary may be suppressed:

- Lane markings on the road may not be detected by the sensor.
- You turn the direction indicator for that side of your vehicle on.
- If you apply direct steering, accelerate fast or brake hard.
- Your vehicle speed is outside the operating limits.
- If there is an anti-lock brake or stability control intervention.
- Narrow lane width.

If the lane markings in the display turn red or you feel a vibration through the steering wheel you must take immediate and safe action to align your vehicle. Correct any unintended lane drift immediately.

Lane Keeping Aid

Switching the System On and Off

Note: *The system does not automatically turn on every time you switch the ignition on.*

Note: *When you switch the system on, this will automatically turn lane keeping alert on.*



E132099

Switch the system on and off using the button on the indicator stalk.

Press the button three times to switch the system on. Press the button again to switch the system off.

Setting the System Sensitivity

You can adjust how quickly the system intervenes in a dangerous situation. The system has two sensitivity levels which you can set using the information display. See (page 69).

System Warnings



E132651

A column of lane markings are displayed either side of the vehicle graphic.

Driving Aids

The lane markings are color coded as follows:

- Green: The system is ready to warn you of any unintentional lane departure.
- Yellow: The system will automatically apply a steering torque to align your vehicle path and correct any unintended lane drift.
- Red: Your vehicle is approaching or is too close to the detected lane boundary. The steering wheel will give a vibration warning. Take immediate safe action to reposition your vehicle.

Instances where a lane boundary may be suppressed:


- Lane markings on the road may not be detected by the sensor.
- You turn the direction indicator for that side of your vehicle on.
- If you apply direct steering, accelerate fast or brake hard.
- Your vehicle speed is outside the operating limits.
- If there is an anti-lock brake or stability control intervention.
- Narrow lane width.

Note: You can override the system at any time during its operation by turning the steering wheel.


BLIND SPOT INFORMATION SYSTEM (If Equipped)

Blind Spot Information System


WARNINGS

 The system will not prevent a crash or contact with other vehicles or objects. It is designed to provide a warning to assist you in detecting vehicles in the blind spot zones. It will not detect obstacles, pedestrians, motorcyclists or cyclists.

WARNINGS

 Do not use the system as a replacement for using the mirrors or looking over your shoulder before changing lanes. You should only use the system as an aid. It is not a replacement for careful driving.

The system is a convenience feature that assists you in detecting vehicles that may have entered the blind spot zone (A). The detection area is on both sides of your vehicle extending rearward from the exterior mirrors to approximately 10 feet (3 meters) beyond the rear bumper. The system is designed to alert you if other vehicles enter the blind spot zone when driving.

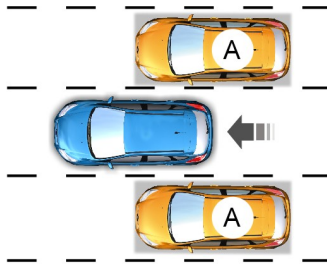

E124788

Using the System

The system displays a yellow warning indicator located in the exterior mirrors. It will dim when the ambient light decreases.



E124736

Driving Aids

Note: Both warning indicators will illuminate briefly when you switch the ignition on to confirm that the system is operational.

Note: If your vehicle has an automatic transmission, the system only operates when you move the transmission selector lever to sport, drive or neutral.

The system only operates when your vehicle exceeds 6 mph (10 km/h). The system will temporarily switch off when you select reverse gear.

System Detection and Alerts

WARNINGS



Do not place items such as bumper stickers in this area.




Repairs to these areas using body filler will affect the performance of the system.

The system is designed to trigger the alert for vehicles that enter the blind spot zone from the rear or merge from the side. Vehicles that you pass or vehicles that enter the blind spot zone from the front, will only trigger the alert after the vehicle has remained in the blind spot zone for a short period of time.

Note: Vehicles that pass through the blind spot zone quickly (typically less than 2 seconds) will not trigger the alert.

The system consists of two radar sensors each located behind the rear wheels, hidden behind the bumpers.

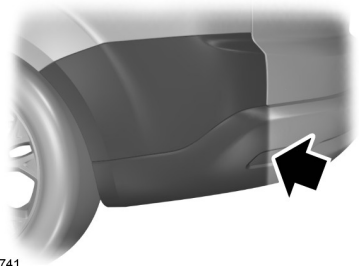

E124741

Detection Limitations

There may be instances where the system will not always detect vehicles entering and exiting the blind spot zone.

Instances which may cause non-detection:

- Debris build up on the rear bumper panels in the area of the sensors.
- Certain maneuvering of vehicles entering and exiting the blind spot zone.
- Vehicles passing through the blind spot zone at high speed.
- Severe weather conditions.
- Several vehicles passing through the blind spot zone following each other closely.

False Alerts

Note: False alerts are temporary and will self correct.

There may be certain instances when the system will alert with no vehicle present in the blind spot zone.

Circumstances where false alerts may occur:

- Road guardrails.
- Freeway concrete walls.
- Construction areas.
- Sharp turns around a building.

Driving Aids

- Bushes and trees.
- Coming to a stop with a vehicle very close behind.

Switching the System Off and On

You can switch the system off and on using the information display. See **Information Displays** (page 69).

When you switch the system off no further alerts will be received. The warning indicator in the instrument cluster will illuminate. See **Warning Lamps and Indicators** (page 65).

Note: *The system status will remain the same until you manually change it.*

Detection Errors

Note: *The warning indicator in the exterior mirror will not illuminate.*

If the system senses a fault on either sensor, the warning indicator in the instrument cluster will illuminate and remain on. A message will be shown in the display to confirm the fault and indicate which sensor is affected.

Blocked Sensor

WARNINGS



Prior to the system recognizing a blocked condition and issuing a warning, the number of missed objects will increase.



The sensors may not detect vehicles in heavy rain or other conditions that cause disruptive reflections.

Note: *Keep the rear bumper area surrounding the sensors free from dirt, ice and snow.*

If a sensor becomes blocked the system performance may degrade. A blocked sensor message may be displayed.

The system will automatically return to normal operation after one of the following conditions have been met:

- Two other vehicles have been detected on both sides.
- You switch the ignition off and on.

If the sensor remains blocked after you have switched the ignition off and on, the system will detect the blockage again and alert you.

Trailer Towing False Alerts

If your vehicle has a trailer tow module approved by us, the system will detect a connected trailer and turn off. A confirmation message will be shown in the information display. See **Information Messages** (page 75). The warning indicator in the instrument cluster will illuminate. See **Warning Lamps and Indicators** (page 65).

Note: *If your vehicle has a trailer tow module not approved by us, the system may not correctly detect a connected trailer. Switch the system off to avoid false alerts. See **Information Displays** (page 69).*

TRAFFIC SIGN RECOGNITION

Principle of Operation

WARNINGS



The system does not relieve you of your responsibility to drive with due care and attention.



At all times you are responsible for controlling your vehicle, supervising the system and intervening if required.



If the sensor becomes blocked the system may not function.

Driving Aids

Note: In cold and severe weather conditions the system may not function. Rain, snow, spray and large contrasts in lighting can all prevent the sensor from functioning correctly.

Note: Do not carry out windshield repairs in the immediate area surrounding the sensor.

Note: If your vehicle has a suspension kit not approved by us, the system may not function correctly.

Note: Always fit Ford original parts when replacing headlamp bulbs. Other bulbs may reduce system performance.

Note: Keep the windshield free from obstructions such as bird droppings, insects and snow or ice.

Note: The system may not detect all traffic signs and may read signs incorrectly.

Note: The system is designed to automatically detect traffic signs meeting the Vienna convention.

Note: Traffic sign data provided by the navigation system contains information integrated to the data carrier release.

There is a sensor mounted behind the interior rear view mirror. It continuously monitors road signs to inform you of the current speed limit and overtaking regulations.

The system automatically detects recognisable traffic signs, such as:

- Speed limit signs.
- No overtaking signs.
- Speed limit cancellation signs.

When the system recognises a traffic sign, it will be shown in the display.

Using the System

Switching the System On and Off

Note: The system status and settings will remain unchanged during ignition cycles.

You can switch the system on and off using the information display. See (page 69).

Setting the System Speed Warning

The system has a number of speed warning levels which can be set using the information display. See (page 69).

System Display



E132994

The system can display two traffic signs in parallel.

You can view the status at any time using the information display.

The system display is in four stages as follows:

1. All new recognizable traffic signs will appear brighter than the other traffic signs in the display.
2. After a predetermined time they will be shown normally.
3. After a predetermined distance they will be shown greyed out.
4. After another predetermined distance they will be deleted.

If the system detects a supplementary traffic sign, this sign is indicated as a box below the respective traffic sign. For example, when passing a reduced speed limit in wet road conditions sign.


Driving Aids


If your vehicle has a navigation system, stored traffic sign data may influence the indicated speed limit value.


ACTIVE CITY STOP (If Equipped)


Principle of Operation


WARNINGS


 You are responsible for controlling your vehicle at all times. The system does not relieve you of your responsibility to drive with due care and attention. Failure to take care may result in the loss of control of your vehicle, serious personal injury or death.

 To achieve full system performance you must break in the braking system. See **Breaking-In** (page 171). Failure to take care may result in the loss of control of your vehicle, serious personal injury or death.


 If the system applies the brakes and the engine stops the hazard warning flashers will automatically turn on. Failure to take care may lead to a crash or personal injury.


 The system does not react to cyclists, motorcyclists, pedestrians, animals or vehicles that are driving in a different direction. Failure to take care may result in the loss of control of your vehicle, serious personal injury or death.


 The system does not operate during harsh acceleration or steering. Failure to take care may lead to a crash or personal injury.


 The system may not operate during cold or severe weather conditions. Snow, ice, heavy rain and spray can influence the system. Keep the hood free of snow and ice. Failure to take care may result in the loss of control of your vehicle, serious personal injury or death.


WARNINGS

 The system may not operate when driving around sharp curves. Failure to take care may lead to a crash or personal injury.

 The system may not operate correctly if you replace the windshield with a non-Ford windshield. Do not carry out windshield repairs in front of the sensor. Failure to adhere to this warning may lead to an accident or injury.

 The system may not detect objects with surfaces that absorb reflections. Failure to take care may result in the loss of control of your vehicle, serious personal injury or death.

 The system will not operate correctly if the sensor is blocked. Keep the windshield free from obstructions, for example, bird droppings, insects, snow or ice. Failure to adhere to this warning may lead to an accident or injury.

 When you switch the ignition on the sensor transmits a laser beam. Never look directly into the sensor. There is a risk of eye injury.

The sensor is on the rear of the interior mirror. It continuously monitors conditions to decide when to intervene.

The system operates at speeds below approximately 31 mph (50 km/h) by applying the brakes if it detects that a crash is likely. If the system applies the brakes a message will appear in the information display.

The system may reduce the risk of a low speed crash into another vehicle. It also helps reduce impact damage or may avoid the crash completely.

Note: You must depress the brake pedal to obtain full braking force.

Driving Aids

Switching the System Off and On

You can switch this feature off using the information display controls. See **General Information** (page 69).

Note: *The system automatically turns on every time you switch the ignition on.*

In certain situations we recommend that you switch the system off, for example:

- Driving off-road when objects may cover the windshield.
- Driving through a car wash facility.

ECO MODE

This system assists you in driving more efficiently by constantly monitoring characteristics of gear changing, anticipation of traffic conditions and speeds while driving.


The value of these characteristics is represented by petals shown in the display, with five petals being the most efficient. The more efficiently you drive, the better the rating, and the better your vehicle's overall fuel economy.

Note: *These efficiency values do not result in a defined fuel consumption figure. It might vary as it is not only related to these driving habits, but also influenced by many other factors such as short trips and cold starts.*

Note: *Frequent short trips, where the engine does not fully warm up, will also increase fuel consumption*

The system is accessed using the information display control. See (page 69).

Type 1

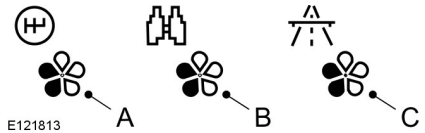

- A Gear shifting
- B Anticipation
- C Efficient speed

Gear shifting

Use the highest drivable gear appropriate for the road conditions to improve fuel consumption.

Anticipation

Adjust your vehicle speed and the distance to other vehicles to avoid the need for heavy braking or acceleration to improve fuel economy.

Efficient speed

Reduce your cruising speed on open roads to improve economy. Higher speeds use more fuel.

Type 2 and 3

The relevant information is shown in the display.

Resetting Eco Mode







Reset the average fuel consumption by using the information display control.

Note: *New values may take a short time to calculate*

Load Carrying


GENERAL INFORMATION

WARNINGS

-  Use load securing straps to an approved standard, e.g. DIN.
-  Make sure that you secure all loose items properly.
-  Place luggage and other loads as low and as far forward as possible within the luggage or loadspace.
-  Do not drive with the liftgate or rear door open. Exhaust fumes may enter your vehicle.
-  Do not exceed the maximum front and rear axle loads for your vehicle. See **Vehicle Identification Plate** (page 226).
-  Do not allow items to contact the rear windows.

Note: When loading long objects in to your vehicle, for example pipes, timber or furniture be careful not to damage the interior trim.

LUGGAGE ANCHOR POINTS

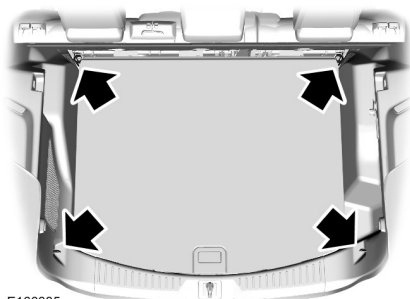


E160685

Luggage Retention Nets

Note: Your vehicle does not have luggage retention net anchor points fitted behind the first or second row seats.

REAR UNDER FLOOR STORAGE

Passenger Compartment Floor

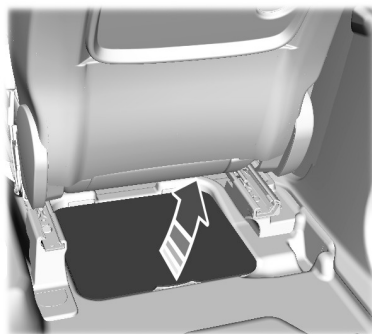

E159047


The under floor storage compartment is located behind the front passenger seat.

Cargo Management System

The system is located in the floor of the cargo area. Lift the handle to open.


Load Carrying

Vehicles with Temporary Spare Wheel

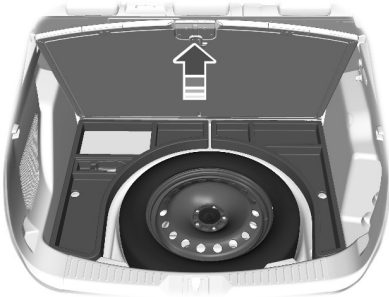

E159408


Vehicles with Temporary Mobility Kit

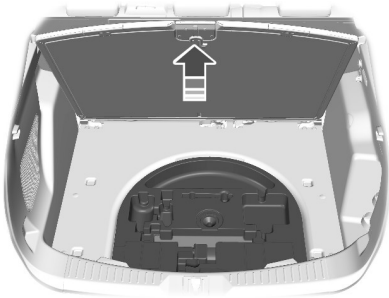

E159043

Adjustable Load Floor

Vehicles with Temporary Spare Wheel

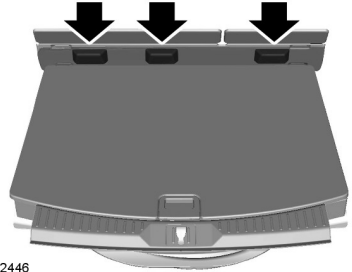

E142446


The front of the load floor can be placed either on (for high position) or below (for low position) the ledges behind the rear seats.


Vehicles with Temporary Mobility Kit

The front of the load floor can be placed either on the ledge behind the rear seats (for high position) or on the black cargo insulator surface (for low position).

LUGGAGE COVERS


WARNINGS

 Make sure that the posts are correctly latched in mounting features. The cover may cause injury in a sudden stop or crash if it is not securely installed.

 Do not place any objects on the cargo shade. They may obstruct your vision or strike occupants of your vehicle in a sudden stop or crash.

Use the cargo shade to cover items in the cargo area of your vehicle.

Load Carrying

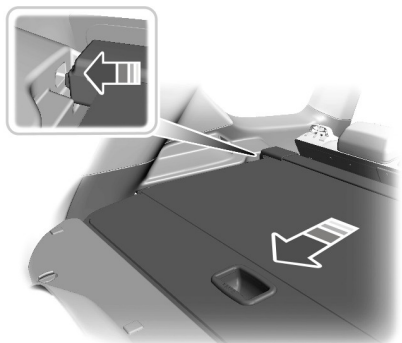

E159183


Insert the ends of the cargo shade into the mounting features located behind the rear seat on the rear trim panels to install the shade.


To operate the cargo shade:

1. Pull the rear edge of the cargo shade rearward until it clicks into place.
2. To close the cargo shade, tap on the rear edge and it will slide forward.


ROOF RACKS AND LOAD CARRIERS

WARNINGS

 If you use a roof rack, the fuel consumption of your vehicle will be higher and you may experience different driving characteristics.

 Read and follow the manufacturer's instructions when you are fitting a roof rack.

WARNINGS

 When loading the roof racks, we recommend you evenly distribute the load, as well as maintain a low center of gravity. Loaded vehicles, with higher centers of gravity, may handle differently than unloaded vehicles. Take extra precautions, such as slower speeds and increased stopping distance, when driving a heavily loaded vehicle.

The maximum recommended load, evenly distributed on the roof rack, is:

- 165 pounds (75 kilograms) for vehicles without a moonroof
- 132 pounds (60 kilograms) for vehicles with a moonroof.

Note: *Never place loads directly on the roof panel. The roof panel is not designed to directly carry a load.*

For correct roof rack system function, you must place loads directly on crossbars affixed to the roof rack side rails. When using the roof rack system, we recommend you use Ford Genuine Accessory crossbars designed specifically for your vehicle.

Make sure that you securely fasten the load. Check the tightness of the load before driving and at each fuel stop.

Towing

TOWING A TRAILER

WARNINGS



Do not exceed 62 mph (100 km/h).



The rear tire pressures must be increased by 2.9 psi (0.2 bar) above specification. Do not exceed the maximum pressure stated on the tire sidewall. This could cause serious personal injury. See **Wheels and Tires** (page 209).



Do not exceed the maximum gross train weight stated on your vehicle identification plate. This could result in the loss of vehicle control, serious personal injury or death. See **Vehicle Identification Plate** (page 226).



Do not exceed the maximum permissible trailer vertical weight on the tow ball as stated in the vehicle specification chart. This could result in the loss of vehicle control, serious personal injury or death. See **Capacities and Specifications** (page 226).



The anti-lock brake system does not control the trailer brakes.

When towing a trailer:

- Obey country specific regulations for towing a trailer.
- Do not exceed 62 mph (100 km/h) even if a country allows higher speeds under certain conditions.
- Place loads as low as possible and central to the axle of your trailer. If you are towing with an unloaded vehicle, you should place the load in your trailer toward the front, within the maximum vertical load, as this gives the best stability. See **Capacities and Specifications** (page 226).

- The trailer vertical weight on the tow ball is essential for the driving stability of your vehicle and trailer.
- The vertical weight on the tow ball should be at least 4% of the trailer weight and not exceed the maximum permissible weight. See **Capacities and Specifications** (page 226).
- Reduce speed immediately if the trailer shows any sign of swaying. See **Trailer Sway Control** (page 166).
- Use a low gear when descending a steep downhill gradient.

Note: *The maximum permissible trailer vertical weight on the trailer identification plate is the trailer manufacturer's testing value. The vehicle maximum permissible trailer vertical weight may be lower.*

The stability of your vehicle-to-trailer combination depends on the quality of the trailer.

Towing a trailer changes the handling characteristics of your vehicle and increases stopping distances. Adapt your speed and driving behavior according to the trailer load.

The gross train weight stated on the vehicle identification plate applies for road gradients up to 12% and altitudes up to 3,281 ft (1,000 m) when towing a trailer. In mountainous regions the engine performance decreases due to lower air density with increasing altitude. In high altitude regions above 3,281 ft (1,000 m), you should reduce the stipulated maximum permitted gross train weight by 10% for every additional 3,281 ft (1,000 m).

Note: *Not all vehicles are suitable or approved to have a tow bar fitted. Ask an authorized dealer for more information.*

Towing

TRAILER SWAY CONTROL (if

Equipped)

WARNING



Turning off trailer sway control increases the risk of loss of vehicle control, serious injury or death. Ford does not recommend disabling this feature except in situations where speed reduction may be detrimental (such as hill climbing), the driver has significant trailer towing experience, and can control trailer sway and maintain safe operation.

Note: This feature does not prevent trailer sway, but reduces it once it begins.

Note: This feature cannot stop all trailers from swaying.

Note: In some cases, if vehicle speed is too high, the system may activate multiple times, gradually reducing vehicle speed.

This feature applies the vehicle brakes at individual wheels and, if necessary, reduces engine power. If the trailer begins to sway, the stability control light flashes. The first thing to do is slow the vehicle down, then pull safely to the side of the road and check for proper tongue load and trailer load distribution. See **Load Carrying** (page 162).

TOW BALL

WARNINGS



When not in use, always transport the tow ball arm securely fastened in the luggage compartment.



Take special care when fitting the tow ball arm as the safety of your vehicle and the trailer depends on this.



Do not use any tools for mounting or dismantling the tow ball arm.


WARNINGS



Do not modify the trailer coupling.




Do not disassemble or repair the tow ball arm.

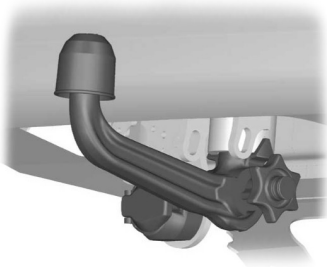

E71328

A 13-pin trailer socket and the tow ball arm seat are provided under the rear bumper. Turn the trailer socket down through 90 degrees until it engages in the end position.

Unlocking the Tow Ball Arm Mechanism

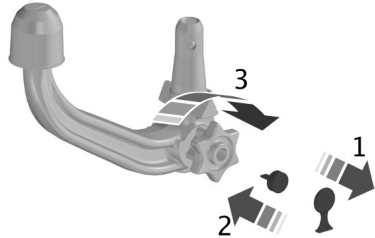

E71329

1. Remove the protecting cap.
2. Insert the key and turn it counterclockwise to unlock.
3. Hold the tow ball arm. Pull the handwheel out and turn it clockwise until it clicks.

Towing

Note: The red mark on the handwheel must align with the white dot on the tow ball.


4. Release the handwheel. The tow ball arm is unlocked.

Inserting the Tow Ball Arm

WARNING



The tow ball arm may only be inserted when completely unlocked.

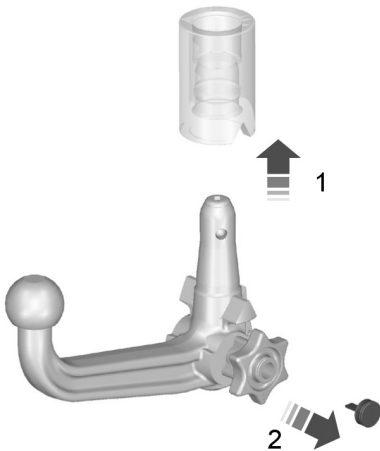

E71330

Note: Pull out the plug.

1. Insert the tow ball arm vertically and press it upward until it engages.

Note: Do not hold your hand near the handwheel.

Note: The green mark on the handwheel must align with the white dot on the tow ball.

2. Turn the key clockwise and remove the key to lock the tow ball.


3. Pull the protecting cap from the key bow and press it onto the lock.

Driving with a Trailer

WARNING



If any of the below conditions cannot be met, do not use the tow bar and have it checked by an authorized dealer.

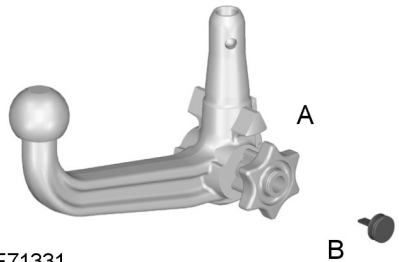


E71331

Before starting your journey, make sure that the tow ball arm is correctly locked. Check that:

- the green mark on the handwheel is aligned with the white dot on the tow ball
- the handwheel (A) is correctly fitted to the tow ball arm
- you have removed the key (B)
- the tow ball arm is securely positioned.

Towing

Removing the Tow Ball Arm

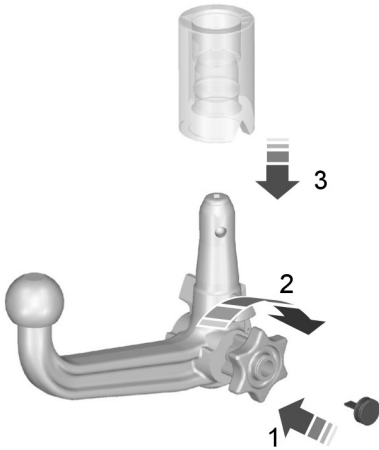

E71332

Note: *Unhitch the trailer.*

1. Remove the protecting cap. Insert the key and unlock.
2. Hold the tow ball arm. Pull the handwheel out, turn it clockwise against the stop.
3. Remove the tow ball arm.
4. Release the handwheel.


When unlocked in this way, the tow ball arm can be reinserted at any time.

Driving without a Trailer

WARNING



Never unlock the tow ball arm with the trailer attached.

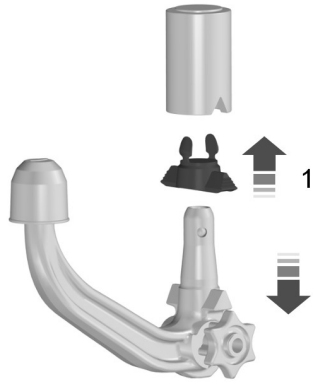

E94771

Remove the tow ball arm. Insert the plug into its seat (1).

Maintenance

WARNING



Remove the tow ball arm and protect the seat with the plug before steam cleaning your vehicle.

Keep the system clean. Periodically lubricate bearings, sliding surfaces, and locking balls with resin-free grease or oil and the lock with graphite.

In case of loss, replacement keys are available from the manufacturer by stating the number on the lock cylinder.

TOWING POINTS


WARNING



The towing eye has a left-hand thread. Turn it counterclockwise to install it. Make sure that the towing eye is fully tightened.

Towing

Front Towing Eye

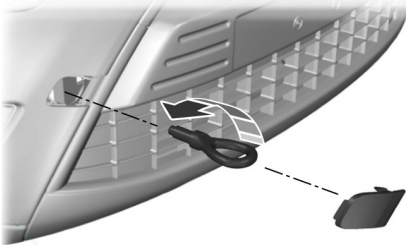


E99490

Space is provided in the spare wheel well.

You must carry the towing eye in your vehicle at all times.

Remove the cover and install the towing eye.

Rear Towing Eye

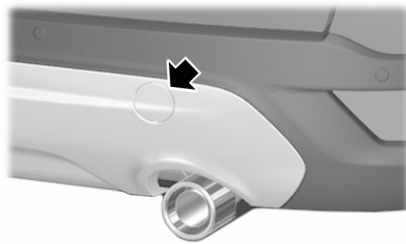

E152139

Note: *If your vehicle has a tow bar, you cannot install the towing eye at the rear of your vehicle. Use the tow bar to tow other vehicles.*

TOWING THE VEHICLE ON FOUR WHEELS

All Vehicles

WARNINGS

- ⚠ You must switch the ignition on when your vehicle is being towed.

WARNINGS

- ⚠ If your vehicle has a steering wheel lock make sure the ignition is in the accessory or on position when being towed.
- ⚠ The brake and steering assistance will not operate unless the engine is running. Press the brake pedal harder and allow for increased stopping distances and heavier steering.
- ⚠ Too much tension in the tow rope could cause damage to your vehicle or the vehicle that is towing.
- ⚠ Do not use a rigid tow bar on the front towing eye.
- ⚠ When towing your vehicle you must select neutral.

Drive off slowly and smoothly without jerking the towed vehicle.

Vehicles with Automatic Transmission

WARNINGS

- ⚠ If a speed of 12 mph (20 km/h) and a distance of 12 miles (20 kilometers) is to be exceeded the drive wheels must be lifted clear of the ground.
- ⚠ It is recommended not to tow with the drive wheels on the ground. However, if it is required to move your vehicle from a dangerous location, do not tow your vehicle faster than 12 mph (20 km/h) or further than 12 miles (20 kilometers).
- ⚠ Do not tow your vehicle backward.
- ⚠ In the event of a mechanical failure of the transmission the drive wheels must be lifted clear of the ground.

Towing

WARNINGS



Do not tow your vehicle if the ambient temperature is below 32°F (0°C).

Driving Hints

BREAKING-IN

Tires

WARNING



New tires need to be run-in for approximately 300 miles (500 kilometers). During this time, you may experience different driving characteristics.

Brakes and Clutch

WARNING



Avoid heavy use of the brakes and clutch if possible for the first 100 miles (150 kilometers) in town and for the first 1000 miles (1500 kilometers) on freeways.

Engine

WARNING



Avoid driving too fast during the first 1000 miles (1500 kilometers). Vary your speed frequently and change up through the gears early. Do not labor the engine.

Vehicles With a Diesel Engine

During the first 2000 miles (3000 kilometers), you may notice a ticking sound when your vehicle slows down. This is due to adjustments of your new diesel engine and is normal.

COLD WEATHER PRECAUTIONS

The functional operation of some components and systems can be affected at temperatures below -13°F (-25°C).

DRIVING THROUGH WATER

WARNINGS



Drive through water in an emergency only and not as part of normal driving.



Engine damage can occur if water enters the air filter.

In an emergency, you can drive your vehicle through water to a maximum depth of 8 inches (200 millimeters) and at a maximum speed of 6 mph (10 km/h). You must take extra care when driving through flowing water.

When driving in water, maintain a low speed and do not stop your vehicle. After driving through water and as soon as it is safe to do so:

- Depress the brake pedal lightly to check that the brakes are functioning correctly.
- Check that the horn works.
- Check that your vehicle's lamps are fully operational.
- Check the power assistance of the steering system.

FLOOR MATS

WARNINGS



Always use floor mats that are designed to fit the foot well of your vehicle. Only use floor mats that leave the pedal area unobstructed. Only use floor mats that are firmly secured to retention posts so that they cannot slip out of position and interfere with the pedals or impair safe operation of your vehicle in other ways.

Driving Hints

WARNINGS



Pedals that cannot move freely can cause loss of vehicle control and increase the risk of serious personal injury.



Always make sure that the floor mats are properly attached to the retention posts in the carpet that are supplied with your vehicle. Floor mats must be properly secured to both retention posts to make sure mats do not shift out of position.



Never place floor mats or any other covering in the vehicle foot well that cannot be properly secured to prevent them from moving and interfering with the pedals or the ability to control the vehicle.



Never place floor mats or any other covering on top of already installed floor mats. Floor mats should always rest on top of vehicle carpeting surface and not another floor mat or other covering. Additional floor mats or any other covering will reduce the pedal clearance and potentially interfere with pedal operation.




Check attachment of floor mats on a regular basis. Always properly reinstall and secure floor mats that have been removed for cleaning or replacement.



Always make sure that objects cannot fall into the driver foot well while the vehicle is moving. Objects that are loose can become trapped under the pedals causing a loss of vehicle control.



Failure to properly follow floor mat installation or attachment instructions can potentially cause interference with pedal operation causing a loss of vehicle control.

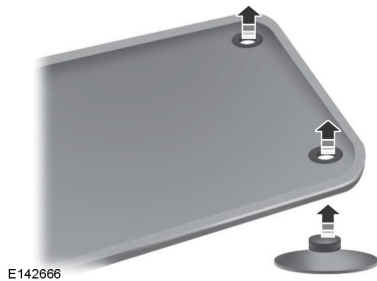

E142666

To install floor mats, position the floor mat so that the eyelet is over the retention post and press down to lock in.

To remove the floor mat, reverse the installation procedure.

Roadside Emergencies

HAZARD WARNING FLASHERS



The hazard warning button is located on the instrument panel. Use it when your vehicle is creating a safety hazard for other motorists.

Press the button to turn on the hazard warning function, and the front and rear direction indicators will flash.

Press the button again to turn them off.

Note: *If used when the engine is not running, the battery will lose charge. There may be insufficient power to restart your engine.*

Note: *Depending on applicable laws and regulations in the country for which your vehicle was originally built, the hazard warning flashers may flash if you brake heavily.*

FIRST AID KIT (If Equipped)

Space is provided in the rear underfloor storage compartment. See **Rear Under Floor Storage** (page 162).

WARNING TRIANGLE

Space is provided in the luggage compartment.

FUEL SHUTOFF

WARNING



Failure to inspect and, if necessary, repair fuel leaks after a collision may increase the risk of fire and serious injury. Ford Motor Company recommends that the fuel system be inspected by an authorized dealer after any collision.

In the event of a moderate to severe collision, this vehicle includes a fuel pump shutoff feature that stops the flow of fuel to the engine. Not every impact will cause a shutoff.

Should your vehicle shut off after a collision, you may restart your vehicle. For vehicles equipped with a key system:

1. Switch off the ignition.
2. Switch on the ignition.
3. Repeat Steps 1 and 2 to re-enable the fuel pump.

For vehicles equipped with a push button start system:

1. Press the **START/STOP** button to switch off the ignition.
2. Press the brake pedal and press the **START/STOP** button to switch on the ignition.
3. Remove your foot from the brake pedal and press the **START/STOP** button to switch off the ignition.
4. You can either attempt to start the engine by pressing the brake pedal and the **START/STOP** button, or switch on the ignition only by pressing the **START/STOP** button without pressing the brake pedal. Both ways re-enable the fuel system.




Note: *When you try to restart your vehicle after a fuel shutoff, the vehicle makes sure that various systems are safe to restart. Once your vehicle determines that the systems are safe, then the vehicle will allow you to restart.*

Note: *In the event that your vehicle does not restart after your third attempt, contact an authorized dealer.*

Roadside Emergencies


JUMP STARTING THE VEHICLE

WARNINGS

-  Do not use fuel lines, engine rocker covers or the intake manifold as grounding points.
-  Connect batteries with only the same nominal voltage.
-  Always use booster cables with insulated clamps and adequate size cable.

Note: Do not disconnect the battery from your vehicle's electrical system.

To Connect the Booster Cables

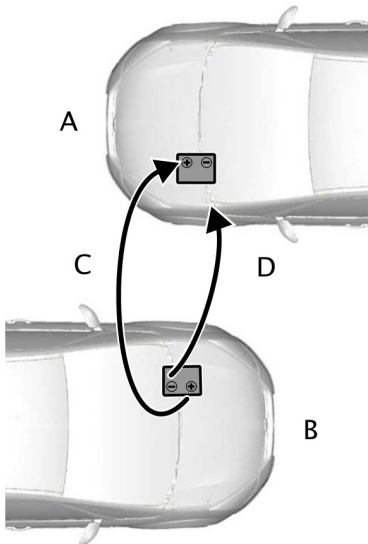


E102925

- A Flat battery vehicle
- B Booster battery vehicle

- C Positive connection cable
- D Negative connection cable

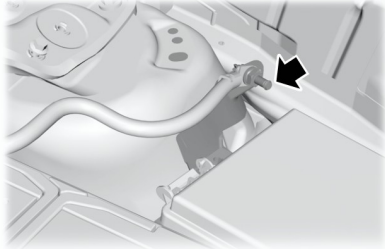

1. Position the vehicles so that they do not touch one another.
2. Switch off the engine and any electrical equipment.
3. Connect the positive (+) terminal of vehicle B with the positive (+) terminal of vehicle A (cable C).



E152134

4. Connect the negative (-) terminal of vehicle B to the ground connection of vehicle A (cable D).

WARNINGS

-  Do not connect directly to the negative (-) terminal of the flat battery.
-  Make sure that the cables are clear of any moving parts and fuel delivery system parts.

To Start the Engine

1. Run the engine of vehicle B at a moderately high speed.
2. Start the engine of vehicle A.
3. Run both vehicles for a minimum of three minutes before disconnecting the cables.

Roadside Emergencies

WARNING




Do not switch the headlamps on when disconnecting the cables. The peak voltage could blow the bulbs.

Disconnect the cables in the reverse order.

Fuses

FUSE BOX LOCATIONS


Pre-Fuse Box

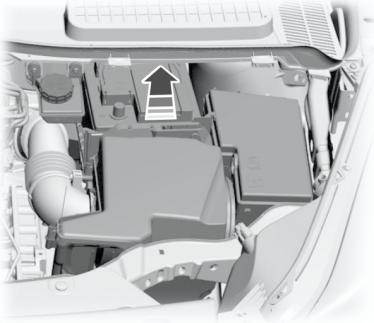

E152422

Your vehicle has a pre-fuse box located in the engine compartment attached to the positive battery post. This box contains several high current fuses. If replacement of these high current fuses is required, see an authorized dealer.

Engine Compartment Fuse Box

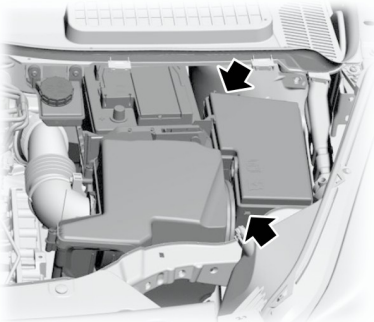

E152423

WARNINGS



Always disconnect the battery before servicing high current fuses.

WARNINGS




To reduce risk of electrical shock, always replace the cover to the engine compartment fuse box before reconnecting the battery or refilling fluid reservoirs.

The engine compartment fuse box has high-current fuses that protect your vehicle's main electrical systems from overloads.

When you disconnect and reconnect the battery, you will need to reset some features. See **Changing the 12V Battery** (page 195).

Lift the release lever at the rear of the cover to remove it.

Passenger Compartment Fuse Box

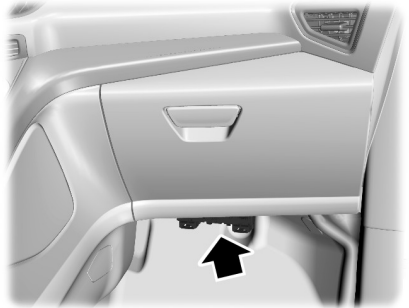


E159113

The fuse box is located below the glove box.

Fuses

Luggage Compartment Fuse Box


The fuse box is located in the luggage compartment behind the passenger side wheel well. Remove the fuse panel cover to gain access to the fuses.

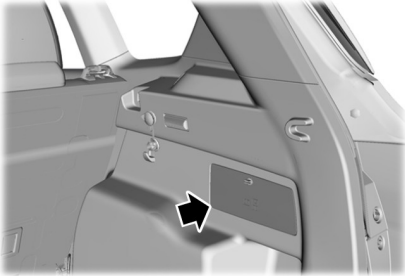

E152425

FUSE SPECIFICATION CHART

Engine Compartment Fuse Box

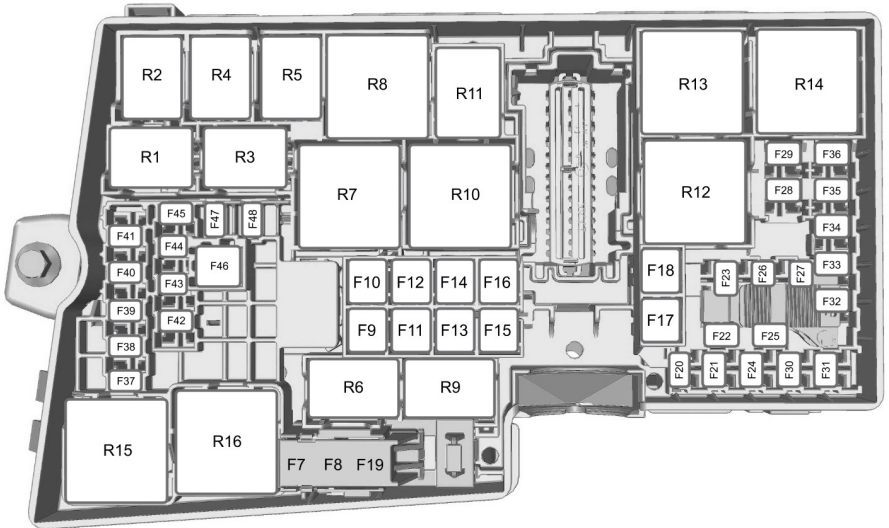

E157389

Fuses

Fuse	Fuse rating	Circuits protected
F1	-	Not used.
F2	-	Not used.
F3	-	Not used.
F4	-	Not used.
F5	-	Not used.
F6	-	Not used.
F7	40A**	Anti-lock brake system. Electronic stability program.
F8	30A**	Electronic stability program.
F9	20A**	Headlamp washer.
F10	40A**	Blower motor.
F11	30A**	Voltage quality module. Body control module.
F12	30A**	Powertrain control module.
F13	30A**	Starter relay.
F14	40A**	Right-hand heated windshield element.
F15	20A**	Cigar lighter. Auxiliary power points.
F16	40A**	Left-hand heated windshield element.
F17	20A**	Auxiliary heater.
F18	-	Not used.
F19	5A*	Anti-lock brake system. Electronic stability program.
F20	15A*	Horn.
F21	5A*	Brake lamps.
F22	15A*	Battery monitor system.

Fuses

Fuse	Fuse rating	Circuits protected
F23	5A*	Relay coils.
F24	5A*	Lighting control.
F25	-	Not used.
F26	5A*	Engine control relay coil feed - vehicles with a gasoline engine.
F26	15A*	Engine control relay coil feed - vehicles with a diesel engine. Transmission control module - vehicles with a diesel engine.
F27	15A*	Air conditioning clutch.
F28	5A*	Adaptive cruise control - vehicles with start-stop.
F29	25A*	Rear window defroster.
F30	-	Not used.
F31	-	Not used.
F32	15A*	Engine control module.
F33	10A*	Engine control module.
F34	10A*	Engine control module.
F35	15A*	Engine control module.
F36	5A*	Active grill shutters.
F37	5A*	Passenger airbag deactivation indicator feed.
F38	5A*	Engine control module . Transmission control module.
F39	5A*	Headlamps. Headlamp leveling.
F40	5A*	Electronic power assist steering.
F41	20A*	Body control module.

Fuses

Fuse	Fuse rating	Circuits protected
F42	15A*	Rear window wiper.
F43	15A*	Headlamps.
F44	5A*	Adaptive cruise control - vehicles without start-stop.
F45	10A*	Heated washer nozzle.
F46	40A**	Autowipers.
F47	-	Not used.
F48	15A*	Diesel particulate filter vaporizer.

*Mini fuses



**Cartridge fuses

Relay	Circuits switched
R1	Not used.
R2	Horn.
R3	Diesel particulate filter vaporizer.
R4	Not used.
R5	Not used.
R6	Not used.
R7	Heated windshield.
R8	Not used.
R9	Headlamp washer.
R10	Starter motor.
R11	Air conditioning clutch.
R12	Cooling fan.
R13	Blower motor.

Fuses

Relay	Circuits switched
R14	Engine control module.
R15	Heated rear window.
R16	Ignition.

Passenger Compartment Fuse Box

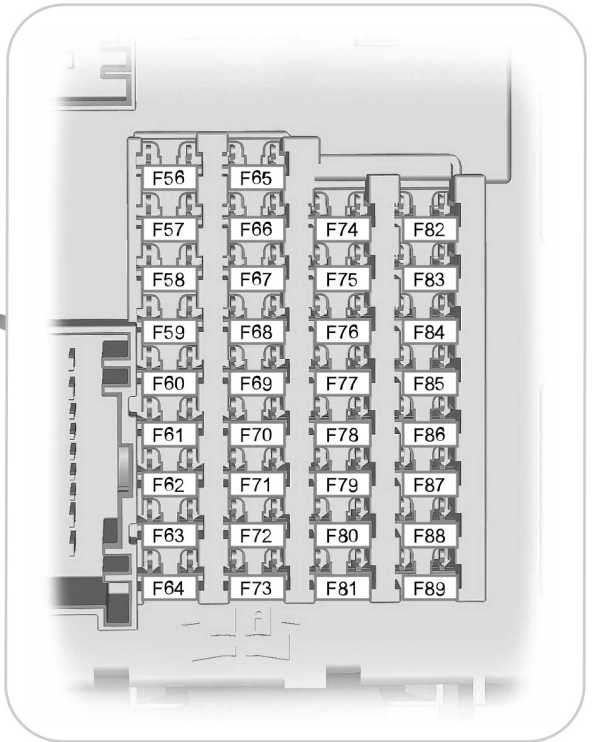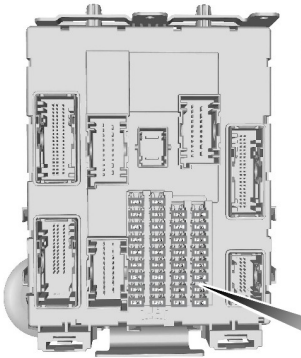

E129926


Fuses

Fuse	Fuse rating	Circuits protected
F56	20A	Fuel pump.
F57	-	Not used.
F58	-	Not used.
F59	5A	Passive anti-theft transceiver.
F60	10A	Interior lighting. Driver door switch pack. Glove box lamp. Overhead console switch bank.
F61	-	Not used.
F62	5A	Autowipers. Auto-dimming interior mirror.
F63	10A	Adaptive cruise control - front sensing module.
F64	-	Not used.
F65	10A	Liftgate release.
F66	-	Not used.
F67	7.5A	SYNC module. Front control/display interface module. Global positioning system module.
F68	15A	Electric steering column lock.
F69	5A	Instrument cluster.
F70	-	Not used.
F71	10A	Heating control head - manual air conditioning. Duel electronic automatic temperature control.
F72	7.5A	Steering wheel module.
F73	7.5A	Data link connector. Battery backup sounder.
F74	15A	High beam.
F75	15A	Rear fog lamp.
F76	10A	Reversing lamps.
F77	20A	Windshield washer pump.

Fuses

Fuse	Fuse rating	Circuits protected
F78	5A	Ignition switch. Push button ignition switch.
F79	15A	Audio unit. Navigation DVD player. Touch screen. Hazard flasher switch. Door lock switch.
F80	20A	Moonroof.
F81	5A	Radio frequency receiver. Interior motion sensor.
F82	20A	Windshield washer pump.
F83	20A	Central locking system.
F84	-	Not used.
F85	7.5A	Ignition switch.
F86	10A	Air bag module. Occupant classification system. Passenger air bag deactivation indicator.
F87	-	Not used.
F88	-	Not used.
F89	-	Not used.

Luggage Compartment Fuse Box

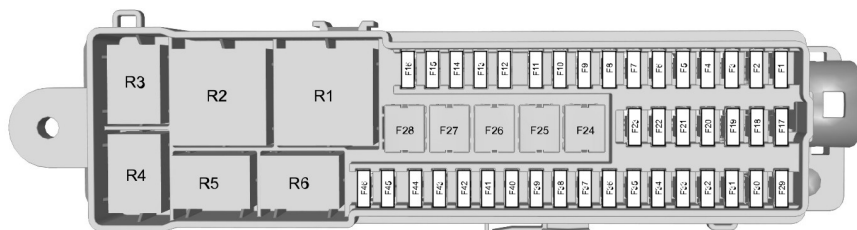

E129927

Fuses

Fuse	Fuse rating	Circuits protected
F1	5A	Hands-free liftgate actuation module.
F2	10A	Keyless vehicle module.
F3	5A	Keyless vehicle door handles.
F4	25A	Front left door control unit.
F5	25A	Front right door control unit.
F6	25A	Rear left door control unit.
F7	25A	Rear right door control unit.
F8	-	Not used.
F9	25A	Driver seat motor.
F10	-	Not used.
F11	5A	Rear ignition relay coil feed.
F12	10A	Climate control - vehicles with start-stop.
F13	5A	Instrument cluster - vehicles with start-stop.
F14	7.5A	Information and entertainment display. SYNC module. Global positioning system module - vehicles with start-stop.
F15	15A	Audio unit - vehicles with start-stop.
F16	-	Not used.
F17	-	Not used.
F18	-	Not used.
F19	-	Not used.
F20	-	Not used.
F21	-	Not used.
F22	-	Not used.
F23	-	Not used.
F24	30A	AC/DC auxiliary power points.
F24	20A	Rear auxiliary power points.

Fuses


Fuse	Fuse rating	Circuits protected
F25	25A	Power liftgate.
F26	40A	Accessories. Trailer tow module.
F27	20A	Luggage compartment auxiliary power points.
F28	-	Not used.
F29	5A	Blind spot monitor. Front camera sensor. Adaptive cruise control. Rear view camera with park assist. Voltage quality module ignition signal.
F30	5A	Parking aid button.
F31	-	Not used.
F32	5A	DC/AC auxiliary power point ignition signal.
F33	-	Not used.
F34	20A	Driver heated seat.
F35	20A	Passenger heated seat.
F36	-	Not used.
F37	-	Not used.
F38	-	Not used.
F39	-	Not used.
F40	-	Not used.
F41	-	Not used.
F42	-	Not used.
F43	-	Not used.
F44	-	Not used.
F45	-	Not used.
F46	10A	Blind spot monitor. Front camera sensor. Adaptive cruise control. Rear view camera with park assist - vehicles with start-stop.


Fuses


Relay	Circuits switched
R1	Ignition switch.
R2	Not used.
R3	Not used.
R4	Not used.
R5	Not used.
R6	Not used.


CHANGING A FUSE

WARNINGS

 Do not modify the electrical system of your vehicle in any way. Have repairs to the electrical system and the replacement of relays and high current fuses carried out by an authorized dealer.

 Switch the ignition and all electrical equipment off before attempting to change a fuse.

 Always replace a fuse with one that has the specified amperage rating. Using a fuse with a higher amperage rating can cause severe wire damage and could start a fire.

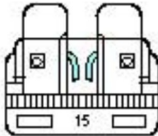

E142430

If electrical components in your vehicle are not working, a fuse may have blown. A break in the fuse wire will indicate a blown fuse. Check the appropriate fuses before replacing any electrical components.

Maintenance

GENERAL INFORMATION

Have your vehicle serviced regularly to help maintain its roadworthiness and resale value. There is a large network of Ford authorized repairers that are there to help you with their professional servicing expertise. Authorized repairers are best qualified to service your vehicle properly and expertly, with a wide range of highly specialized tools.

In addition to regular servicing, we recommend that you carry out the following checks.

WARNINGS



Switch the ignition off before touching or attempting adjustment of any kind.



Do not touch the electronic ignition system parts after you have switched the ignition on or when the engine is running. The system operates at high voltage.



Keep your hands and clothing clear of the engine cooling fan. Under certain conditions, the fan may continue to run for several minutes after you have switched the engine off.



Make sure that you fit filler caps securely after carrying out maintenance checks.

Daily Checks

- Exterior lamps.
- Interior lamps.
- Warning lamps and indicators.

Check When Refueling

- Engine oil level. See **Engine Oil Check** (page 193).
- Brake fluid level.

- Washer fluid level. See **Washer Fluid Check** (page 195).
- Tire pressures (when cold). See **Technical Specifications** (page 224).
- Tire condition. See **Wheels and Tires** (page 209).

Monthly Checks

- Engine coolant level (engine cold). See **Engine Coolant Check** (page 194).
- Pipes, hoses and reservoirs for leaks.
- Air conditioning operation.
- Parking brake operation.
- Horn operation.
- Tightness of lug nuts. See **Technical Specifications** (page 224).

OPENING AND CLOSING THE HOOD


Opening the Hood



E142457


1. Pull the hood release lever.
2. Slightly lift the hood.

Maintenance

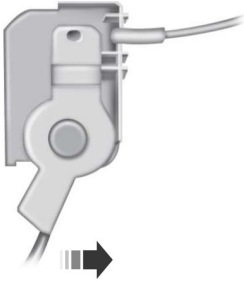

E142458

3. Move the catch to the right to release the hood.

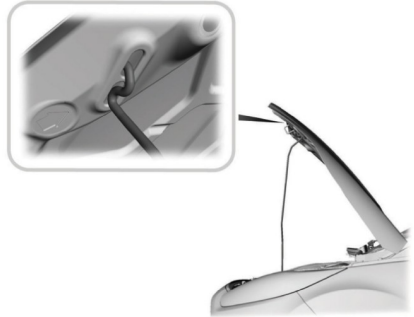

E87786

4. Open the hood and support it with the hood strut.


Closing the Hood

1. Remove the hood strut from the catch and secure it correctly in the clip.
2. Lower the hood and allow it to drop under its own weight for the last 8-12 in (20-30 cm).

Note: *Make sure that the hood is correctly closed.*

Maintenance

UNDER HOOD OVERVIEW - 1.6L ECOBOOST™

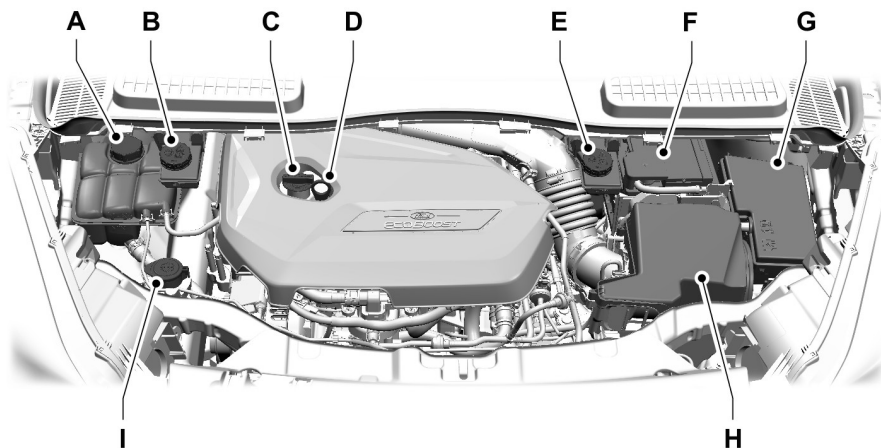


E158410

- A Engine coolant reservoir*: See **Engine Coolant Check** (page 194).
- B Brake fluid reservoir (right-hand drive)*: See **Brake Fluid Check** (page 194).
- C Engine oil filler cap*: See **Engine Oil Check** (page 193).
- D Engine oil dipstick*: See **Engine Oil Check** (page 193).
- E Brake fluid reservoir (left-hand drive)*: See **Brake Fluid Check** (page 194).
- F Battery: See **Changing the 12V Battery** (page 195).
- G Engine compartment fuse box: See **Fuses** (page 176).
- H Air cleaner: No maintenance necessary.
- I Windshield and rear window washer fluid reservoir: See **Washer Fluid Check** (page 195).

* The filler caps and the engine oil dipstick are colored for easy identification.

Maintenance

UNDER HOOD OVERVIEW - 2.0L ECOBOOST™

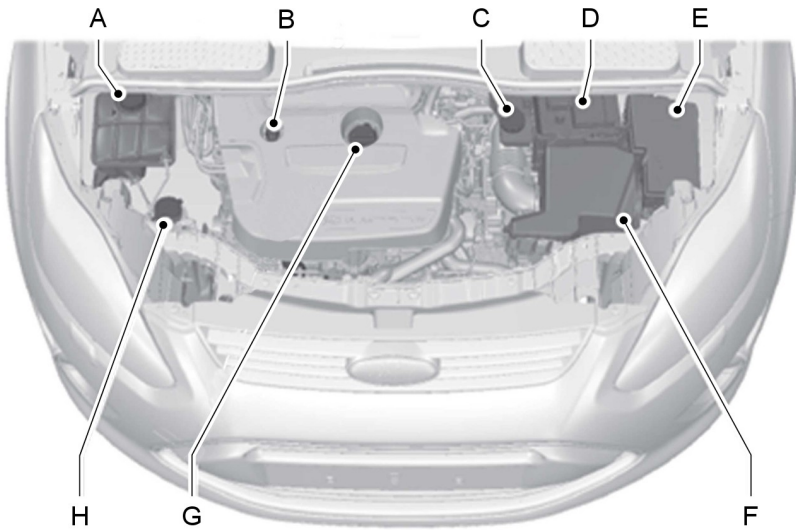


E146022

- A Engine coolant reservoir
- B Engine oil dipstick
- C Brake fluid reservoir
- D Battery
- E Power distribution box
- F Air filter assembly
- G Engine oil filler cap
- H Windshield washer fluid reservoir

Maintenance

UNDER HOOD OVERVIEW - 2.0L DURATORQ-TDCI (DW) DIESEL

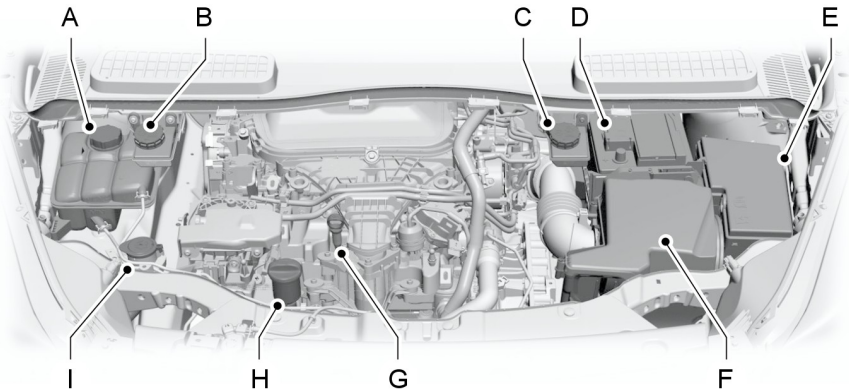


E152530

- A Engine coolant reservoir*: See **Engine Coolant Check** (page 194).
- B Brake fluid reservoir (right-hand drive)*: See **Brake Fluid Check** (page 194).
- C Brake fluid reservoir (left-hand drive)*: See **Brake Fluid Check** (page 194).
- D Battery: See **Changing the 12V Battery** (page 195).
- E Engine compartment fuse box: See **Fuses** (page 176).
- F Air cleaner: No maintenance necessary.
- G Engine oil dipstick*: See **Engine Oil Check** (page 193).
- H Engine oil filler cap*: See **Engine Oil Check** (page 193).
- I Windshield and rear window washer fluid reservoir: See **Washer Fluid Check** (page 195).

* The filler caps and the engine oil dipstick are colored for easy identification.

Maintenance

UNDER HOOD OVERVIEW - 1.5L ECOBOOST™

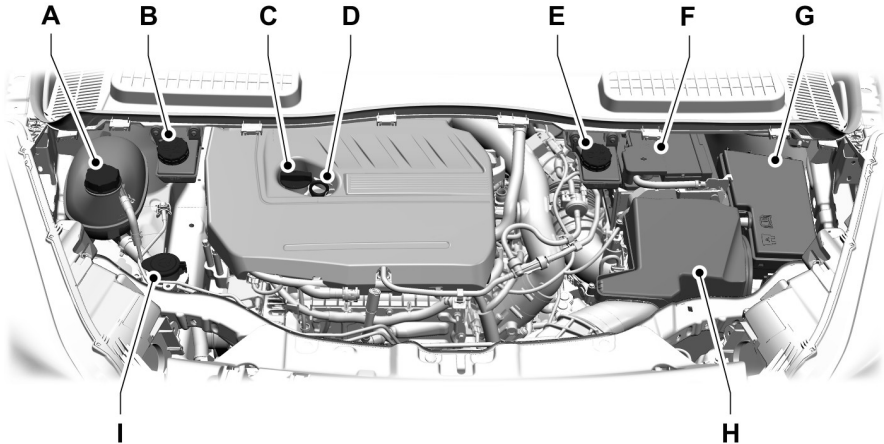


E190470

- A Engine coolant reservoir*: See **Engine Coolant Check** (page 194).
- B Brake fluid reservoir (right-hand drive)*: See **Brake Fluid Check** (page 194).
- C Engine oil filler cap*: See **Engine Oil Check** (page 193).
- D Engine oil dipstick*: See **Engine Oil Check** (page 193).
- E Brake fluid reservoir (left-hand drive)*: See **Brake Fluid Check** (page 194).
- F Battery: See **Changing the 12V Battery** (page 195).
- G Engine compartment fuse box: See **Fuses** (page 176).
- H Air cleaner: No maintenance necessary.
- I Windshield and rear window washer fluid reservoir: See **Washer Fluid Check** (page 195).

* The filler caps and the engine oil dipstick are colored for easy identification.

Maintenance


ENGINE OIL DIPSTICK - 1.5L ECOBOOST™

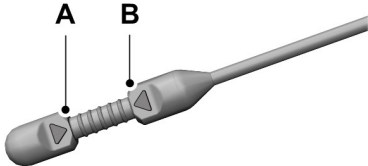

E188072

- A Minimum.
- B Maximum.


ENGINE OIL DIPSTICK - 2.0L DURATORQ-TDCI (DW) DIESEL

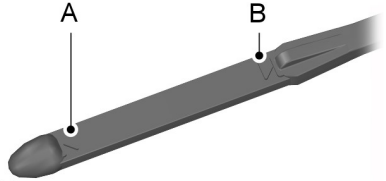

E95543

- A Minimum
- B Maximum

ENGINE OIL DIPSTICK - 2.0L ECOBOOST™

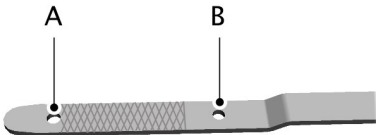

E169062

- A Minimum.
- B Maximum.

ENGINE OIL CHECK

1. Make sure that your vehicle is on level ground.
2. Switch off the engine and wait 10 minutes for the oil to drain into the oil pan.
3. Remove the dipstick and wipe it with a clean, lint free cloth. Replace the dipstick and remove it again to check the oil level.

If the oil level is at the minimum mark, add oil immediately. See **Capacities and Specifications** (page 228).

Note: Check the oil level before starting the engine.

Note: Make sure that the oil level is between the minimum and the maximum marks.

Note: Do not use oil additives or other engine treatments. Under certain conditions, they may damage the engine.

Note: The oil consumption of new engines reaches its normal level after approximately 3000 miles (5000 kilometers).

Maintenance

Adding Oil

WARNINGS



Only add oil when the engine is cold. If the engine is hot, wait 10 minutes for the engine to cool down. Failure to take care may result in personal injury.



Do not remove the filler cap when the engine is running. Failure to take care may result in personal injury.

1. Remove the filler cap.
2. Add oil that meets Ford specifications. See **Capacities and Specifications** (page 228).
3. Replace the filler cap. Turn it until you feel a strong resistance.

Note: Do not add oil further than the maximum mark. Oil levels above the maximum mark may cause engine damage.

Note: Soak up any spillage with an absorbent cloth immediately.

ENGINE COOLANT CHECK

WARNING



Do not allow the fluid to touch your skin or eyes. If this happens, rinse the affected areas immediately with plenty of water and contact your physician.

Note: Make sure that the level is between the **MIN** and the **MAX** marks.

Note: Coolant expands when it is hot. The level may therefore extend beyond the **MAX** mark.

If the level is at the **MIN** mark, add coolant immediately.

Adding Engine Coolant

WARNINGS



Only add coolant when the engine is cold. If the engine is hot, wait 10 minutes for the engine to cool down.



Do not remove the filler cap when the engine is running.



Do not remove the filler cap when the engine is hot. Wait for the engine to cool down.



Undiluted coolant is flammable and may ignite if spilt on a hot exhaust.

Note: In an emergency, you can add just water to the cooling system to reach a vehicle service station. Have the system checked by an authorized dealer as soon as possible.

Note: Prolonged use of incorrect dilution of the coolant can cause engine damage from corrosion, overheating or freezing.

Note: Do not add coolant further than the **MAX** mark.

1. Remove the filler cap. Any pressure will escape slowly as you unscrew the cap.
2. Add a 50/50 mixture of coolant and water using fluid that meets the Ford specifications. See **Capacities and Specifications** (page 228).
3. Replace the filler cap. Turn it until you feel a strong resistance.

BRAKE FLUID CHECK

Fluid levels between the MIN and MAX lines are within the normal operating range; there is no need to add fluid. If the fluid levels are outside of the normal operating range, the performance of the system could be compromised; seek service from your authorized dealer immediately.

Maintenance

WASHER FLUID CHECK

Note: The reservoir supplies the front and rear washer systems.

When adding fluid, use a mixture of washer fluid and water to help prevent freezing in cold weather and improve the cleaning capability. We recommend that you use only high quality washer fluid.

For information on fluid dilution, refer to the product instructions.

CHANGING THE 12V BATTERY

WARNING



For vehicles with start-stop the battery requirement is different. You must replace the battery with one of exactly the same specification.

Note: Where applicable you must reprogram the audio system using the keycode.

The battery is located in the engine compartment. See **Maintenance** (page 187).

CHECKING THE WIPER BLADES



E142463


Run the tip of your fingers over the edge of the blade to check for roughness.

Clean the wiper blades with washer fluid or water applied with a soft sponge or cloth.

CHANGING THE WIPER BLADES

The wiper arms can be manually moved when the ignition is off. This allows for ease of blade replacement and cleaning under the blades.

1. Pull the wiper blade and arm away from the glass.

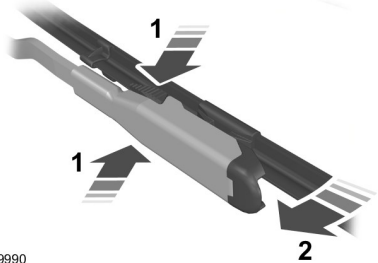

E129990


2. Press the locking buttons together.
3. Rotate and remove the wiper blade.
4. Install in the reverse order.

Note: Make sure that the wiper blade locks into place. Lower the wiper arm and blade back to the windshield. The wiper arms will automatically return to their normal position when the ignition is turned on.

To change the rear blades, do the following:

1. Lift the wiper arm.

Maintenance

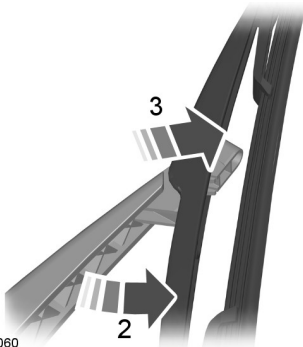

E130060


2. Slightly rotate the wiper blade from the wiper arm.
3. Disengage the wiper blade from the wiper arm.
4. Remove the wiper blade.
5. Install in the reverse order.

Note: Make sure that the wiper blade locks into place.

Replace wiper blades at least once per year for optimum performance.

Poor wiper quality can be improved by cleaning the wiper blades and the windshield.

REMOVING A HEADLAMP

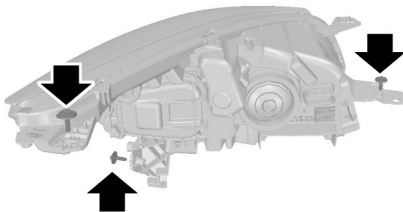

E159160

1. Make sure the lighting control is in the off position and open the hood.

2. Remove the three screws from the headlamp assembly.
3. Carefully pull the headlamp assembly as far as possible toward the front of your vehicle to disengage it from the lower fixing point.
4. Carefully lift the outer side of the headlamp and remove it.
5. Disconnect the electrical connector.

CHANGING A BULB

WARNINGS



Switch the lamps and the ignition off.




Let the bulb cool down before removing it.

Note: Only fit bulbs of the correct specification.

Note: The following instructions describe how to remove the bulbs. Fit replacements in the reverse order unless otherwise stated.

Headlamp

Type 1

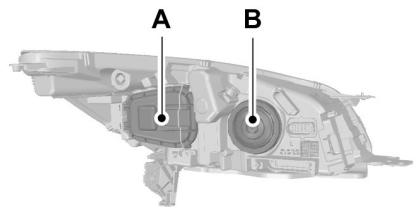


E159161

- A Low beam headlamp
B High beam and daytime running lamp

Maintenance

Headlamp High Beam

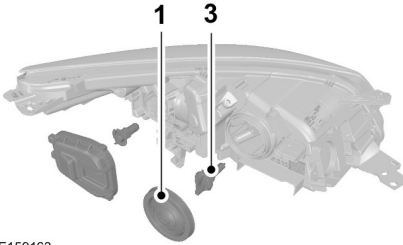


E159163

1. Remove the cover.
2. Disconnect the electrical connector.
3. Turn the bulb counterclockwise and pull it straight out to remove it.

Note: Do not touch the glass of the bulb.

Headlamp Low Beam

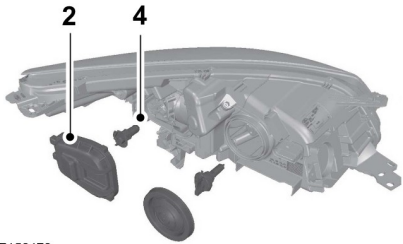


E159179

1. Release the metal retaining clip.
2. Remove the cover.
3. Disconnect the electrical connector.
4. Remove the bulb.

Note: Do not touch the glass of the bulb.


Type 2

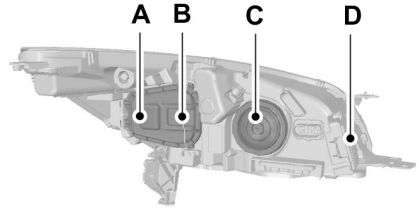

E159162

- A Low beam headlamp
- B High beam headlamp
- C Fixed bending light
- D Daytime running lamp and park position

Headlamp High Beam

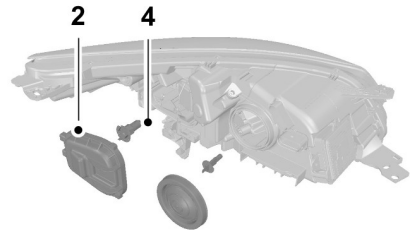


E159180

1. Release the metal retaining clip.
2. Remove the cover.
3. Disconnect the electrical connector.
4. Remove the bulb.

Note: Do not touch the glass of the bulb.

Maintenance

Headlamp Fixed Bending Light Bulb

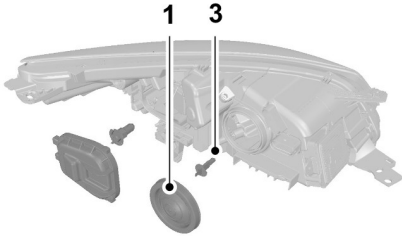


E159164

1. Remove the cover.
2. Disconnect the electrical connector.
3. Turn the bulb counterclockwise and pull it straight out to remove it.

Note: Do not touch the glass of the bulb.

Direction Indicator, Front Fog Lamp and Position Lamp

Note: The position and direction indicator bulbs are not serviceable items, see an authorized dealer if they fail.

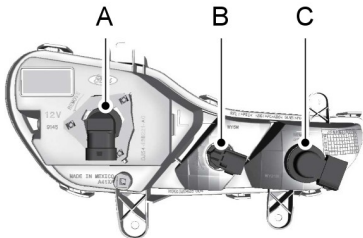

E142797

- A Fog lamp
- B Park lamp
- C Direction indicator lamp



E142798

1. Turn the steering wheel to full lock.
2. Remove the retaining clips from the front wheel splash shield to gain access to the lamp assembly.




E159629

3. Remove the bulb holder from the lamp assembly by turning it counterclockwise.
4. Disconnect the electrical connector.
5. Remove the bulb from the bulb holder by pulling it straight out.


Maintenance

Side Repeater

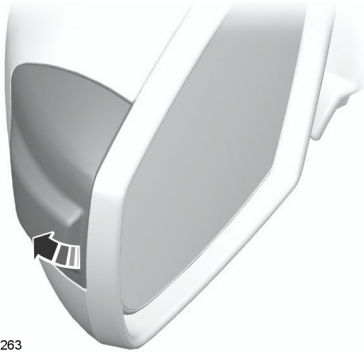

E72263

1. Carefully remove the side repeater.

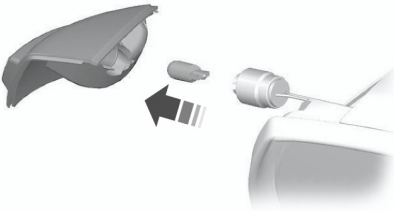

E72291

2. Remove the bulb holder.
3. Remove the bulb.


Approach Lamp

Note: Position the mirror glass as far inward as possible.



E72264

1. Insert a screwdriver into the gap between the mirror housing and the mirror glass and release the metal retaining clip.

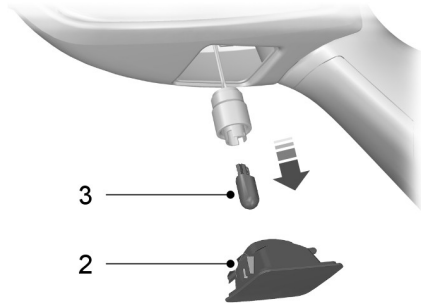

E72265


2. Remove the lamp.
3. Remove the bulb.

Maintenance

Rear Lamps

Type 1

Direction Indicator, Tail and Brake Lamp

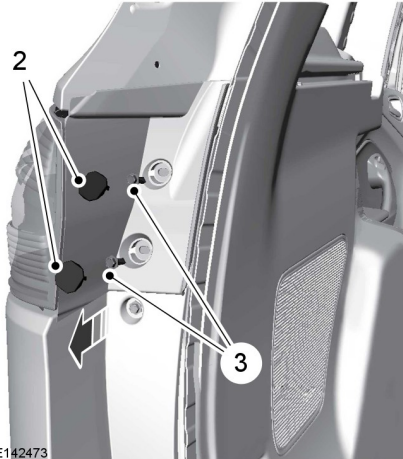

E142473

1. Make sure the lighting control is in the off position and open the liftgate.
2. Remove the two bolt covers using a standard flat tip screwdriver.
3. Remove the two bolts from the lamp assembly.
4. Gently pull the lamp assembly away from your vehicle.

Type 2

Direction Indicator

Follow the same procedure as type 1 to remove the direction indicator bulb.


Note: *The tail and brake lamp bulbs are not serviceable items, see an authorized dealer if they fail.*

Reversing Lamp



E159417


1. Insert a suitable object to pry open the trim panel.

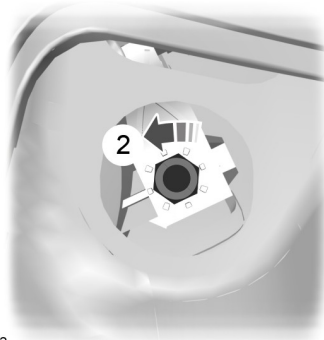

E99412

2. Remove the nut from the lamp assembly.
3. Gently pull the lamp assembly away from your vehicle.


Maintenance

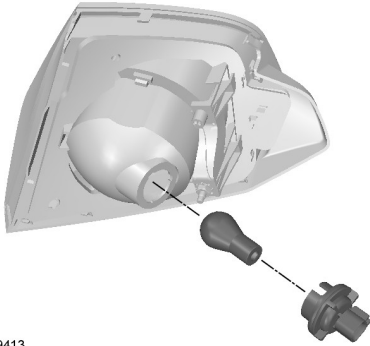

E99413

4. Gently press the bulb into the bulb holder, turn it counterclockwise and remove it.

Rear Fog Lamp

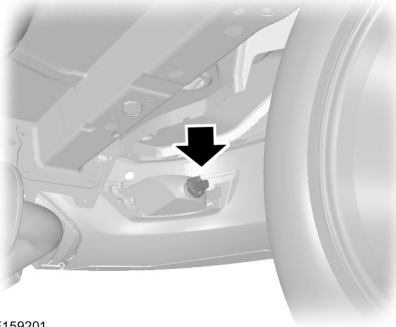


E159201

1. Disconnect the electrical connector.
2. Turn the bulb counterclockwise and pull it straight out to remove it.

Central High Mounted Brake Lamp

These are not serviceable items, see an authorized dealer if they fail.


License Plate Lamp

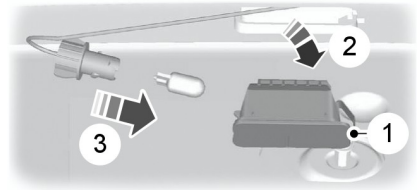

E72789

1. Carefully release the spring clip.
2. Remove the lamp.
3. Turn the bulb counterclockwise and remove it.

Interior lamp

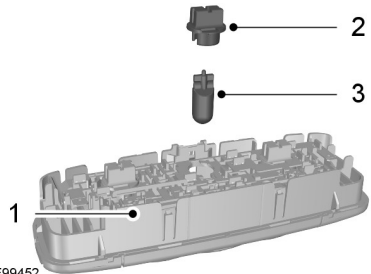


E99452

1. Carefully remove the lamp.
2. Turn the bulb holder counterclockwise and remove it.
3. Remove the bulb.

Maintenance


Reading lamps

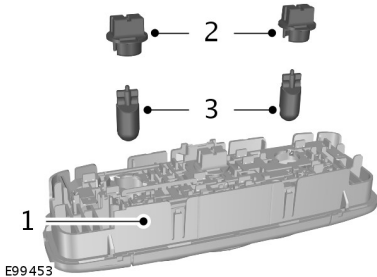

E99453

1. Carefully remove the lamp.
2. Turn the bulb holder counterclockwise and remove it.
3. Remove the bulb.

Luggage Compartment Lamp, Footwell Lamp and Liftgate Lamp

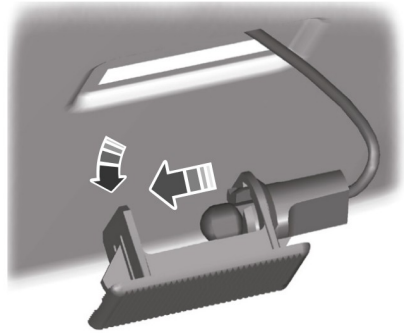

E72784

1. Carefully prize out the lamp.
2. Remove the bulb.

BULB SPECIFICATION CHART

Exterior Lamps

Lamp	Specification	Power (Watt)
Front side lamp.	W5W	5
Front direction indicator.	PY21W	21
Daytime running lamps.	LED	LED
Headlamp high beam.	H15	55
Headlamp low beam.	H7	55
High-intensity discharge headlamps.	D3S	HID
Cornering lamps.	H11	55
Front fog lamp.	H11	55
Side direction indicator.	WY5W	5
Brake and rear lamp.	LED	LED
Central high mounted brake lamp.	LED	LED

Maintenance

Lamp	Specification	Power (Watt)
Rear direction indicator.	PY21W	21
Rear fog lamp.	P21W	21
Reversing lamps.	P21W	21
License plate lamp.	W5W	5

Note: LED lamps are not serviceable. See an authorized dealer if they fail.

Interior Lamps

Lamp	Specification	Power (Watt)
Glove compartment lamp.	W6W	6
Interior lamp.	LED	LED
Vanity mirror lamp.	211 Festoon	10
Luggage compartment lamp.	211 Festoon	10

Note: LED lamps are not serviceable. See an authorized dealer if they fail.

Maintenance

TECHNICAL SPECIFICATIONS

Vehicle Fluids

Note: Use fluids which meet the specifications or requirements defined. Use of other fluids may lead to damage which is not covered by your vehicle's warranty.

Item	Specification	Viscosity Grade	Recommended fluid
Engine oil - gasoline engines only	WSS-M2C948-B	5W-20	Castrol or Ford Engine Oil
Alternative engine oil - all gasoline engines	WSS-M2C913-C	5W-30	Castrol or Ford Engine Oil
Engine oil - diesel engines	WSS-M2C913-C	5W-30	Castrol or Ford Engine Oil
Engine coolant	WSS-M97B44-D	-	Motorcraft SuperPlus Antifreeze
Brake fluid	WSS-M6C65-A2	-	Motorcraft or Ford DOT 4 LV High Performance Brake Fluid

The engine has been designed to be used with Castrol and Ford Engine Oil, which gives a fuel economy benefit while maintaining the durability of the engine.

Adding oil: If you are unable to find an oil that meets the specification defined by WSS-M2C913-C or WSS-M2C948-B (gasoline engines only), you must use SAE 5W-30 that meets the specification defined by ACEA A5/B5.

Using oils other than the one specified can result in longer engine cranking periods, reduced engine performance, reduced fuel economy and increased emission levels.

Castrol engine oil recommended.



Maintenance

Variant	Item	Capacity in gallons (litres)
All	Windshield and rear window washer system - including headlamp washer	1.2 (4.5)
All	Windshield and rear window washer system - excluding headlamp washer	0.8 (3)
1.6L EcoBoost	Engine cooling system	1.7 (6.3)
2.0L Duratorq-TDCi (DW) Diesel	Engine cooling system	2.2 (8.5)
2.5L Engine	Engine cooling system	2.2 (8.4)
Vehicles with a gasoline engine	Fuel tank	13.2 (60)
Vehicles with a diesel engine	Fuel tank	13.2 (60)
1.6L EcoBoost	Engine lubrication system - including the oil filter	1 (3.8)
1.6L EcoBoost	Engine lubrication system - excluding the oil filter	0.8 (3)
2.0L Duratorq-TDCi (DW) Diesel	Engine lubrication system - including the oil filter	1.5 (5.7)
2.0L Duratorq-TDCi (DW) Diesel	Engine lubrication system - excluding the oil filter	1.4 (5.4)
2.5L Engine	Engine lubrication system - including the oil filter	1.4 (5.4)
2.5L Engine	Engine lubrication system - excluding the oil filter	1.3 (5.1)

Maintenance

Engine Oil Adding Capacities

Engine	Capacity in gallons (litres)
1.6L EcoBoost	0.1 (0.5)
2.0L Duratorq-TDCi (DW) Diesel	0.4 (1.8)
2.5L Engine	0.2 (0.8)

Vehicle Care

CLEANING THE EXTERIOR

We recommend that you wash your vehicle regularly with a sponge and lukewarm water containing a neutral pH car shampoo.

Never use strong household detergents or soap, such as dish washing or laundry liquid. These products can discolor and can cause spotting on painted surfaces.

Never wash your vehicle when it is hot to the touch or during exposure to strong, direct sunlight.

Dry your vehicle with a chamois or soft terry cloth towel in order to eliminate water spotting.

Immediately remove items such as gasoline, diesel fuel, bird droppings and insect deposits as they can cause damage to your vehicle's paintwork and trim over time.

Suntan lotions and insect repellents can damage any painted surface. If these substances come in to contact with your vehicle, wash them off as soon as possible.

Using a Car Wash

WARNINGS



If you use a car wash with a waxing cycle, make sure that you remove the wax from the windshield.



Switch the heater blower off to prevent contamination of the fresh air filter.

Prior to using a car wash facility check the suitability of it for your vehicle.

Some car wash installations use water at high pressure. This could damage certain parts of your vehicle.

Remove any exterior accessories, including the antenna, before using an automatic car wash.

Cleaning the Headlamps

WARNINGS



Do not scrape the headlamp lenses or use abrasives, alcoholic solvents or chemical solvents to clean them.



Do not wipe the headlamps when they are dry.

Cleaning the Chrome Trim

Do not use abrasives or chemical solvents. Use soapy water.

Do not apply cleaning product to hot surfaces.

Do not leave cleaning product on chrome surfaces longer than recommended.

Industrial-strength (heavy-duty) cleaners, or cleaning chemicals, may cause damage over a period of time.

Underbody

Flush the complete underside of your vehicle frequently. Keep body and door drain holes free from packed dirt.

Cleaning Plastic Exterior Parts

Use only approved products to clean plastic parts.

CLEANING THE INTERIOR

Note: Do not allow air fresheners and hand sanitizers to spill on interior surfaces. If a spill occurs, wipe off immediately. Damage may not be covered by your warranty.

Safety Belts

Note: Do not use abrasives, or chemical solvents to clean them.

Note: Do not allow moisture to penetrate the safety belt retractor mechanism.

Vehicle Care

Clean them with interior cleaner or water applied with a soft sponge. Let them dry naturally, away from artificial heat.

Instrument Cluster Screens, LCD Screens and Radio Screens

Note: Do not use abrasives, alcoholic solvents or chemical solvents to clean them.

Rear Windows

Note: Do not use any abrasive materials to clean the interior of the rear windows.

Note: Do not install stickers or labels to the interior of the rear windows.

REPAIRING MINOR PAINT DAMAGE

You should repair paintwork damage caused by stones from the road or minor scratches as soon as possible. A choice of products are available from an authorized dealer.

Remove particles such as bird droppings, tree sap, insect deposits, tar spots, road salt and industrial fallout before repairing paint chips.

Always read and follow the manufacturer's instructions before using the products.

CLEANING THE ALLOY WHEELS

Note: Do not apply a cleaning chemical to warm or hot wheel rims and covers.

Note: Industrial-strength (heavy-duty) cleaners, or cleaning chemicals, in combination with brush agitation to remove brake dust and dirt, could wear away the clear coat finish over a period of time.

Note: Do not use hydrofluoric acid-based or high caustic-based wheel cleaners, steel wool, fuels or strong household detergent.

Note: If you intend parking your vehicle for an extended period after cleaning the wheels with a wheel cleaner, drive your vehicle for a few minutes before doing so. This will reduce the risk of increased corrosion of the brake discs, brake pads and linings.

Note: Some automatic car washes may cause damage to the finish on your wheel rims and covers.

Alloy wheels and wheel covers are coated with a clear coat paint finish. To maintain their condition we recommend that you:

- Clean them weekly with the recommended wheel and tire cleaner.
- Use a sponge to remove heavy deposits of dirt and brake dust accumulation.
- Rinse them thoroughly with a pressurized stream of water when you have completed the cleaning process.

We recommend that you use Ford service wheel cleaner. Make sure that you read and follow the manufacturer's instructions.

Using other non-recommended cleaning products can result in severe and permanent cosmetic damage.

Wheels and Tires

GENERAL INFORMATION

A decal with tire pressure data is located in the driver's door opening.

Check and set the tire pressure at the ambient temperature in which you are intending to drive your vehicle and when the tires are cold.

Note: Check your tire pressures regularly to optimize fuel economy.

Note: Use only approved wheel and tire sizes. Using other sizes could damage your vehicle and will make the National Type Approval invalid.

Note: If you change the diameter of the tires from that fitted at the factory, the speedometer may not display the correct speed. Take your vehicle to an authorized dealer to have the engine management system reprogrammed.

Note: If you intend to change the size of the wheels from that fitted at the factory, check the suitability with an authorized dealer.


TEMPORARY MOBILITY KIT

Your vehicle may not have a spare tire. Therefore you will have a temporary mobility kit which will only repair one damaged tire.


The kit is located in the spare wheel well.


General Information


WARNINGS

 Depending on the type and extent of tire damage, some tires can only be partially sealed or not sealed at all. Loss of tire pressure can affect vehicle handling, leading to loss of vehicle control.

WARNINGS

 Do not use the kit on a previously damaged tire, for example when it has been driven under inflated. This could cause loss of vehicle control, personal injury or death.

 Do not use the kit on run flat tires. This could cause loss of vehicle control.

 Do not try to seal damage to the tire's sidewall. The tire could burst and cause loss of vehicle control, personal injury or death.


The kit seals most tire punctures [with a diameter of up to ¼ inch (six millimetres)] to temporarily restore mobility.

You must observe the following rules when using the kit:

- Drive with caution and avoid making sudden steering or driving maneuvers, especially if your vehicle is heavily loaded or you are towing a trailer.
- The kit will provide you with an emergency temporary repair, enabling you to continue your journey to the next vehicle or tire dealer, or to drive a maximum distance of 125 miles (200 kilometers).
- Do not exceed a maximum speed of 50 mph (80 km/h).
- Keep the kit out of the reach of children.
- Only use the kit when the ambient temperature is between -40°F (-40°C) and +158°F (+70°C).


Using the Kit


WARNINGS

 Compressed air can act as an explosive or propellant which could cause serious personal injury.

Wheels and Tires

WARNINGS

 Never leave the kit unattended while in use.


 Do not keep the compressor operating for more than 10 minutes. This could cause loss of vehicle control or personal injury.

Note: *You must only use the kit for the vehicle with which it was supplied.*


- Park your vehicle at the roadside so that you do not obstruct the flow of traffic and so that you are able to use the kit without being in danger.
- Apply the parking brake, even if you have parked on a level road, to make sure that your vehicle will not move.
- Do not attempt to remove foreign objects like nails or screws penetrating the tire.
- Leave the engine running while the kit is in use, but not if your vehicle is in an enclosed or poorly ventilated area (e.g. inside a building). In these circumstances, switch the compressor on with the engine switched off.
- You must replace the sealant bottle with a new one before the expiry date (see top of bottle).
- Inform all other users of your vehicle that the tire has been temporarily sealed with the kit. Make them aware of the special driving conditions that must be observed.


Inflating the Tire


WARNINGS


 Check the sidewall of the tire prior to inflation. If there are any cracks, bumps or similar damage, do not attempt to inflate the tire. This could cause personal injury.


WARNINGS

 Do not stand directly beside the tire while the compressor is operating. This could cause personal injury if the tire bursts.


 Watch the sidewall of the tire. If any cracks, bumps or similar damage appears, switch the compressor off and let the air out by means of the pressure relief valve B. Do not continue driving with this tire. This could cause loss of vehicle control.

 The sealant contains natural rubber latex. Avoid contact with skin and clothing. If this happens, rinse the affected areas immediately with plenty of water and consult a physician.

 If the tire inflation pressure does not reach 1.8 bar (26 psi) within 10 minutes, the tire may have suffered excessive damage, making a temporary repair impossible. In this case, do not continue driving with this tire. This could cause loss of vehicle control.

 Screwing the bottle onto the bottle holder will pierce the seal of the bottle. Do not unscrew the bottle from the holder as the sealant will escape, which could cause serious personal injury.

Wheels and Tires

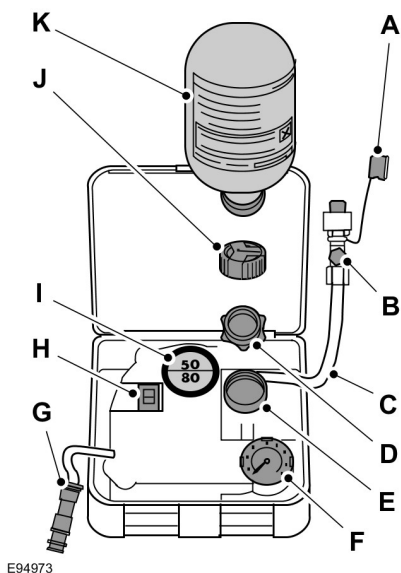

E94973

- A Protective cap
- B Pressure relief valve
- C Hose
- D Orange cap
- E Bottle holder
- F Pressure gauge
- G Power plug with cable
- H Compressor switch
- I Label
- J Bottle lid
- K Sealant bottle

1. Open the lid of the kit.

2. Peel off the label I showing the maximum permissible speed of 50 mph (80 km/h) from the casing and attach it to the instrument panel in the driver's field of view. Make sure the label does not obscure anything important.
3. Take the hose C and the power plug with cable G out of the kit.
4. Unscrew the orange cap D and the bottle lid J.
5. Screw the sealant bottle K clockwise into the bottle holder E fully tight.
6. Remove the valve cap from the damaged tire.
7. Detach the protective cap A from the hose C and screw the hose C firmly onto the valve of the damaged tire.
8. Make sure that the compressor switch H is in position 0.
9. Insert the power plug G into the cigar lighter socket or auxiliary power point. See **Auxiliary Power Points** (page 106).
10. Start the engine.
11. Move the compressor switch H to position 1.
12. Inflate the tire for no longer than 10 minutes to an inflation pressure of minimum 1.8 bar (26 psi) and a maximum of 3.5 bar (51 psi). Move the compressor switch H to position 0 and check the current tire pressure with pressure gauge F.

Note: When pumping in the sealant through the tire valve, the pressure may rise up to 6 bar (87 psi) but will drop again after about 30 seconds.

Note: After you have switched the compressor off, you may hear air escaping from the damaged tire. This is normal and can be ignored provided that the specified minimum tire pressure has been reached.

Wheels and Tires

13. Remove the power plug G from the cigar lighter socket or auxiliary power point.
14. Quickly unscrew the hose C from the tire valve and replace the protective cap A. Fasten the valve cap again.

Note: *Some residual sealant fluid may drip or spray out of hose C while you are disconnecting it. This is normal.*

15. Leave the sealant bottle K in the bottle holder E.
16. Make sure the kit, the bottle lid and the orange cap are stored safely, but still easily accessible in your vehicle. The kit will be required again when you check the tire pressure.
17. Immediately drive approximately two miles (three kilometers) so that the sealant can seal the damaged area.

WARNING



If you experience heavy vibrations, unsteady steering behavior or noises while driving, reduce your speed gradually and stop your vehicle as soon as it is safe to do so. Recheck the tire and its pressure. If the tire pressure is less than 1.3 bar (19 psi) or if there are any cracks, bumps or similar damage visible, do not continue driving with this tire. This could cause loss of vehicle control.

Checking the Tire Pressure

WARNING



Before driving, make sure the tire is adjusted to the recommended inflation pressure. See **Technical Specifications** (page 224). Monitor the tire pressure until the sealed tire is replaced.


1. Stop your vehicle after driving approximately two miles (three kilometers). Check, and where necessary, adjust the pressure of the damaged tire.
2. Attach the kit and read the tire pressure from the pressure gauge F.
3. If the pressure of the sealant-filled tire is 1.3 bar (19 psi) or more, adjust it to the specified pressure. See **Technical Specifications** (page 224).
4. Follow the inflation procedure once again to top up the tire.
5. Check the tire pressure again from the pressure gauge F. If the tire pressure is too high, deflate the tire to the specified pressure using the pressure relief valve B.
6. Once you have inflated the tire to its correct tire pressure, move the compressor switch H to position 0, remove the power plug G from the socket, unscrew the hose C, fasten the valve cap and replace the protective cap A.
7. Leave the sealant bottle K in the bottle holder E and store the kit away safely in its original location.
8. Drive to the nearest tire specialist to get the damaged tire replaced. Before the tire is removed from the rim, inform your tire dealer that the tire contains sealant. You must renew the sealant bottle K and hose C as soon as possible once used.

Note: *Remember that this kit only provides temporary mobility. Regulations concerning tire repair after usage of the kit may differ from country to country. You should consult a tire specialist for advice.*

Empty sealant bottles can be disposed of together with normal household waste. Return remains of sealant to an authorized dealer or dispose of it in compliance with local waste disposal regulations.

Wheels and Tires

TIRE CARE

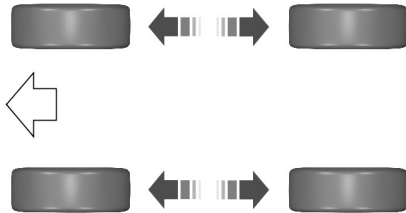

E70415

To make sure the front and rear tires of your vehicle wear evenly and last longer, we recommend that you swap the tires from front to rear and vice versa at regular intervals of between 3000 and 6000 miles (5000 and 10000 kilometers).

WARNING



Do not scrub the sidewalls of the tires when you are parking.

If you have to mount a curb, do so slowly and approach it with the wheels at right-angles to the curb.

Examine the tires regularly for cuts, foreign objects and uneven wear of the tread. Uneven wear could mean that the wheel alignment is outside specification.

Check the tire pressures (including the spare) when cold, every two weeks.

USING WINTER TIRES

If winter tires are used you must inflate them to the same tire pressures as those listed in the tire pressure table. See **Technical Specifications** (page 224).

USING SNOW CHAINS

WARNINGS



Do not exceed 30 mph (50 km/h).



Do not use snow chains on snow-free roads.



Only fit snow chains to specified tires. See **Technical Specifications** (page 224).



If your vehicle has wheel trims, remove them before fitting snow chains.

Note: *The anti-lock braking system will continue to operate normally.*

Only use small link snow chains.

Only use snow chains on the front wheels.

Vehicles with Stability Control

When stability control is on, your vehicle may exhibit some unusual driving characteristics. To reduce this, switch traction control off. See **Using Stability Control** (page 137).

TIRE PRESSURE MONITORING SYSTEM

WARNING



The tire pressure monitoring system is not a substitute for manually checking tire pressures. You should periodically check tire pressures using a pressure gauge. Failure to correctly maintain tire pressures could increase the risk of tire failure, loss of control, vehicle rollover and personal injury.



Wheels and Tires

You must check the tire pressures (including the spare tire where applicable) every two weeks when the tires are cold.

You must inflate the tires to the correct pressure.

See **Wheels and Tires** (page 209). The tire pressures are also on the tire inflation pressure label (located on the edge of driver door or the B-Pillar).

As a driver assistance feature, your vehicle has a tire pressure monitoring system. A warning lamp will illuminate when one or more of the tires are significantly under-inflated. If the low tire pressure warning lamp illuminates, you should stop your vehicle as soon as it is safe to do so, check the tires and inflate them to the correct pressure.

Driving on under-inflated tires can:

- Cause them to overheat.
- Lead to tire failure.
- Reduce fuel efficiency.
- Reduce tire life.
- Affect vehicle handling or stopping ability.

The system is not a substitute for correct tire maintenance.

You must maintain the correct tire pressures, even if low tire pressure has not illuminated the warning lamp.

The tire pressure monitoring system has a system malfunction indicator to warn you when the system is not operating correctly. The malfunction indicator and low tire pressure warning lamp have a combined function. When the system detects a malfunction, the warning lamp will flash for approximately one minute and then remain illuminated. This sequence will occur every time you switch the ignition on while the malfunction remains. The system has detected a fault that requires service.

When the malfunction indicator is illuminated, the system may not be able to detect or signal low tire pressures. A malfunction may occur for a variety of reasons, including the installation of a replacement tire or wheel that prevents the system from functioning correctly. Always check the tire pressure monitoring system malfunction warning after replacing one or more tires or wheels on your vehicle. Make sure the replacement tires or wheels allow the system to continue to function correctly. See **When the Temporary Spare Tire is Installed** in this section.

How Temperature Affects the Tire Pressures

Under normal driving conditions tire pressures may increase by up to 4 psi (0.3 bar) from a cold start situation.

If the vehicle is stationary overnight and the temperature significantly lower than the daytime temperature, tire pressures may decrease by up to 3 psi (0.2 bar) when there is a drop in the ambient temperature of 31°F (17°C) or more. The system detects this pressure decrease as being significantly below the correct inflation pressure and the warning lamp illuminates.

Changing Tires With a Tire Pressure Monitoring System



E142549

Wheels and Tires

You should always have tires serviced by an authorized dealer.

Note: *Each road wheel and tire is fitted with a tire pressure sensor located inside the wheel and tire assembly cavity. The pressure sensor attaches to the valve stem. The tire covers the pressure sensor and it is not visible unless the tire is removed. Take care when changing the tire to avoid damaging the sensor.*

Understanding the Tire Pressure Monitoring System

The system measures the pressure in the four road tires and sends the tire pressure readings to your vehicle.

The system detects this lower pressure as being significantly below the correct inflation pressure and the warning lamp illuminates. You must inflate the tires to the correct pressure.

When the Temporary Spare Tire is Installed

If you need to replace a road wheel and tire with the temporary spare wheel, the system will continue to identify a defect. This is to remind you to repair the damaged road wheel and tire and refit the repaired road wheel and tire assembly to your vehicle. To restore the correct operation of the system, you must have the repaired road wheel and tire assembly refitted to your vehicle.

When You Believe the System is Not Operating Correctly

The main function of the system is to warn you when the tire pressures are low. It can also warn you in the event the system is no longer capable of operating correctly. See the following chart for information concerning the system:

When Inflating the Tires

When inflating the tires the system may not respond immediately to the air added to the tires.

Wheels and Tires

System Warning Lamps

Warning lamp	Description	Action
Solid warning lamp	Tire(s) under-inflated	<ol style="list-style-type: none"> 1. Make sure tires are at the correct pressure. See Wheels and Tires (page 209). The tire pressures are also on the tire inflation pressure label (located on the edge of driver door or the B-Pillar). 2. After inflating the tires to the correct pressure you must carry out the tire pressure monitoring system reset procedure. See Tire Pressure Monitoring System Reset Procedure in this chapter.
	Spare tire in use	Repair the damaged road wheel and tire and refit the repaired road wheel and tire assembly to your vehicle to restore the correct operation of the system.
	Tire pressure monitoring system malfunction	If the tires are correctly inflated and the spare tire is not in use but the light remains on, the system has detected a fault that requires service.
Solid warning lamp initially followed by a flashing warning lamp	Spare tire in use	Repair the damaged road wheel and tire and refit the repaired road wheel and tire assembly to your vehicle to restore the correct operation of the system.
	Tire pressure monitoring system malfunction	If the tires are correctly inflated and the spare tire is not in use but the light remains on, the system has detected a fault that requires service.

If the Warning Lamp is On:

1. Check each tire to verify that none are flat.
2. If one or more tires are flat, repair as necessary.
3. Check the tire pressures and inflate all the tires to the correct pressure.
4. Carry out the tire pressure monitoring system reset procedure.

Tire Pressure Monitoring System Reset Procedure

Overview

You must carry out the system reset procedure after each tire replacement or adjustment of the tire pressures.

Wheels and Tires

To maintain your vehicle load carrying capability, your vehicle requires different tire pressures in the front tires compared to the rear tires.

The system illuminates the warning lamp at different pressures for the front and rear tires.

The tires need to be periodically rotated to provide consistent performance and maximum tire life, the system needs to know when the tires have been rotated to determine which set of tires are on the front and rear axles. With this information, the system can detect and correctly warn of low tire pressures.

Carrying Out the System Reset Procedure

1. Check the tire pressures and inflate all the tires to the correct pressure.
2. Use the information display controls on the steering wheel or instrument panel. See **Information Displays** (page 69).

To reset the tire pressure monitoring system, scroll to:

Message	Description and Action
Settings	Press the OK button.
Driver assist	Press the OK button.
Tire Monitor	Press and hold the OK button until confirmation appears. Alternatively, if your vehicle has a tire pressure monitoring system reset button, press and hold the button until confirmation appears.

CHANGING A ROAD WHEEL

Lug Nuts

You can obtain a replacement locking lug nut key and replacement locking lug nuts from an authorized dealer using the reference number certificate.

Vehicles with a Spare Wheel

If the spare wheel is exactly the same type and size as the other fitted road wheels, you can replace the existing road wheel with the spare wheel and continue to drive in the normal manner.

If the spare wheel is different to the other road wheels, it will carry a yellow label with the appropriate speed limit.

Refer to the following information before changing the road wheel.

WARNINGS



Drive the shortest possible distances.



Do not fit more than one spare wheel on your vehicle at any one time.



Do not carry out any tire repairs on a spare wheel.



Do not drive through an automatic car wash.

Wheels and Tires

WARNINGS



If you are unsure what type of spare wheel you have do not exceed 50 mph (80 km/h).



Only fit snow chains to specified tires. See **Technical Specifications** (page 224).



The ground clearance of your vehicle may be reduced. Take care when parking next to a curb.

Note: *Your vehicle may exhibit some unusual driving characteristics.*

Vehicle Jack

WARNINGS



The vehicle jack supplied with your vehicle should only be used when changing a wheel in emergency situations.



Before using the vehicle jack, check that it is not damaged or deformed and that the thread is lubricated and free from foreign matter.



Never place anything between the jack and the ground, or the jack and your vehicle.

Note: *Vehicles with a temporary mobility kit do not have a vehicle jack or a wheel brace.*

It is recommended to use a workshop type hydraulic jack for changing between summer and winter tires.

Note: *Use a jack with a minimum lifting capacity of 1.5 tonnes and a lifting plate with a minimum diameter of 3.1 inches (80 millimeters).*

Vehicles without a Temporary Mobility Kit

Your vehicle jack, wheel brace, screw-in towing eye and wheel trim remover are located in the spare wheel well.


Jacking and Lifting Points

WARNING




Use only the specified jacking points. If you use other positions, you may damage the body, steering, suspension, engine, braking system or the fuel lines.

Wheels and Tires

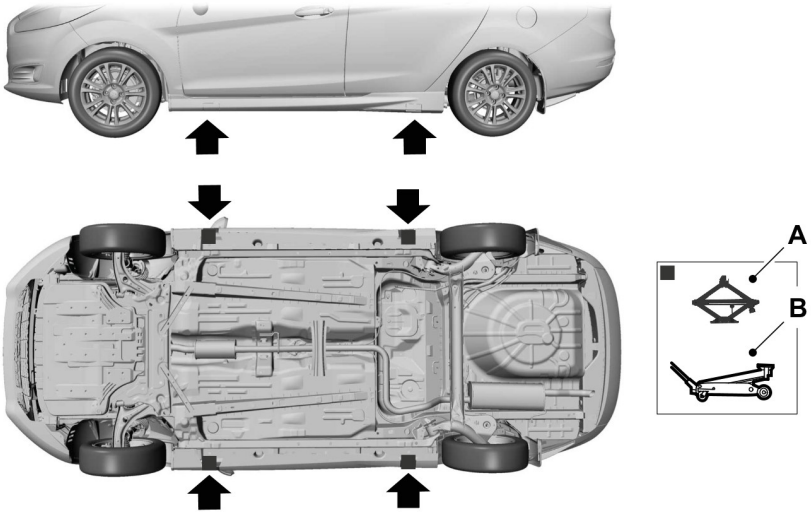

E92658

- A Emergency use only
- B Maintenance

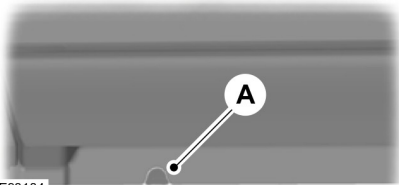

E93184

Indentations in the sills show the location of the jacking points.



E142553

Wheels and Tires




E93020

Note: You can use the wheel brace to raise and lower the jack.

Assembling the Wheel Brace

Type One

WARNING

 The screw-in towing eye has a left-hand thread. Turn it counterclockwise to install it. Make sure that the towing eye is fully tightened.



E122502

Insert the screw-in towing eye into the wheel brace.

Type Two



E159432


Note: When jacking your vehicle, you will need to rotate the wheel brace 180 degrees, pivot the wheel brace back to the original position before rotating again.

Using the Wheel Brace as a Jack Handle

1. Attach the wheel brace to the jack horizontally.
2. Rotate the wheel brace 180 degrees.
3. Return the wheel brace to the original position and repeat as necessary.

Removing the Wheel Trim

Type One

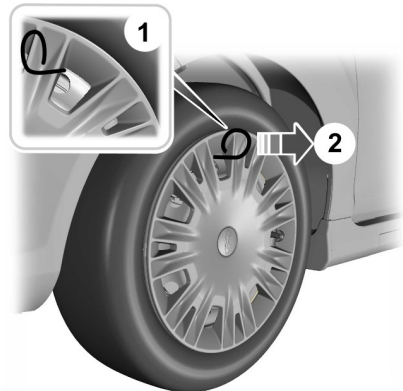

E122314

1. Insert the wheel trim remover.
2. Remove the wheel trim.

Wheels and Tires










Note: Make sure that you pull the wheel trim remover at right angles to the trim.

Type Two

Insert the flat end of the wheel brace between the rim and the trim and carefully remove the trim.


Removing a Road Wheel

WARNINGS

-  Park your vehicle in such a position that neither the traffic nor you are hindered or endangered.
-  Set up a warning triangle.
-  Make sure that your vehicle is on firm, level ground with the wheels pointing straight ahead.
-  Switch the ignition off and apply the parking brake.
-  If your vehicle has a manual transmission, select first or reverse gear. If it has an automatic transmission, select park.
-  Have the passengers leave your vehicle.
-  Secure the diagonally opposite wheel with an appropriate block or wheel chock.
-  Do not work underneath your vehicle when it is supported only by a jack.
-  Make sure that the jack is vertical to the jacking point and the base is flat on the ground.

Note: The spare wheel is located under the floor cover in the luggage compartment.

1. Install the locking lug nut key.

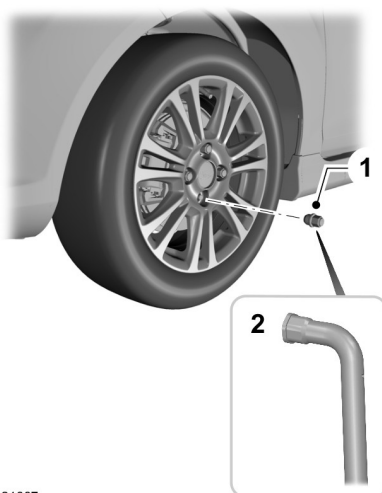



E 121887

2. Slacken the lug nuts.
3. Jack up your vehicle until the tire is clear of the ground.
4. Remove the lug nuts and the wheel.

Note: Do not lay alloy wheels face down on the ground, this will damage the paint.


Installing a Road Wheel

WARNINGS


-  Make sure that the arrows on directional tires point in the direction of rotation when your vehicle is moving forward. If you have to fit a spare wheel with the arrows pointing in the opposite direction, have the tire refitted in the correct direction by an authorized dealer.
-  Use only approved wheel and tire sizes. Using other sizes could damage your vehicle and will make the National Type Approval invalid. See **Technical Specifications** (page 224).


Wheels and Tires


WARNINGS

 Do not fit run flat tires on vehicles that were not originally fitted with them. See an authorized dealer for more details about compatibility.

WARNINGS

 Do not install alloy wheels using lug nuts designed for use with steel wheels.

 Lug nuts are subject to change. You must make sure that you use only the specific lug nuts and wheels supplied for your vehicle. If in doubt see an authorized dealer.


 Make sure there is no lubrication (grease or oil) on the threads or the surface between the wheel lugs and nuts. This can cause the lug nuts to loosen while driving.

Note: *The lug nuts of alloy wheels and spoked steel wheels can also be used for the steel spare wheel for a short time (maximum two weeks).*

Note: *Make sure the wheel and hub contact surfaces are free from foreign matter.*

Note: *Make sure that the cones on the lug nuts are against the wheel.*


1. Install the wheel.
2. Install the lug nuts finger tight.
3. Install the locking lug nut key.

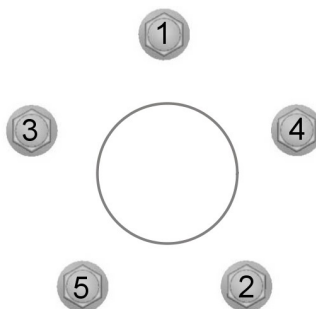

E154985

4. Partially tighten the lug nuts in the sequence shown.
5. Lower your vehicle and remove the jack.
6. Fully tighten the lug nuts in the sequence shown. See **Technical Specifications** (page 224).
7. Install the wheel trim using the ball of your hand.

WARNING

 Have the lug nuts checked for tightness and the tire pressure checked as soon as possible.

Stowing the Flat Tire


1. Unblock the wheels.
2. Place the flat tire on the luggage compartment floor.

Wheels and Tires

3. Locate the cargo tie-down near the seatback. Push the loop of the retainer strap through the tie-down. Thread the other end through the loop.




E142906

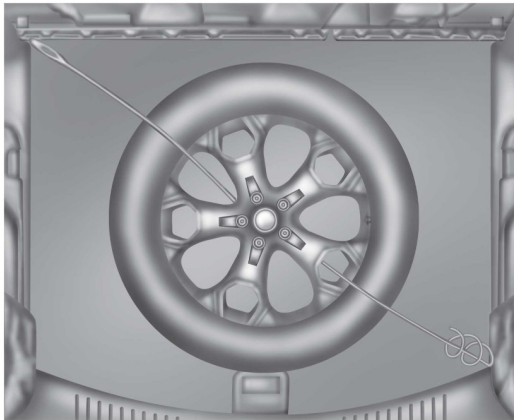

E142985

4. Weave the retainer strap through the wheel openings.
5. Locate the front cargo tie-down at the opposite corner of the luggage compartment. Thread the retainer strap through the tie-down and pull it tight.

Wheels and Tires

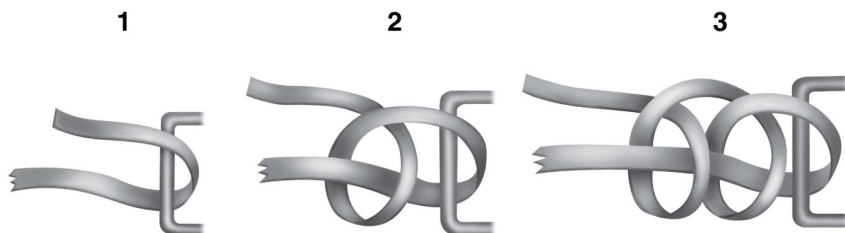

E143746

6. Secure by tying two half hitch knots.

TECHNICAL SPECIFICATIONS

Lug Nut Torque

Wheel type	lb-ft (Nm)
All	100 (135)

Tire Pressures (Cold Tires)

Up to 50 mph (80 km/h)

Variant	Tire size	Normal load		Full load	
		Front	Rear	Front	Rear
		psi (bar)	psi (bar)	psi (bar)	psi (bar)
Temporary spare wheel when it differs from the other fitted wheels	155/70 R17	60 psi (4.2 bar)	60 psi (4.2 bar)	60 psi (4.2 bar)	60 psi (4.2 bar)

Wheels and Tires

Up to 100mph (160 km/h)

Variant	Tire size	Normal load		Full load	
		Front	Rear	Front	Rear
		psi (bar)	psi (bar)	psi (bar)	psi (bar)
All engines	235/55 R17 *	35 psi (2.4 bar)	35 psi (2.4 bar)	35 psi (2.4 bar)	41 psi (2.8 bar)
All engines	235/50 R18	33 psi (2.3 bar)	33 psi (2.3 bar)	35 psi (2.4 bar)	41 psi (2.8 bar)
All engines	235/45 R19	33 psi (2.3 bar)	33 psi (2.3 bar)	35 psi (2.4 bar)	41 psi (2.8 bar)

*Only fit snow chains to specified tires.

Continuous Speed in Excess of 100mph (160 km/h)


Variant	Tire size	Normal load		Full load	
		Front	Rear	Front	Rear
		psi (bar)	psi (bar)	psi (bar)	psi (bar)
All engines	235/55 R17	35 psi (2.4 bar)	35 psi (2.4 bar)	36 psi (2.5 bar)	41 psi (2.8 bar)
All engines	235/50 R18	33 psi (2.3 bar)	33 psi (2.3 bar)	36 psi (2.5 bar)	41 psi (2.8 bar)
All engines	235/45 R19	33 psi (2.3 bar)	33 psi (2.3 bar)	36 psi (2.5 bar)	41 psi (2.8 bar)

Capacities and Specifications

VEHICLE IDENTIFICATION PLATE

Note: Your vehicle identification plate design may vary to that shown.

Note: The information shown on the vehicle identification plate is dependent upon market requirements.

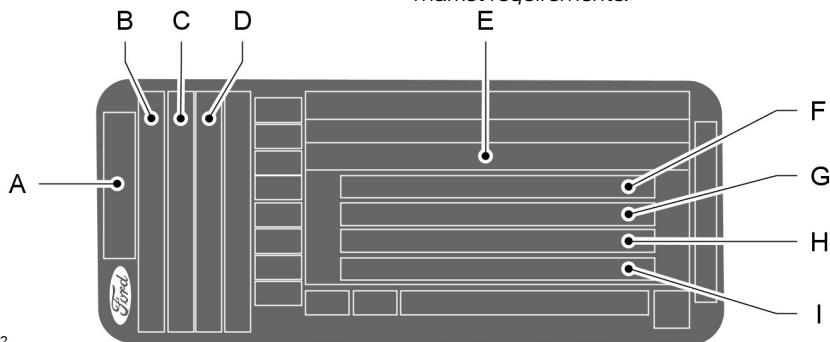


E135662

- A Model
- B Variant
- C Engine designation
- D Engine power and emission level
- E Vehicle identification number
- F Gross vehicle weight
- G Gross train weight
- H Maximum front axle weight
- I Maximum rear axle weight

Your vehicle identification number and maximum weights are shown on a plate, located at the bottom of the lock side of the right-hand door aperture.

Capacities and Specifications

VEHICLE IDENTIFICATION NUMBER

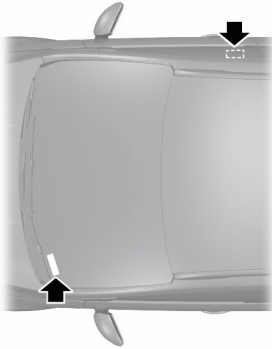

E87496

The vehicle identification number is stamped into the floor panel on the right-hand side, beside the front seat. It is also shown on the left-hand side of the instrument panel.

CAPACITIES AND SPECIFICATIONS - 1.5L ECOBOOST™

WARNING



The air conditioning refrigerant system contains refrigerant R-134a under high pressure. Only qualified personnel should service the air conditioning refrigerant system. Opening the air conditioning refrigerant system can cause personal injury.

Capacities

Item	Capacity
Engine oil - including the oil filter	0.9 gal (4.05 L)
Engine oil - excluding the oil filter	0.8 gal (3.75 L)
Engine coolant	1.4 gal (6.3 L)
Fuel tank	13.2 gal (60 L)
Windshield and rear window washer reservoir	1.0 gal (4.5 L)
A/C Refrigerant	1.57 lb (0.71 kg)
A/C Refrigerant oil	4.4 fl oz (130 ml)

Adding Engine Oil

Quantity
0.1 gal (0.5 L)

Quantity of engine oil required to raise the indicated level on the dipstick from minimum to maximum.

Capacities and Specifications

Specifications

Materials

Name	Specification
Engine Oil - 5W-30	WSS-M2C913-C
Transmission Oil - 75W FE 7U7J-M2C200-BA/CA	WSS-M2C200-D2
Automatic Transmission Oil E-AW 4U7J-M2C924-BA	WSS-M2C924-A
Antifreeze Super Plus Premium 4U7J-19544-xxxx	WSS-M97B44-D
Brake Fluid DOT 4 LV High Performance BU7J-M6C65-xxxx	WSS-M6C65-A2
Screen Wash 2U7J-M8B16-AA/CA/DA, 5U7J-19C544-AA, 3U7J-19523-GA	WSS-M14P19-A
R 134a Refrigerant 2U7J-8037-AA	WSH-M17B19-A
Compressor Oil - Air Conditioning 6U7J-M1C231-AA/BA	WSH-M1C231-B

Only use fluid that meets Ford specifications.

If you are unable to find an engine oil that meets the specification defined by WSS-M2C913-C, it is acceptable to use a SAE 5W-20 engine oil that is defined by ACEA A5/B5.

Note: Do not use more than 0.2 gal (1 L) between scheduled service intervals.

If you use oil and fluids that do not meet the defined specification and viscosity grade this may lead to:

- Component damage which may not be covered by the vehicle Warranty.
- Longer engine cranking periods.
- Increased emission levels.
- Reduced engine performance.
- Reduced fuel economy.
- Degraded brake performance.



We recommend Castrol and Ford engine oils and lubricants.

CAPACITIES AND SPECIFICATIONS - 1.6L ECOBOOST™

WARNING



The air conditioning refrigerant system contains refrigerant R-134a under high pressure. Only qualified personnel should service the air conditioning refrigerant system. Opening the air conditioning refrigerant system can cause personal injury.

Capacities and Specifications

Capacities

Item	Capacity
Engine oil - including the oil filter	0.9 gal (4.05 L)
Engine oil - excluding the oil filter	0.8 gal (3.75 L)
Engine coolant	1.4 gal (6.3 L)
Fuel tank	13.2 gal (60 L)
Windshield and rear window washer reservoir	1.0 gal (4.5 L)
A/C Refrigerant	1.57 lb (0.71 kg)
A/C Refrigerant oil	4.4 fl oz (130 ml)

Adding Engine Oil

Quantity
0.1 gal (0.5 L)

Quantity of engine oil required to raise the indicated level on the dipstick from minimum to maximum.

Specifications

Materials

Name	Specification
Engine Oil - 5W-30	WSS-M2C913-C
Transmission Oil - 75W FE 7U7J-M2C200-BA/CA	WSS-M2C200-D2
Automatic Transmission Oil E-AW 4U7J-M2C924-BA	WSS-M2C924-A
Antifreeze Super Plus Premium 4U7J-19544-xxxx	WSS-M97B44-D
Brake Fluid DOT 4 LV High Performance BU7J-M6C65-xxxx	WSS-M6C65-A2
Screen Wash 2U7J-M8B16-AA/CA/DA, 5U7J-19C544-AA, 3U7J-19523-GA	WSS-M14P19-A
R 134a Refrigerant 2U7J-8037-AA	WSH-M17B19-A
Compressor Oil - Air Conditioning	WSH-M1C231-B

Capacities and Specifications

Name	Specification
6U7J-M1C231-AA/BA	

Only use fluid that meets Ford specifications.

If you are unable to find an engine oil that meets the specification defined by WSS-M2C913-C, it is acceptable to use a SAE 5W-20 engine oil that is defined by ACEA A5/B5.

Note: Do not use more than 0.2 gal (1 L) between scheduled service intervals.

If you use oil and fluids that do not meet the defined specification and viscosity grade this may lead to:

- Component damage which may not be covered by the vehicle Warranty.
- Longer engine cranking periods.
- Increased emission levels.
- Reduced engine performance.
- Reduced fuel economy.
- Degraded brake performance.



We recommend Castrol and Ford engine oils and lubricants.

CAPACITIES AND SPECIFICATIONS - 2.5L

WARNING



The air conditioning refrigerant system contains refrigerant R-134a under high pressure. Only qualified personnel should service the air conditioning refrigerant system. Opening the air conditioning refrigerant system can cause personal injury.

Capacities

Item	Capacity
Engine oil - including the oil filter	1.2 gal (5.4 L)
Engine oil - excluding the oil filter	1.1 gal (5.1 L)
Engine coolant	1.8 gal (8.4 L)
Fuel tank	13.2 gal (60 L)
Windshield and rear window washer reservoir	1.0 gal (4.5 L)
A/C Refrigerant	1.57 lb (0.71 kg)
A/C Refrigerant oil	4.4 fl oz (130 ml)

Capacities and Specifications

Adding Engine Oil

Quantity
0.2 gal (0.8 L)

Quantity of engine oil required to raise the indicated level on the dipstick from minimum to maximum.

Specifications

Materials

Name	Specification
Engine Oil - 5W-30	WSS-M2C913-C
Transmission Oil - 75W FE 7U7J-M2C200-BA/CA	WSS-M2C200-D2
Automatic Transmission Oil E-AW 4U7J-M2C924-BA	WSS-M2C924-A
Antifreeze Super Plus Premium 4U7J-19544-xxxx	WSS-M97B44-D
Brake Fluid DOT 4 LV High Performance BU7J-M6C65-xxxx	WSS-M6C65-A2
Screen Wash 2U7J-M8B16-AA/CA/DA, 5U7J-19C544-AA, 3U7J-19523-GA	WSS-M14P19-A
R 134a Refrigerant 2U7J-8037-AA	WSH-M17B19-A
Compressor Oil - Air Conditioning 6U7J-M1C231-AA/BA	WSH-M1C231-B

Only use fluid that meets Ford specifications.

If you are unable to find an engine oil that meets the specification defined by WSS-M2C913-C, it is acceptable to use a SAE 5W-20 engine oil that is defined by ACEA A5/B5.

Note: Do not use more than 0.2 gal (1 L) between scheduled service intervals.

If you use oil and fluids that do not meet the defined specification and viscosity grade this may lead to:

- Component damage which may not be covered by the vehicle Warranty.
- Longer engine cranking periods.
- Increased emission levels.

- Reduced engine performance.
- Reduced fuel economy.
- Degraded brake performance.



We recommend Castrol and Ford engine oils and lubricants.

Capacities and Specifications

CAPACITIES AND SPECIFICATIONS - 2.0L DURATORQ-TDCI (DW) DIESEL

WARNING



The air conditioning refrigerant system contains refrigerant R-134a under high pressure. Only qualified personnel should service the air conditioning refrigerant system. Opening the air conditioning refrigerant system can cause personal injury.

Capacities

Item	Capacity
Engine oil fill capacity including the oil filter.	1.2 gal (5.5 L)
Engine oil fill capacity excluding the oil filter.	1.1 gal (5 L)
Engine coolant fill capacity.	1.9 gal (8.5 L)
Fuel tank fill capacity.	13.2 gal (60 L)
Windshield, rear window and headlamp washer system fill capacity.	1.0 gal (4.5 L)
Air conditioning refrigerant fill capacity.	1.57 lb (0.71 kg)
Air conditioning refrigerant compressor oil fill capacity.	4.4 fl oz (130 ml)

Adding Engine Oil

Quantity
0.2 gal (0.8 L)

The quantity of engine oil required to raise the indicated level on the dipstick from minimum to maximum.

Specifications

Materials

Name	Specification
Engine Oil - 0W-30	WSS-M2C950-A
Transmission Oil - 75W FE 7U7J-M2C200-BA/CA	WSS-M2C200-D2
Automatic Transmission Oil E-AW 4U7J-M2C924-BA	WSS-M2C924-A
Antifreeze Super Plus Premium	WSS-M97B44-D

Capacities and Specifications

Name	Specification
4U7J-19544-xxxx	
Brake Fluid DOT 4 LV High Performance BU7J-M6C65-xxxx	WSS-M6C65-A2
Screen Wash 2U7J-M8B16-AA/CA/DA, 5U7J-19C544-AA, 3U7J-19523-GA	WSS-M14P19-A
R134a Refrigerant 2U7J-8037-AA	WSH-M17B19-A
Compressor Oil - Air Conditioning 6U7J-M1C231-AA/BA	WSH-M1C231-B

Only use fluid that meets Ford specifications.

If you are unable to find an engine oil that meets the specification defined by WSS-M2C950-A, it is acceptable to use a SAE 0W-30 engine oil that is defined by ACEA A5/B5.

Note: Do not use more than 0.2 gal (1 L) between scheduled service intervals.

Using oil and fluids that do not meet the defined specification and viscosity grade may lead to:

- Component damage which may not be covered by the vehicle Warranty.
- Longer engine cranking periods.

- Increased emission levels.
- Reduced engine performance.
- Reduced fuel economy.
- Degraded brake performance.



We recommend Castrol and Ford engine oils and lubricants.


TECHNICAL SPECIFICATIONS

Vehicle Dimensions

Dimension description	Dimension in inches (mm)
Maximum length	178 (4524)
Overall width including exterior mirrors	82 (2086)
Overall height - EC curb weight	66 - 67 (1680 - 1702)
Wheelbase	106 (2690)
Front track	61 - 62 (1554 - 1574)
Rear track	61 - 62 (1554 - 1574)

Capacities and Specifications

Towing Equipment Dimensions

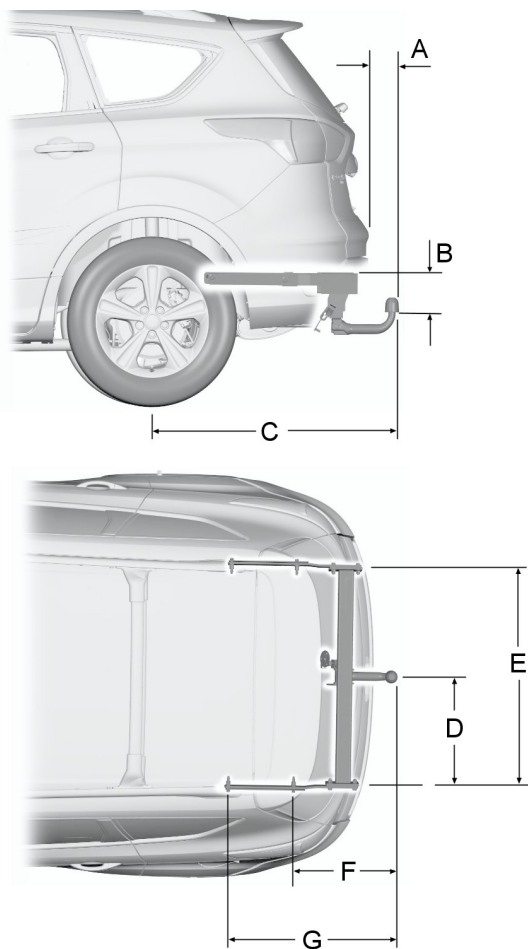

E152457

Capacities and Specifications

Item	Dimension description	Dimension in inches (mm)
A	Bumper – end of tow ball	4 (100)
B	Attachment point – center of tow ball	4 (104)
C	Wheel center – center of tow ball	39 (985)
D	Center of tow ball – side member	20 (517)
E	Distance between side members	41 (1035)
F	Center of tow ball – center 1. attachment point	18 (449)
G	Center of tow ball – center 2. attachment point	29 (749)

Maximum Permissible Nose Weight

lb (kg)
220 (100)

Audio System

GENERAL INFORMATION

Radio Frequencies and Reception Factors

Radio reception factors	
Distance and Strength	The further you travel away from an FM station, the weaker the signal and the weaker the reception.
Terrain	Hills, mountains, tall buildings, bridges, tunnels, freeway overpasses, parking garages, dense tree foliage and thunderstorms can interfere with the reception.
Station overload	When you pass near a radio transmission tower, a stronger signal can override a weaker signal and can cause interference in the audio system.

CD and CD Player Information

Note: *CD units play commercially pressed 4.75-inch (12 centimeter) audio compact discs only. Due to technical incompatibility, certain recordable and re-recordable compact discs may not function correctly when used in Ford CD players.*

Note: *Do not insert CDs with homemade paper (adhesive) labels into the CD player as the label may peel and cause the CD to become jammed. You should use a permanent felt tip marker rather than adhesive labels on your homemade CDs. Ballpoint pens may damage CDs. Please contact an authorized dealer for further information.*

Note: *Do not use any irregularly shaped discs or discs with a scratch protection film attached.*

Always handle discs by their edges only. Clean the disc with an approved CD cleaner only. Wipe it from the center of the disc toward the edge. Do not clean in a circular motion.

Do not expose discs to direct sunlight or heat sources for extended periods.

MP3 and WMA Track and Folder Structure

Audio systems capable of recognizing and playing MP3 and WMA individual tracks and folder structures work as follows:

- There are two different modes for MP3 and WMA disc playback: MP3 and WMA track mode (system default) and MP3 and WMA folder mode.
- MP3 and WMA track mode ignores any folder structure on the MP3 and WMA disc. The player numbers each MP3 and WMA track on the disc (noted by the MP3 or WMA file extension) from T001 to a maximum of T255. The maximum number of playable MP3 and WMA files may be less depending on the structure of the CD and exact model of radio present.

Audio System

- MP3 and WMA folder mode represents a folder structure consisting of one level of folders. The CD player numbers all MP3 and WMA tracks on the disc (noted by the MP3 or WMA file extension) and all folders containing MP3 and WMA files, from F001 (folder) T001 (track) to F253 T255.
- Creating discs with only one level of folders helps with navigation through the disc files.

If you are burning your own MP3 and WMA discs, it is important to understand how the system reads the structures you create. While various files may be present, (files with extensions other than MP3 and WMA), only files with the MP3 and WMA extension are played; other files are ignored by the system. This enables you to use the same MP3 and WMA disc for a variety of tasks on your work computer, home computer and your in-vehicle system.

In track mode, the system displays and plays the structure as if it were only one level deep (all MP3 and WMA files play, regardless of being in a specific folder). In folder mode, the system only plays the MP3 and WMA files in the current folder.


AUDIO UNIT - VEHICLES WITH: AM/FM/CD

WARNING



Driving while distracted can result in loss of vehicle control, crash and injury. We strongly recommend that you use extreme caution when using any device that may take your focus off the road. Your primary responsibility is the safe operation of your vehicle. We recommend against the use of any hand-held device while driving and encourage the use of voice-operated systems when possible. Make sure you are aware of all applicable local laws that may affect the use of electronic devices while driving.

Audio System

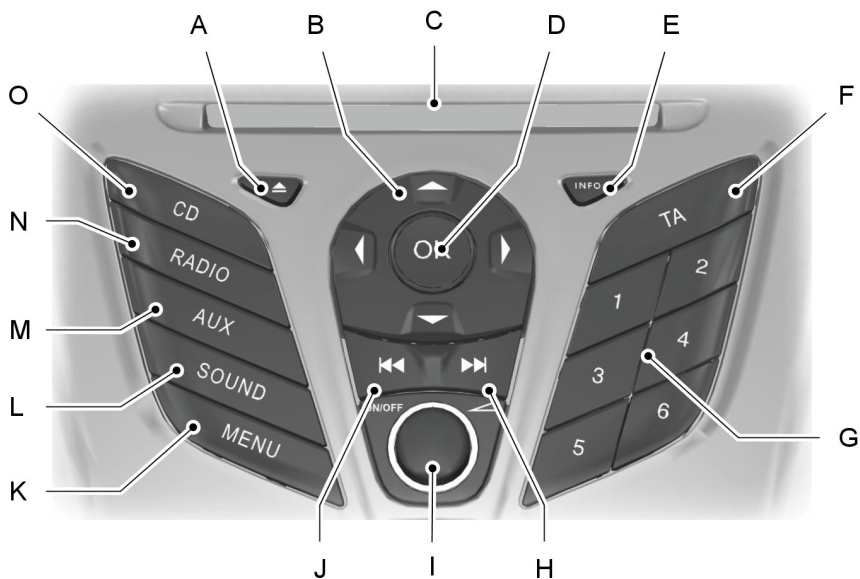

E130324

- A **Eject:** Press the button to eject a CD.
- B **Cursor arrows:** Press a button to scroll through on-screen choices.
- C **CD slot:** Where you insert a CD.
- D **OK:** Press the button to confirm on-screen selections.
- E **INFO:** Press the button to access radio, CD, USB and iPod information.
- F **TA:** Press the button to turn traffic announcements on or off and cancels announcements during an active announcement.
- G **Numeric keypad:** Press the button to recall a previously stored station. To store a favorite station press and hold until the sound returns.
- H **Seek up:** Press the button to go to the next station up the radio frequency band or the next track on a CD.
- I **On, Off and Volume:** Press the button to switch the audio system on or off. Turn the dial to adjust the volume.
- J **Seek down:** Press the button to go to the next station down the radio frequency band or the previous track on a CD.

Audio System

- K **MENU:** Press the button to access different audio system features.
- L **SOUND:** Press the button to adjust the sound settings for bass, treble, middle, balance and fade.
- M **AUX:** Press the button to access the AUX and SYNC features, it will also cancel the menu or list browsing.
- N **RADIO:** Press the button to select different radio bands, it will also cancel the menu or list browsing.
- O **CD:** Press the button to change source to CD, it will also cancel the menu or list browsing.

Sound Button

This will allow you to adjust the sound settings (for example bass, middle and treble).

1. Press the **SOUND** button.
2. Use the up and down arrow buttons to select the required setting.
3. Use the left and right arrow buttons to make the necessary adjustment. The display indicates the level selected.
4. Press the **OK** button to confirm the new settings.

Waveband Button

Press the **RADIO** button to select from the wavebands available.

You can use the selector to return to radio reception when you have been listening to another source.

Alternatively, press the left arrow button to display the available wavebands. Scroll to the required waveband and press **OK**.

Station Tuning Control

Seek Tuning

Select a waveband and briefly press one of the seek buttons. The unit will stop at the first station it finds in the direction you have chosen.

Manual Tuning

1. Press the **MENU** button.
2. Select **RADIO** mode and then **MANUAL TUNE**.
3. Use the left and right arrow buttons to tune down or up the waveband in small increments or press and hold to increment quickly, until you find a station you want to listen to.
4. Press **OK** to continue listening to a station.

Scan Tuning

Scan allows you to listen to a few seconds of each station detected.

1. Press the **MENU** button.
2. Select **RADIO** mode and then **SCAN**.
3. Use the seek buttons to scan up or down the selected waveband.
4. Press **OK** to continue listening to a station.

Station Preset Buttons

This feature allows you to store your favorite stations, they can be recalled by selecting the appropriate waveband and pressing one of the preset buttons.

1. Select a waveband.
2. Tune to the station required.

Audio System

3. Press and hold one of the preset buttons. A progress bar and message will appear. When the progress bar completes the station has been stored. The audio unit will also mute momentarily as confirmation.

You can repeat this on each waveband and for each preset button.

Note: *When you drive to another part of the country, stations that broadcast on alternative frequencies and are stored on preset buttons, may be updated with the correct frequency and station name for that area.*

Autostore Control

Note: *This will store up to a maximum of the six strongest signals available, either from the AM or the FM waveband and overwrite the previously stored stations. You can also store stations manually in the same way as other wavebands.*

- Press and hold the **RADIO** button.
- When the search is complete, sound is restored and the strongest signals are stored on the autostore presets.

Traffic Information Control

Many stations that broadcast on the FM waveband have a TP code to signify that they carry traffic program information.

Turning Traffic Announcements On and Off

Before you can receive traffic announcements, you must press either the **TA** or **TRAFFIC** button. A TA display will appear to show the feature is switched on.

If you are already tuned to a station that broadcasts traffic information, **TP** will also be displayed. Otherwise the unit will search for a traffic program.

When traffic information is broadcast, it will automatically interrupt normal radio or CD playback and **Traffic announcement** will appear in the display.

If a non-traffic station is selected or recalled using a preset button, the audio unit will remain on that station unless **TA** or **TRAFFIC** is turned off, then on again.

Note: *If traffic announcement is on and you select a preset or manual tune to a non traffic announcement station no traffic announcement will be heard.*

Note: *When you are listening to a non traffic announcement station and turn traffic announcement off and on again a TP seek will occur.*

Traffic Announcement Volume

Traffic announcements interrupt normal broadcasts at a preset minimum level that is usually louder than normal listening volumes.

To adjust the preset volume:

- Use the volume control to make the necessary adjustment during an incoming traffic announcement broadcast. The display will show the level selected.

Ending Traffic Announcements

The audio unit will return to normal operation at the end of each traffic announcement. To end the announcement prematurely, press **TA** or **TRAFFIC** during the announcement.

Note: *If you press TA or TRAFFIC at any other time it will switch all announcements off.*

Automatic Volume Control

When available, automatic volume control adjusts the volume level to compensate for engine noise and road speed noise.

Audio System

1. Press the **MENU** button and select **AUDIO** or **AUDIO SETTINGS**.
2. Select **AVC LEVEL** or **ADAPTIVE VOL**.
3. Use the left or right arrow button to adjust the setting.
4. Press the **OK** button to confirm your selection.
5. Press the **MENU** button to return.

News Broadcasts

Your audio unit may interrupt normal reception to broadcast news bulletins from stations on the FM waveband, radio data system or other enhanced network linked stations.

The display will indicate there is an incoming announcement, during news broadcasts. When the audio unit interrupts for a news broadcast the preset volume level will be the same as traffic announcements.

1. Press the **MENU** button.
2. Select **AUDIO** or **AUDIO SETTINGS**.
3. Scroll to **NEWS** and turn on or off with the **OK** button.
4. Press the **MENU** button to return.

Alternative Frequencies

The majority of programs that broadcast on the FM waveband have a program identification code, it can be recognized by audio units.

When your vehicle moves from one transmission area to another with the alternative frequencies tuning switched on, this function will search for the strongest station signal.

Under certain conditions, alternative frequencies tuning may temporarily disrupt normal reception.

When selected, the unit continually evaluates signal strength and if a better signal becomes available, the unit will switch to that alternative. It mutes while it checks a list of alternative frequencies and if necessary, it will search once across the selected waveband for a genuine alternative frequency.

It will restore radio reception when it finds one or if one is not found, the unit will return to the original stored frequency.

When selected, **AF** will be shown in the display.

1. Press the **MENU** button.
2. Select **AUDIO** or **AUDIO SETTINGS**.
3. Scroll to **ALTERNAT FREQ** or **ALTERNATIVE FREQ** and turn on or off with the **OK** button.
4. Press the **MENU** button to return.

Regional Mode

Regional mode controls the behavior of alternative frequencies switching between regionally related networks of a parent broadcaster. A broadcaster may run a fairly large network across a large part of the country. At various times of the day this large network may be broken down into a number of smaller regional networks, typically centered on major towns or cities. When the network is not split into regional variants, the whole network carries the same programming.

Regional mode ON: This prevents random alternative frequency switches when neighboring regional networks are not carrying the same programming.

Regional mode OFF: This allows a larger coverage area if neighboring regional networks are carrying the same programming, but can cause random alternative frequency switches if they are not.

1. Press the **MENU** button.

Audio System

2. Select **AUDIO** or **AUDIO SETTINGS**.
3. Scroll to **RDS REGIONAL** and turn on or off with the **OK** button.
4. Press the **MENU** button to return.


AUDIO UNIT - VEHICLES WITH: DIGITAL AUDIO BROADCAST (DAB) RADIO/SYNC

WARNING



Driving while distracted can result in loss of vehicle control, accident and injury. We strongly recommend that you use extreme caution when using any device or feature that may take your focus off the road. Your primary responsibility is the safe operation of your vehicle. We recommend against the use of any handheld device while driving and encourage the use of voice-operated systems when possible. Make sure you are aware of all applicable local laws that may affect the use of electronic devices while driving.

Audio System

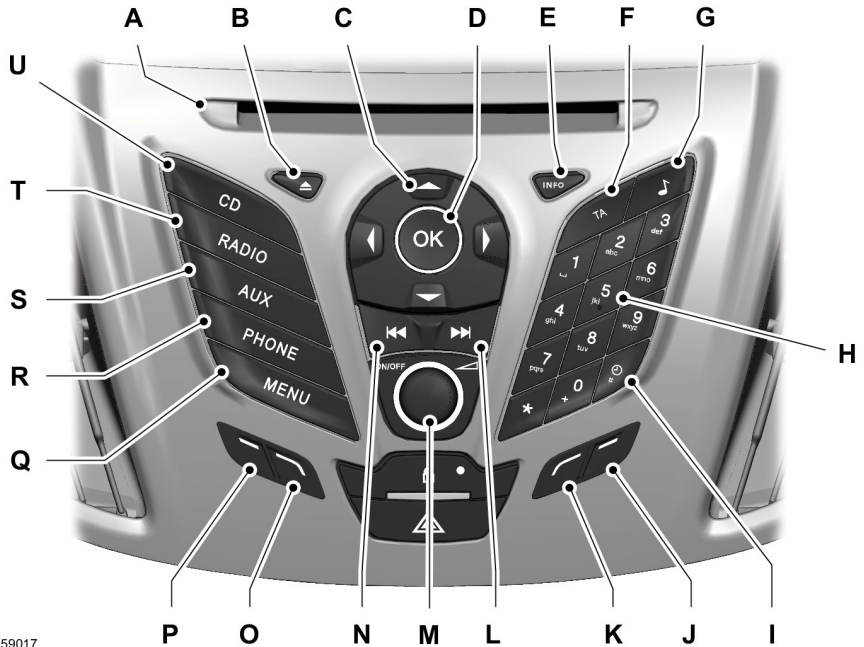

E159017

- A **CD slot:** Where you insert a CD.
- B **Eject:** Press the button to eject a CD.
- C **Cursor arrows:** Press a button to scroll through on-screen choices.
- D **OK:** Press the button to confirm on-screen selections.
- E **INFO:** Press the button to access radio, CD, USB and iPod information.
- F **TA:** Press the button to turn traffic announcements on or off and cancels announcements during an active announcement.
- G **SOUND:** Press the button to adjust the sound settings for bass, treble, middle, balance and fade.
- H **Numeric keypad:** Press the button to recall a previously stored station. To store a favorite station press and hold until the sound returns.
- I **Clock:** Press the button to select clock setup.

Audio System

- J **Function button 4:** Press the button to select different functions of the audio system depending on which mode (i.e. radio or CD) you are in.
- K **Function button 3:** Press the button to select different functions of the audio system depending on which mode (i.e. radio or CD) you are in.
- L **Seek up:** Press the button to go to the next station up the radio frequency band or the next track on a CD.
- M **On, Off and Volume:** Press the button to switch the audio system on or off. Turn the dial to adjust the volume.
- N **Seek down:** Press the button to go to the next station down the radio frequency band or the previous track on a CD.
- O **Function button 2:** Press the button to select different functions of the audio system depending on which mode (i.e. radio or CD) you are in.
- P **Function button 1:** Press the button to select different functions of the audio system depending on which mode (i.e. radio or CD) you are in.
- Q **MENU:** Press the button to access different audio system features.
- R **PHONE:** Press the button to access the phone feature of the SYNC system by pressing **PHONE** then **MENU**.
- S **AUX:** Press the button to access the AUX and SYNC features, it will also cancel the menu or list browsing.
- T **RADIO:** Press the button to select different radio bands, it will also cancel the menu or list browsing.
- U **CD:** Press the button to change source to CD, it will also cancel the menu or list browsing.

Sound Button

This will allow you to adjust the sound settings (for example bass, middle and treble).

1. Press the sound button.
2. Use the up and down arrow buttons to select the required setting.
3. Use the left and right arrow buttons to make the necessary adjustment. The display indicates the level selected.
4. Press the **OK** button to confirm the new settings.

Waveband Button

Press the **RADIO** button to select from the wavebands available.

You can use the selector to return to radio reception when you have been listening to another source.

Alternatively, press the left arrow button to display the available wavebands. Scroll to the required waveband and press **OK**.

Audio System

Station Tuning Control

Seek Tuning

Select a waveband and briefly press one of the seek buttons. The unit will stop at the first station it finds in the direction you have chosen.

Manual Tuning

1. Press function button 2.
2. Use the left and right arrow buttons to tune down or up the waveband in small increments or press and hold to increment quickly, until you find a station you want to listen to.
3. Press **OK** to continue listening to a station.

Scan Tuning

Scan allows you to listen to a few seconds of each station detected.

1. Press function button 3.
2. Use the seek buttons to scan up or down the selected waveband.
3. Press function button 3 again or **OK** to continue listening to a station.

Station Preset Buttons

This feature allows you to store your favorite stations, they can be recalled by selecting the appropriate waveband and pressing one of the preset buttons.

1. Select a waveband.
2. Tune to the station required.
3. Press and hold one of the preset buttons. A progress bar and message will appear. When the progress bar completes the station has been stored. The audio unit will also mute momentarily as confirmation.

You can repeat this on each waveband and for each preset button.

Note: *When you drive to another part of the country, stations that broadcast on alternative frequencies, and are stored on preset buttons, may be updated with the correct frequency and station name for that area.*

Autostore Control

Note: *This will store up to a maximum of the 10 strongest signals available, either from the AM or the FM waveband, and overwrite the previously stored stations. You can also store stations manually in the same way as other wavebands.*

- Press and hold the **RADIO** button.
- When the search is complete, sound is restored and the strongest signals are stored on the autostore presets.

Traffic Information Control

Many stations that broadcast on the FM waveband have a TP code to signify that they carry traffic program information.

Turning Traffic Announcements On and Off

Before you can receive traffic announcements, you must press either the **TA** or **TRAFFIC** button. A TA display will appear to show the feature is switched on.

If you are already tuned to a station that broadcasts traffic information, **TP** will also be displayed. Otherwise the unit will search for a traffic program.

When traffic information is broadcast, it will automatically interrupt normal radio or CD playback and **Traffic announcement** will appear in the display.

If a non-traffic station is selected or recalled using a preset button, the audio unit will remain on that station unless **TA** or **TRAFFIC** is turned off, then on again.

Audio System

Note: If traffic announcement is on and you select a preset or manual tune to a non traffic announcement station no traffic announcement will be heard.

Note: When you are listening to a non traffic announcement station and turn traffic announcement off and on again a TP seek will occur.

Traffic Announcement Volume

Traffic announcements interrupt normal broadcasts at a preset minimum level that is usually louder than normal listening volumes.

To adjust the preset volume:

- Use the volume control to make the necessary adjustment during an incoming traffic announcement broadcast. The display will show the level selected.

Ending Traffic Announcements

The audio unit will return to normal operation at the end of each traffic announcement. To end the announcement prematurely, press **TA** or **TRAFFIC** during the announcement.

Note: If you press **TA** or **TRAFFIC** at any other time it will switch all announcements off.

Automatic Volume Control

When available, automatic volume control adjusts the volume level to compensate for engine noise and road speed noise.

1. Press the **MENU** button and select **AUDIO** or **Audio settings**.
2. Select **Adaptive vol**.
3. Use the left or right arrow button to adjust the setting.
4. Press the **OK** button to confirm your selection.
5. Press the **MENU** button to return.

News Broadcasts

Your audio unit may interrupt normal reception to broadcast news bulletins from stations on the FM waveband, radio data system or other enhanced network linked stations.

The display will indicate there is an incoming announcement, during news broadcasts. When the audio unit interrupts for a news broadcast the preset volume level will be the same as traffic announcements.

1. Press the **MENU** button.
2. Select **AUDIO** or **Audio settings**.
3. Scroll to **News** and turn on or off with the **OK** button.
4. Press the **MENU** button to return.

Alternative Frequencies

The majority of programs that broadcast on the FM waveband have a program identification code, it can be recognized by audio units.

When your vehicle moves from one transmission area to another with the alternative frequencies tuning switched on, this function will search for the strongest station signal.

Under certain conditions, however, alternative frequencies tuning may temporarily disrupt normal reception.

When selected, the unit continually evaluates signal strength and, if a better signal becomes available, the unit will switch to that alternative. It mutes while it checks a list of alternative frequencies and if necessary, it will search once across the selected waveband for a genuine alternative frequency.

It will restore radio reception when it finds one or if one is not found, the unit will return to the original stored frequency.

Audio System

When selected, AF will be shown in the display.

1. Press the **MENU** button.
2. Select **AUDIO** or **Audio settings**.
3. Scroll to **Alternat. frequency** or **ALTERNATIVE FREQ.** and turn on or off with the **OK** button.
4. Press the **MENU** button to return.

Regional Mode

Regional mode controls the behavior of alternative frequencies switching between regionally related networks of a parent broadcaster. A broadcaster may run a fairly large network across a large part of the country. At various times of the day this large network may be broken down into a number of smaller regional networks, typically centered on major towns or cities. When the network is not split into regional variants, the whole network carries the same programming.

Regional mode on: This prevents random alternative frequency switches when neighboring regional networks are not carrying the same programming.

Regional mode off: This allows a larger coverage area if neighboring regional networks are carrying the same programming, but can cause random alternative frequency switches if they are not.

1. Press the **MENU** button.
2. Select **AUDIO** or **Audio settings**.
3. Scroll to **RDS regional** and turn on or off with the **OK** button.
4. Press the **MENU** button to return.


AUDIO UNIT - VEHICLES WITH: DIGITAL AUDIO BROADCAST (DAB) RADIO/NAVIGATION SYSTEM/SYNC

WARNING



Driving while distracted can result in loss of vehicle control, accident and injury. We strongly recommend that you use extreme caution when using any device or feature that may take your focus off the road. Your primary responsibility is the safe operation of your vehicle. We recommend against the use of any handheld device while driving and encourage the use of voice-operated systems when possible. Make sure you are aware of all applicable local laws that may affect the use of electronic devices while driving.

Audio System

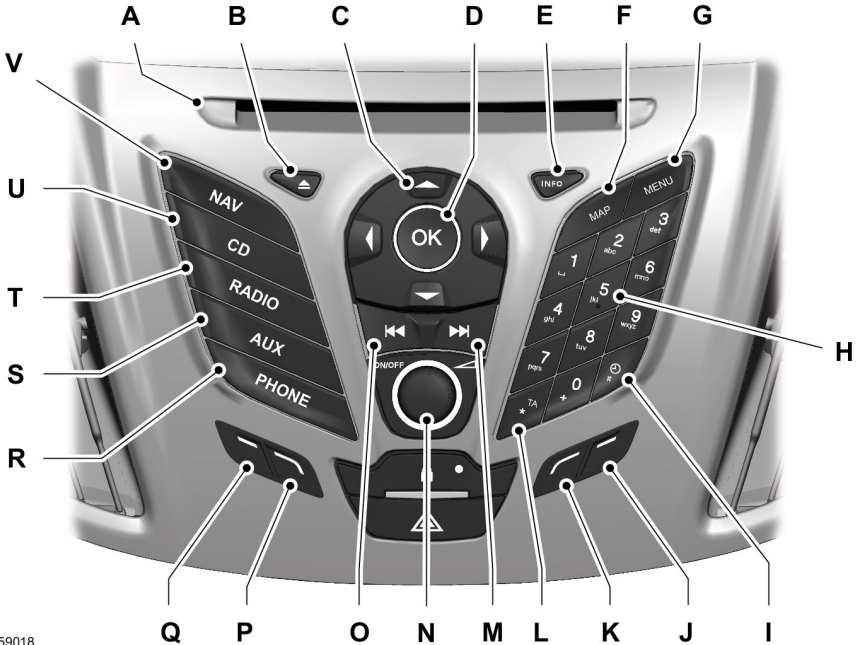

E159018

- A **CD slot:** Where you insert a CD.
- B **Eject:** Press the button to eject a CD.
- C **Cursor arrows:** Press a button to scroll through on-screen choices.
- D **OK:** Press the button to confirm on-screen selections.
- E **INFO:** Press the button to access radio, CD, USB and iPod information.
- F **MAP:** Press the button to access map features.
- G **MENU:** Press the button to access different audio system features.
- H **Numeric keypad** Press the button to recall a previously stored station. To store a favorite station press and hold until the sound returns.
- I **Clock:** Press the button to select clock setup.
- J **Function button 4:** Press the button to select different functions of the audio system depending on which mode (i.e. radio or CD) you are in.

Audio System

- K **Function button 3:** Press the button to select different functions of the audio system depending on which mode (i.e. radio or CD) you are in.
- L **TA:** Press the button to turn traffic announcements on or off and cancels announcements during an active announcement.
- M **Seek up:** Press the button to go to the next station up the radio frequency band or the next track on a CD when in CD mode. In phone mode, use the button to end a phone call. An incoming call can be rejected.
- N **On, Off and Volume:** Press the button to switch the audio system on or off. Turn the dial to adjust the volume.
- O **Seek down:** Press the button to go to the next station down the radio frequency band or the previous track on a CD, When in CD mode. In phone mode use the button to begin a phone call. An incoming phone call can be accepted.
- P **Function button 2:** Press the button to select different functions of the audio system depending on which mode (i.e. radio or CD) you are in.
- Q **Function button 1:** Press the button to select different functions of the audio system depending on which mode (i.e. radio or CD) you are in.
- R **PHONE:** Press the button to access the phone feature of the SYNC system by pressing **PHONE** then **MENU**.
- S **AUX:** Press the button to access the AUX and SYNC features, it will also cancel the menu or list browsing.
- T **RADIO:** Press the button to select different radio bands, it will also cancel the menu or list browsing.
- U **CD:** Press the button to change source to CD, it will also cancel the menu or list browsing.
- V **NAV:** Press the button to access the navigation system.

Sound Button

This will allow you to adjust the sound settings (for example bass, middle and treble).

1. Press the sound button.
2. Use the up and down arrow buttons to select the required setting.
3. Use the left and right arrow buttons to make the necessary adjustment. The display indicates the level selected.
4. Press the **OK** button to confirm the new settings.

Waveband Button

Press the **RADIO** button to select from the wavebands available.

You can use the selector to return to radio reception when you have been listening to another source.

Alternatively, press the left arrow button to display the available wavebands. Scroll to the required waveband and press **OK**.

Audio System

Station Tuning Control

DAB Service Linking

Note: *This feature does not automatically turn on every time you switch the ignition on.*

Note: *Service linking allows cross-referencing to other corresponding frequencies of the same station, for example FM and other DAB ensembles.*

Note: *The system will automatically change to another corresponding station if the current one becomes unavailable, for example when leaving the coverage area.*

Switching DAB service linking on and off. See **General Information** (page 236).

Seek Tuning

Select a waveband and briefly press one of the seek buttons. The unit will stop at the first station it finds in the direction you have chosen.

Manual Tuning

1. Press function button 2.
2. Use the left and right arrow buttons to tune down or up the waveband in small increments or press and hold to increment quickly, until you find a station you want to listen to.
3. Press **OK** to continue listening to a station.

Scan Tuning

Scan allows you to listen to a few seconds of each station detected.

1. Press function button 3.
2. Use the seek buttons to scan up or down the selected waveband.
3. Press function button 3 again or **OK** to continue listening to a station.

Station Preset Buttons

This feature allows you to store your favorite stations, they can be recalled by selecting the appropriate waveband and pressing one of the preset buttons.

1. Select a waveband.
2. Tune to the station required.
3. Press and hold one of the preset buttons. A progress bar and message will appear. When the progress bar completes the station has been stored. The audio unit will also mute momentarily as confirmation.

You can repeat this on each waveband and for each preset button.

Note: *When you drive to another part of the country, stations that broadcast on alternative frequencies, and are stored on preset buttons, may be updated with the correct frequency and station name for that area.*

Autostore Control

Note: *This will store up to a maximum of the 10 strongest signals available, either from the AM or the FM waveband, and overwrite the previously stored stations. You can also store stations manually in the same way as other wavebands.*

Note: *You must select either **FM AST** or **AM AST** to use this function.*

- Press and hold the **RADIO** button.
- When the search is complete, sound is restored and the strongest signals are stored on the autostore presets.

Traffic Information Control

Many stations that broadcast on the FM waveband have a TP code to signify that they carry traffic program information.

Audio System

Turning Traffic Announcements On and Off

Before you can receive traffic announcements, you must press either the **TA** or **TRAFFIC** button. A TA display will appear to show the feature is switched on.

If you are already tuned to a station that broadcasts traffic information, **TP** will also be displayed. Otherwise the unit will search for a traffic program.

When traffic information is broadcast, it will automatically interrupt normal radio or CD playback and Traffic announcement will appear in the display.

If a non-traffic station is selected or recalled using a preset button, the audio unit will remain on that station unless **TA** or **TRAFFIC** is turned off, then on again.

Note: *If traffic announcement is on and you select a preset or manual tune to a non traffic announcement station no traffic announcement will be heard.*

Note: *When you are listening to a non traffic announcement station and turn traffic announcement off and on again a TP seek will occur.*

Traffic Announcement Volume

Traffic announcements interrupt normal broadcasts at a preset minimum level that is usually louder than normal listening volumes.

To adjust the preset volume:

- Use the volume control to make the necessary adjustment during an incoming traffic announcement broadcast. The display will show the level selected.

Ending Traffic Announcements

The audio unit will return to normal operation at the end of each traffic announcement. To end the announcement prematurely, press **TA** or **TRAFFIC** during the announcement.

Note: *If you press TA or TRAFFIC at any other time it will switch all announcements off.*

Automatic Volume Control

When available, automatic volume control adjusts the volume level to compensate for engine noise and road speed noise.

1. Press the **MENU** button and select **AUDIO**.
2. Select **Adaptive vol.**
3. Use the left or right arrow button to adjust the setting.
4. Press the **OK** button to confirm your selection.
5. Press the **MENU** button to return.

Digital Signal Processing

Digital Signal Processing Occupancy

This feature takes into account the differences in distance from the various speakers in your vehicle to each seat. You must select the correct sitting position for the audio to be correctly set.

Digital Signal Processing Equalizer

Select the music category that most suits your listening preference. The audio output will change to enhance the particular style of music chosen.

Changing the Digital Signal Processing Settings

1. Press the **MENU** button.
2. Select **AUDIO** or **Audio settings**.

Audio System

3. Scroll to the required digital signal processing function.
4. Use the up and down arrow buttons to select the required setting.
5. Press the **OK** button to confirm your selection.
6. Press the **MENU** button to return.

News Broadcasts

Your audio unit may interrupt normal reception to broadcast news bulletins from stations on the FM waveband, radio data system or other enhanced network linked stations.

The display will indicate there is an incoming announcement, during news broadcasts. When the audio unit interrupts for a news broadcast the preset volume level will be the same as traffic announcements.

1. Press the **MENU** button.
2. Select **AUDIO** or **Audio settings**.
3. Scroll to **News** and turn on or off with the **OK** button.
4. Press the **MENU** button to return.

Alternative Frequencies

The majority of programs that broadcast on the FM waveband have a program identification code, it can be recognized by audio units.

When your vehicle moves from one transmission area to another with the alternative frequencies tuning switched on, this function will search for the strongest station signal.

Under certain conditions, however, alternative frequencies tuning may temporarily disrupt normal reception.

When selected, the unit continually evaluates signal strength and, if a better signal becomes available, the unit will switch to that alternative. It mutes while it checks a list of alternative frequencies and if necessary, it will search once across the selected waveband for a genuine alternative frequency.

It will restore radio reception when it finds one or if one is not found, the unit will return to the original stored frequency.

When selected, AF will be shown in the display.

1. Press the **MENU** button.
2. Select **AUDIO** or **Audio settings**.
3. Scroll to **Alternat. frequency** or **ALTERNATIVE FREQ.** and turn on or off with the OK button.
4. Press the **MENU** button to return.

Regional Mode

Regional mode controls the behavior of alternative frequencies switching between regionally related networks of a parent broadcaster. A broadcaster may run a fairly large network across a large part of the country. At various times of the day this large network may be broken down into a number of smaller regional networks, typically centered on major towns or cities. When the network is not split into regional variants, the whole network carries the same programming.

Regional mode on: This prevents random alternative frequency switches when neighboring regional networks are not carrying the same programming.

Regional mode off: This allows a larger coverage area if neighboring regional networks are carrying the same programming, but can cause 'random' alternative frequency switches if they are not.

1. Press the **MENU** button.

Audio System

2. Select **AUDIO** or **Audio settings**.
3. Scroll to **RDS regional** and turn on or off with the **OK** button.
4. Press the **MENU** button to return.

Note: An integrated multi function display is situated above the unit. This shows important information regarding control of your system. Additionally, there are various icons placed around the display screen which light up when a function is active (for example CD, Radio or Aux.)


AUDIO UNIT - VEHICLES WITH: DIGITAL AUDIO BROADCAST (DAB) RADIO/SYNC/SONY AM/FM/CD

WARNING



Driving while distracted can result in loss of vehicle control, crash and injury. We strongly recommend that you use extreme caution when using any device that may take your focus off the road. Your primary responsibility is the safe operation of your vehicle. We recommend against the use of any hand-held device while driving and encourage the use of voice-operated systems when possible. Make sure you are aware of all applicable local laws that may affect the use of electronic devices while driving.

Audio System

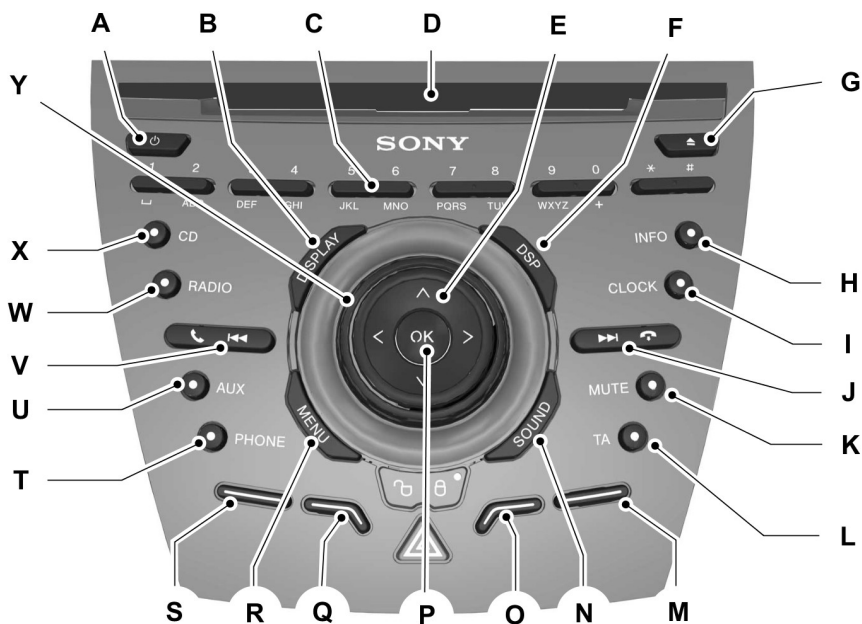


E129074

- A **On, Off:** Press the button to switch the audio system on or off.
- B **DISPLAY:** Press the button to turn on the display into idle mode.
- C **Numeric keypad:** Press the button to recall a previously stored station. To store a favorite station press and hold until the sound returns. In CD mode, press a number to select a track. In phone mode, use the buttons to dial a phone number.
- D **CD slot:** Where you insert a CD.
- E **Cursor arrows:** Press the button to scroll through on-screen choices.
- F **Digital signal processing:** Press the button to access the digital signal processing functions.
- G **Eject:** Press the button to eject a CD.
- H **INFO:** Press the button to access radio, CD, USB and iPod information.
- I **CLOCK:** Press the button to access the clock functions.

Audio System

- J **Seek up:** Press the button to go to the next station up the radio frequency band or the next track on a CD when in CD mode. In phone mode, use the button to end a phone call. An incoming call can be rejected.
- K **MUTE:** Press the button to turn the sound off, press again to turn the sound on.
- L **TA:** Press the button to turn traffic announcements on or off and cancels announcements during an active announcement.
- M **Function button 4:** Press the button to select different functions of the audio system depending on which mode (i.e. radio or CD) you are in.
- N **SOUND:** Press the button to adjust the sound settings for bass, treble, middle, balance and fade.
- O **Function button 3:** Press the button to select different functions of the audio system depending on which mode (i.e. radio or CD) you are in.
- P **OK:** Press the button to confirm on-screen selections.
- Q **Function button 2:** Press the button to select different functions of the audio system depending on which mode (i.e. radio or CD) you are in.
- R **MENU:** Press the button to access different audio system features.
- S **Function button 1:** Press the button to select different functions of the audio system depending on which mode (i.e. radio or CD) you are in.
- T **PHONE:** Press the button to access the phone feature of the SYNC system by pressing **PHONE** then **MENU**. See separate manual.
- U **AUX:** Press the button to access the AUX and SYNC features, it will also cancel the menu or list browsing.
- V **Seek down:** Press the button to go to the next station down the radio frequency band or the previous track on a CD, When in CD mode. In phone mode use the button to begin a phone call. An incoming phone call can be accepted.
- W **RADIO:** Press the button to select different radio bands, it will also cancel the menu or list browsing.
- X **CD:** Press the button to change source to CD, it will also cancel the menu or list browsing.
- Y **Volume:** Turn the dial to adjust the volume.

Audio System

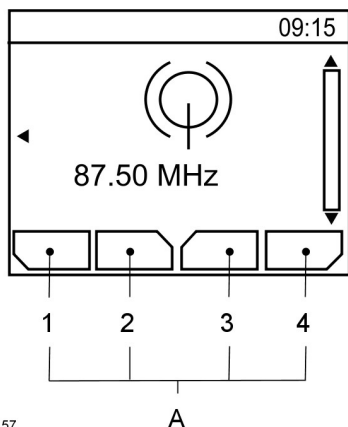

E104157

- A Descriptions for function buttons 1-4

Function buttons 1 to 4 are context dependent, and change according to the current unit mode. The description for the current function displays in the screen.

Sound Button

This will allow you to adjust the sound settings (for example bass, middle and treble).

1. Press the **SOUND** button.
2. Use the up and down arrow buttons to select the required setting.
3. Use the left and right arrow buttons to make the necessary adjustment. The display indicates the level selected.
4. Press the **OK** button to confirm the new settings.

Waveband Button

Press the **RADIO** button to select from the wavebands available.

You can use the selector to return to radio reception when you have been listening to another source.

Alternatively, press the left arrow button to display the available wavebands. Scroll to the required waveband and press **OK**.

Station Tuning Control

DAB Service Linking

Note: The system does not automatically turn on every time you switch the ignition on.

Note: Service linking allows cross-referencing to other corresponding frequencies of the same station, for example FM and other DAB ensembles.

Note: The system will automatically change to another corresponding station if the current one becomes unavailable, for example when leaving the coverage area.

Switching DAB service linking on and off. See (page 69).

Seek Tuning

Select a waveband and briefly press one of the seek buttons. The unit will stop at the first station it finds in the direction you have chosen.

Manual Tuning

1. Press function button 2.
2. Use the left and right arrow buttons to tune down or up the waveband in small increments or press and hold to increment quickly, until you find a station you want to listen to.
3. Press **OK** to continue listening to a station.

Scan Tuning

Scan allows you to listen to a few seconds of each station detected.

Audio System

1. Press function button 3.
2. Use the seek buttons to scan up or down the selected waveband.
3. Press function button 3 again or **OK** to continue listening to a station.

Station Preset Buttons

This feature allows you to store your favorite stations, they can be recalled by selecting the appropriate waveband and pressing one of the preset buttons.

1. Select a waveband.
2. Tune to the station required.
3. Press and hold one of the preset buttons. A progress bar and message will appear. When the progress bar completes the station has been stored. The audio unit will also mute momentarily as confirmation.

You can repeat this on each waveband and for each preset button.

Note: *When you drive to another part of the country, stations that broadcast on alternative frequencies, and are stored on preset buttons, may be updated with the correct frequency and station name for that area.*

Autostore Control

Note: *This will store up to a maximum of the 10 strongest signals available, either from the AM or the FM waveband, and overwrite the previously stored stations. You can also store stations manually in the same way as other wavebands.*

Note: *You must select either **FM AST** or **AM AST** to use this function.*

- Press and hold the **RADIO** button.
- When the search is complete, sound is restored and the strongest signals are stored on the autostore presets.

Traffic Information Control

Many stations that broadcast on the FM waveband have a TP code to signify that they carry traffic program information.

Turning Traffic Announcements On and Off

Before you can receive traffic announcements, you must press either the **TA** or **TRAFFIC button**. A TA display will appear to show the feature is switched on.

If you are already tuned to a station that broadcasts traffic information, **TP** will also be displayed. Otherwise the unit will search for a traffic program.

When traffic information is broadcast, it will automatically interrupt normal radio or CD playback and Traffic announcement will appear in the display.

If a non-traffic station is selected or recalled using a preset button, the audio unit will remain on that station unless **TA** or **TRAFFIC** is turned off, then on again.

Note: *If traffic announcement is on and you select a preset or manual tune to a non traffic announcement station no traffic announcement will be heard.*

Note: *When you are listening to a non traffic announcement station and turn traffic announcement off and on again a TP seek will occur.*

Traffic Announcement Volume

Traffic announcements interrupt normal broadcasts at a preset minimum level that is usually louder than normal listening volumes.

To adjust the preset volume:

- Use the volume control to make the necessary adjustment during an incoming traffic announcement broadcast. The display will show the level selected.

Audio System

Ending Traffic Announcements

The audio unit will return to normal operation at the end of each traffic announcement. To end the announcement prematurely, press **TA** or **TRAFFIC** during the announcement.

Note: If you press **TA** or **TRAFFIC** at any other time it will switch all announcements off.

Automatic Volume Control

When available, automatic volume control adjusts the volume level to compensate for engine noise and road speed noise.

1. Press the **MENU** button.
2. Select **AUDIO** or **AUDIO SETTINGS**.
3. Select **AVC LEVEL** or **ADAPTIVE VOL**.
4. Use the left or right arrow button to adjust the setting.
5. Press the **OK** button to confirm your selection.
6. Press the **MENU** button to return.

Digital Signal Processing

Digital Signal Processing Occupancy

This feature takes into account the differences in distance from the various speakers in your vehicle to each seat. You must select the correct sitting position for the audio to be correctly set.

Digital Signal Processing Equalizer

Select the music category that most suits your listening preference. The audio output will change to enhance the particular style of music chosen.

Changing the Digital Signal Processing Settings

1. Press the **MENU** button.

2. Select **AUDIO** or **AUDIO SETTINGS**.
3. Scroll to the required digital signal processing function.
4. Press the **OK** button.
5. Use the up and down arrow buttons to select the required setting.
6. Press the **OK** button to confirm your selection.
7. Press the **MENU** button to return.

News Broadcasts

Your audio unit may interrupt normal reception to broadcast news bulletins from stations on the FM waveband, radio data system or other enhanced network linked stations.

The display will indicate there is an incoming announcement, during news broadcasts. When the audio unit interrupts for a news broadcast the preset volume level will be the same as traffic announcements.

1. Press the **MENU** button.
2. Select **AUDIO** or **AUDIO SETTINGS**.
3. Scroll to **NEWS** and turn on or off with the **OK** button.
4. Press the **MENU** button to return.

Alternative Frequencies

The majority of programs that broadcast on the FM waveband have a program identification code, it can be recognized by audio units.

When your vehicle moves from one transmission area to another with the alternative frequencies tuning switched on, this function will search for the strongest station signal.

Under certain conditions, however, alternative frequencies tuning may temporarily disrupt normal reception.

Audio System

When selected, the unit continually evaluates signal strength and, if a better signal becomes available, the unit will switch to that alternative. It mutes while it checks a list of alternative frequencies and if necessary, it will search once across the selected waveband for a genuine alternative frequency.

It will restore radio reception when it finds one or if one is not found, the unit will return to the original stored frequency.

When selected, AF will be shown in the display.

1. Press the **MENU** button.
2. Select **AUDIO** or **AUDIO SETTINGS**.
3. Scroll to **ALTERNAT FREQ.** or **ALTERNATIVE FREQ.** and turn on or off with the **OK** button.
4. Press the **MENU** button to return.

Regional Mode

Regional mode controls the behavior of alternative frequencies switching between regionally related networks of a parent broadcaster. A broadcaster may run a fairly large network across a large part of the country. At various times of the day this large network may be broken down into a number of smaller regional networks, typically centered on major towns or cities. When the network is not split into regional variants, the whole network carries the same programming.

Regional mode ON: This prevents random alternative frequency switches when neighboring regional networks are not carrying the same programming.

Regional mode OFF: This allows a larger coverage area if neighboring regional networks are carrying the same programming, but can cause 'random' alternative frequency switches if they are not.

1. Press the **MENU** button.
2. Select **AUDIO** or **AUDIO SETTINGS**.
3. Scroll to **RDS REGIONAL** and turn on or off with the **OK** button.
4. Press the **MENU** button to return.

AUDIO UNIT - VEHICLES WITH: DIGITAL AUDIO BROADCAST (DAB) RADIO/NAVIGATION SYSTEM/SYNC/SONY AM/FM/CD


WARNING



Driving while distracted can result in loss of vehicle control, crash and injury. We strongly recommend that you use extreme caution when using any device that may take your focus off the road. Your primary responsibility is the safe operation of your vehicle. We recommend against the use of any handheld device while driving and encourage the use of voice-operated systems when possible. Make sure you are aware of all applicable local laws that may affect the use of electronic devices while driving.

Note: *An integrated multi function display is situated above the unit. This shows important information regarding control of your system. Additionally, there are various icons placed around the display screen which light up when a function is active (for example CD, Radio or Aux.)*

Audio System

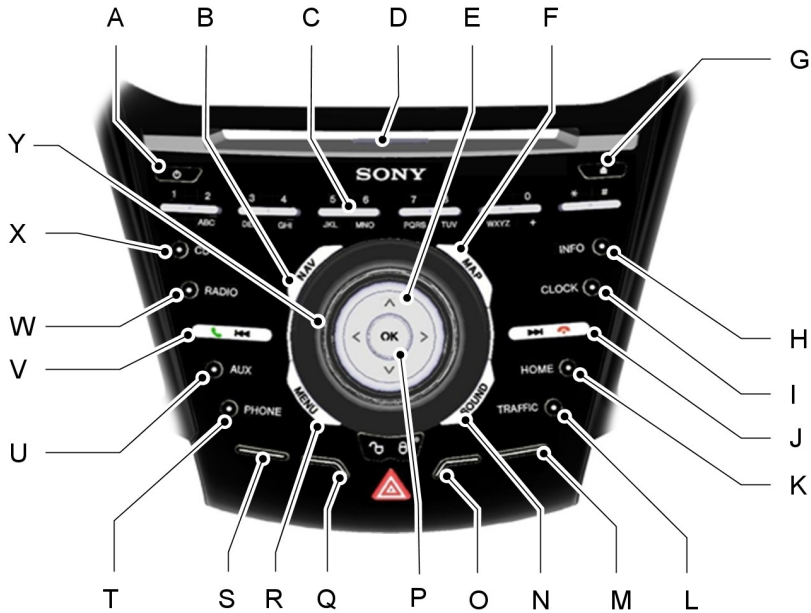


E156660

- A **On, Off:** Press the button to switch the audio system on or off.
- B **NAV:** Press the button to access the navigation system.
- C **Numeric keypad:** Press the button to recall a previously stored station. To store a favorite station press and hold until the sound returns. In CD mode, press a number to select a track. In phone mode, use the buttons to dial a phone number.
- D **CD slot:** Where you insert a CD.
- E **Cursor arrows:** Press the button to scroll through on-screen choices.
- F **MAP:** Press the button to access map features.
- G **Eject:** Press the button to eject a CD.
- H **INFO:** Press the button to access radio, CD, USB, iPod and Navigation information. If Navigation has been selected, pressing this button will show details of your current location or journey.
- I **CLOCK:** Press the button to access the clock functions.

Audio System

- J **Seek up:** Press the button to go to the next station up the radio frequency band or the next track on a CD when in CD mode. In phone mode, use the button to end a phone call. An incoming call can be rejected.
- K **HOME:** Press the button to access the address menu, to start navigating to your home address or to change your home address.
- L **TRAFFIC:** Press the button to turn traffic announcements on or off and cancel an active announcement. If Navigation has been selected, pressing this button takes you to the traffic menu.
- M **Function button 4:** Press the button to select different functions of the audio system depending on which mode (i.e. radio or CD) you are in.
- N **SOUND:** Press the button to adjust the sound settings for bass, treble, middle, balance and fade.
- O **Function button 3:** Press the button to select different functions of the audio system depending on which mode (i.e. radio or CD) you are in.
- P **OK:** Press the button to confirm on-screen selections.
- Q **Function button 2:** Press the button to select different functions of the audio system depending on which mode (i.e. radio or CD) you are in.
- R **MENU:** Press the button to access different audio system features.
- S **Function button 1:** Press the button to select different functions of the audio system depending on which mode (i.e. radio or CD) you are in.
- T **PHONE:** Press the button to access the phone feature of the SYNC system by pressing **PHONE** then **MENU**. See separate manual.
- U **AUX:** Press the button to access the AUX and SYNC features, it will also cancel the menu or list browsing.
- V **Seek down:** Press the button to go to the next station down the radio frequency band or the previous track on a CD, when in CD mode. In phone mode use the button to begin a phone call. An incoming phone call can be accepted.
- W **RADIO:** Press the button to select different radio bands, it will also cancel the menu or list browsing.
- X **CD:** Press the button to change source to CD, it will also cancel the menu or list browsing.
- Y **Volume:** Turn the dial to adjust the volume.

Audio System

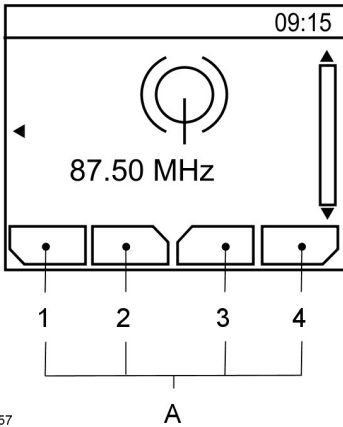

E104157

- A Descriptions for function buttons 1-4

Function buttons 1 to 4 are context dependent, and change according to the current unit mode. The description for the current function displays in the screen.

Sound Button

This will allow you to adjust the sound settings (for example bass, middle and treble).

1. Press the **SOUND** button.
2. Use the up and down arrow buttons to select the required setting.
3. Use the left and right arrow buttons to make the necessary adjustment. The display indicates the level selected.
4. Press the **OK** button to confirm the new settings.

Waveband Button

Press the **RADIO** button to select from the wavebands available.

You can use the selector to return to radio reception when you have been listening to another source.

Alternatively, press the left arrow button to display the available wavebands. Scroll to the required waveband and press **OK**.

Station Tuning Control

DAB Service Linking

Note: The system does not automatically turn on every time you switch the ignition on.

Note: Service linking allows cross-referencing to other corresponding frequencies of the same station, for example FM and other DAB ensembles.

Note: The system will automatically change to another corresponding station if the current one becomes unavailable, for example when leaving the coverage area.

Switching DAB service linking on and off. See (page 69).

Seek Tuning

Select a waveband and briefly press one of the seek buttons. The unit will stop at the first station it finds in the direction you have chosen.

Manual Tuning

1. Press function button 2.
2. Use the left and right arrow buttons to tune down or up the waveband in small increments or press and hold to increment quickly, until you find a station you want to listen to.
3. Press **OK** to continue listening to a station.

Scan Tuning

Scan allows you to listen to a few seconds of each station detected.

Audio System

1. Press function button 3.
2. Use the seek buttons to scan up or down the selected waveband.
3. Press function button 3 again or **OK** to continue listening to a station.

Station Preset Buttons

This feature allows you to store your favorite stations, they can be recalled by selecting the appropriate waveband and pressing one of the preset buttons.

1. Select a waveband.
2. Tune to the station required.
3. Press and hold one of the preset buttons. A progress bar and message will appear. When the progress bar completes the station has been stored. The audio unit will also mute momentarily as confirmation.

You can repeat this on each waveband and for each preset button.

Note: *When you drive to another part of the country, stations that broadcast on alternative frequencies, and are stored on preset buttons, may be updated with the correct frequency and station name for that area.*

Autostore Control

Note: *This will store up to a maximum of the 10 strongest signals available, either from the AM or the FM waveband, and overwrite the previously stored stations. You can also store stations manually in the same way as other wavebands.*

Note: *You must select either **FM AST** or **AM AST** to use this function.*

- Press and hold the **RADIO** button.
- When the search is complete, sound is restored and the strongest signals are stored on the autostore presets.

Traffic Information Control

Many stations that broadcast on the FM waveband have a TP code to signify that they carry traffic program information.

Turning Traffic Announcements On and Off

Before you can receive traffic announcements, you must press either the **TA** or **TRAFFIC** button. A TA display will appear to show the feature is switched on.

If you are already tuned to a station that broadcasts traffic information, **TP** will also be displayed. Otherwise the unit will search for a traffic program.

When traffic information is broadcast, it will automatically interrupt normal radio or CD playback and Traffic announcement will appear in the display.

If a non-traffic station is selected or recalled using a preset button, the audio unit will remain on that station unless **TA** or **TRAFFIC** is turned off, then on again.

Note: *If traffic announcement is on and you select a preset or manual tune to a non traffic announcement station no traffic announcement will be heard.*

Note: *When you are listening to a non traffic announcement station and turn traffic announcement off and on again a TP seek will occur.*

Traffic Announcement Volume

Traffic announcements interrupt normal broadcasts at a preset minimum level that is usually louder than normal listening volumes.

To adjust the preset volume:

- Use the volume control to make the necessary adjustment during an incoming traffic announcement broadcast. The display will show the level selected.

Audio System

Ending Traffic Announcements

The audio unit will return to normal operation at the end of each traffic announcement. To end the announcement prematurely, press **TA** or **TRAFFIC** during the announcement.

Note: If you press **TA** or **TRAFFIC** at any other time it will switch all announcements off.

Automatic Volume Control

When available, automatic volume control adjusts the volume level to compensate for engine noise and road speed noise.

1. Press the **MENU** button.
2. Select **AUDIO** or **AUDIO SETTINGS**.
3. Select **AVC LEVEL** or **ADAPTIVE VOL**.
4. Use the left or right arrow button to adjust the setting.
5. Press the **OK** button to confirm your selection.
6. Press the **MENU** button to return.

Digital Signal Processing

Digital Signal Processing Occupancy

This feature takes into account the differences in distance from the various speakers in your vehicle to each seat. You must select the correct sitting position for the audio to be correctly set.

Digital Signal Processing Equalizer

Select the music category that most suits your listening preference. The audio output will change to enhance the particular style of music chosen.

Changing the Digital Signal Processing Settings

1. Press the **MENU** button.

2. Select **AUDIO** or **AUDIO SETTINGS**.
3. Scroll to the required digital signal processing function.
4. Press the **OK** button.
5. Use the up and down arrow buttons to select the required setting.
6. Press the **OK** button to confirm your selection.
7. Press the **MENU** button to return.

News Broadcasts

Your audio unit may interrupt normal reception to broadcast news bulletins from stations on the FM waveband, radio data system or other enhanced network linked stations.

The display will indicate there is an incoming announcement, during news broadcasts. When the audio unit interrupts for a news broadcast the preset volume level will be the same as traffic announcements.

1. Press the **MENU** button.
2. Select **AUDIO** or **AUDIO SETTINGS**.
3. Scroll to **NEWS** and turn on or off with the **OK** button.
4. Press the **MENU** button to return.

Alternative Frequencies

The majority of programs that broadcast on the FM waveband have a program identification code, it can be recognized by audio units.

When your vehicle moves from one transmission area to another with the alternative frequencies tuning switched on, this function will search for the strongest station signal.

Under certain conditions, however, alternative frequencies tuning may temporarily disrupt normal reception.

Audio System

When selected, the unit continually evaluates signal strength and, if a better signal becomes available, the unit will switch to that alternative. It mutes while it checks a list of alternative frequencies and if necessary, it will search once across the selected waveband for a genuine alternative frequency.

It will restore radio reception when it finds one or if one is not found, the unit will return to the original stored frequency.

When selected, **AF** will be shown in the display.

1. Press the **MENU** button.
2. Select **AUDIO** or **AUDIO SETTINGS**.
3. Scroll to **ALTERNAT FREQ.** or **ALTERNATIVE FREQ.** and turn on or off with the **OK** button.
4. Press the **MENU** button to return.

Regional Mode

Regional mode controls the behavior of alternative frequencies switching between regionally related networks of a parent broadcaster. A broadcaster may run a fairly large network across a large part of the country. At various times of the day this large network may be broken down into a number of smaller regional networks, typically centered on major towns or cities. When the network is not split into regional variants, the whole network carries the same programming.

Regional mode ON: This prevents random alternative frequency switches when neighboring regional networks are not carrying the same programming.

Regional mode OFF: This allows a larger coverage area if neighboring regional networks are carrying the same programming, but can cause random alternative frequency switches if they are not.

1. Press the **MENU** button.

2. Select **AUDIO** or **AUDIO SETTINGS**.
3. Scroll to **RDS REGIONAL** and turn on or off with the **OK** button.
4. Press the **MENU** button to return.

DIGITAL RADIO

The system allows you to listen to DAB (Digital Audio Broadcast) radio stations.

Note: Coverage differs from region to region and will influence the quality of reception. It is broadcast nationwide, regionally and locally.

The following formats are supported:

- DAB
- DAB+
- DMB-Audio (Digital Multimedia Broadcasting).

Ensembles

Ensembles contain a group of radio stations. Each ensemble can consist of several different radio stations.

The radio station name displays below the ensemble name.

Note: When you tune from one ensemble to another, it can take a while until the system synchronizes to the next ensemble. The system mutes during synchronization.

Selecting Radio Band

DAB1 and DAB2 operate in the same way. You can store up to 10 different presets on each band.

1. Press the **RADIO** button.
2. Press the left arrow button to display the available wavebands.
3. Select **DAB1** or **DAB2**.

Audio System

Radio Station Tuning Control

Press the **RADIO** button and select **DAB1** or **DAB2**. Both preset banks operate in the same way and can store up to 10 different preset radio stations.

Note: *When you reach the first or last radio station within an ensemble, further tuning will skip to the next ensemble. There may be a delay during this change and the audio will briefly mute.*

Seek Tuning

1. Press a seek button. The system will stop at the first radio station it finds in the direction chosen.

Radio Station List

This feature displays all the available radio stations in a list.

1. Press function button 1.
2. Press the left or right arrow buttons to change ensembles. Press the up or down arrow button to navigate to your required radio station.
3. Press **OK** to confirm your selection.

Note: *The display will only show radio stations in the current ensemble.*

Manual Tuning

1. Press function button 2.
2. Press the left or right arrow button to tune up or down the waveband in small increments. Press and hold to move through the waveband quickly.
3. Press **OK** to confirm your selection.

Note: *Seek tuning is also possible within this screen.*

Radio Station Preset Buttons

This feature allows you to store up to 10 favorite radio stations from any ensemble in each preset bank.

1. Select a radio station.
2. Press and hold one of the preset buttons. A progress bar and message will appear. When the progress bar completes the radio station has been stored. The system will mute momentarily as confirmation.

Once stored press a preset button at any time to select a favourite radio station.

Note: *Radio stations stored on the preset buttons may not always be available if you have left the coverage area. The system will mute when this happens.*

Radio Text

You can display extra information. For example; artist name. To switch this option on, select a radio station and press function button 3.

Note: *Extra information may not always be available.*

Service Linking

If you leave the coverage area of a DAB radio station the system will automatically switch to the corresponding FM radio station.

You can switch this feature on and off using the information display. See (page 69).

Note: *If a DAB radio station has no corresponding FM radio station, the audio will mute when attempting to switch.*

Note: *The system will display the FM symbol when DAB and FM radio stations link.*

Audio System

AUDIO INPUT JACK

WARNINGS



Driving while distracted can result in loss of vehicle control, crash and injury. We strongly recommend that you use extreme caution when using any device that may take your focus off the road. Your primary responsibility is the safe operation of your vehicle. We recommend against the use of any hand-held device while driving and encourage the use of voice-operated systems when possible. Make sure you are aware of all applicable local laws that may affect the use of electronic devices while driving.



Do not connect or adjust the settings on your portable music player when your vehicle is moving.



Do not place your portable music player on the instrument panel. Hard objects may become projectiles in a crash or sudden stop, which may increase the risk of serious injury.




E149149

The audio input jack allows you to connect and play music from a portable music player through your vehicle speakers. You can use any portable music player designed for use with headphones.

Your audio extension cable must have male 1/8th-inch (3.5 millimeter) connectors at each end.

1. Switch off the radio and portable music player. Apply the parking brake and shift the transmission into park (**P**) for automatic transmission or first gear for manual transmission. Switch the ignition off.
2. Plug the extension cable from the portable music player into the audio input jack.
3. Switch the radio on. Select either a tuned FM station or a CD.
4. Adjust the volume as desired.
5. Switch your portable music player on and adjust its volume to half its maximum level.
6. Press **AUX** or **MEDIA** until **LINE** or **LINE IN** appears in the display. You should hear music from your device even if it is low.
7. Adjust the volume on your portable music player until it reaches the volume level of the FM station or CD. Do this by switching back and forth between the AUX and FM or CD controls.

USB PORT (If Equipped)

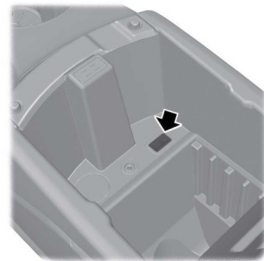

E142604


The USB port allows you to plug in media playing devices, memory sticks and charge devices (if supported). See **SYNCTM** (page 269).

Audio System

AUDIO TROUBLESHOOTING

Audio unit display	Rectification
Please check CD	General error message for CD fault conditions, for example cannot read the CD, data-CD inserted, etc. Make sure the disc is loaded correctly. Clean and re-try, or replace disc with known music disc. If error persists contact an authorized dealer.
CD drive malfunction	General error message for CD fault conditions. For example a mechanism fault.
CD drive high temp.	Ambient temperature too hot – unit will not work until it has cooled down.

GENERAL INFORMATION

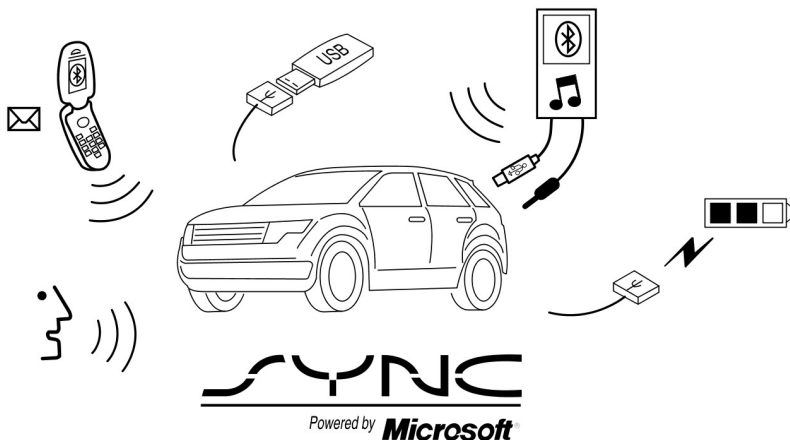

E142598

SYNC is an in-vehicle communications system that works with your Bluetooth-enabled cell phone and portable media player.

This allows you to:

- Make and receive calls
- Access and play music from your media player
- Use Emergency Assistance and applications, via SYNC Applink*
- Access phonebook contacts and music using voice commands
- Stream music from your connected cell phone
- Select pre-defined text messages (if your device supports this)

- Use the advanced voice recognition system
- Charge your USB device (if your device supports this)

*These features are not available in all markets and may require activation. Available Applink enabled apps vary by market.

Make sure that you review your device's manual before using it with SYNC.

Support

For further support, see an authorized dealer. For more information, visit the regional Ford website.

Safety Information

WARNING



Driving while distracted can result in loss of vehicle control, crash and injury. We strongly recommend that you use extreme caution when using any device that may take your focus off the road. Your primary responsibility is the safe operation of your vehicle. We recommend against the use of any hand-held device while driving and encourage the use of voice-operated systems when possible. Make sure you are aware of all applicable local laws that may affect the use of electronic devices while driving.

When using SYNC:

- Do not operate playing devices if the power cords or cables are broken, split or damaged. Carefully place cords and cables where you cannot step on them or they do not interfere with the operation of pedals, seats, compartments or safe driving abilities.
- Do not leave playing devices in your vehicle during extreme conditions as it could cause them damage. Refer to your device's manual for further information.
- Do not attempt to service or repair the system. See an authorized dealer.

Privacy Information

When a cell phone is connected to SYNC, the system creates a profile that is linked to that cell phone. The system creates the profile to offer you more mobile features and to operate more efficiently. Among other things, this profile may contain data about your phonebook, text messages (read and unread) and call history. This will include the history of calls when your cell phone was not connected to the system. If you connect a media player, the system creates and retains an index of

supported media content. The system also records a short development log of approximately 10 minutes of all recent system activity. The log profile and other system data may be used to improve the system and help diagnose any problems that may occur.

The cell phone profile, media player index and development log will remain in the system unless deleted. They are generally accessible in your vehicle only when you connect your cell phone or media player. If you no longer plan to use the system or your vehicle, we recommend you complete a master reset to erase all stored information. See **Information Displays** (page 69).

Special equipment is required to access system data. Access to your vehicle's SYNC module is also required. We will not access the system data for any purpose other than as described without consent. Examples where system data can be accessed are for a court order, where required by law enforcement, other government authorities or other third parties acting with lawful authority. Other parties may seek to access the information independently of us. Further privacy information is available. See **SYNC™ Applications and Services** (page 284).

USING VOICE RECOGNITION

This system helps you control many features using voice commands. This allows you to keep your hands on the steering wheel and focus on what is around you.

Helpful Hints

Make sure the interior of your vehicle is as quiet as possible. Wind noise from open windows and road vibrations may prevent the system from correctly recognizing spoken commands.

Before giving a voice command, wait for the system announcement to finish followed by a single beep. Any command spoken before this does not register with the system.

Speak naturally, without long pauses between words.

You can interrupt the system at any time while it is speaking by pressing the voice button. You can also cancel a voice session at any time by pressing and holding the voice button.

Initiating a Voice Session



Press the voice button. A list of available commands appears in the display.

Command	Description
Bluetooth audio	Stream audio from your cell phone.
(cancel stop exit)	Cancel the requested action.
((line AV audio video) in AUX audio video)	Access the device connected to the auxiliary input jack.
(phone Blackberry iPhone Mobile)	Make calls.
(USB [stick] iPod MP3 [player])	Access the device connected to your USB port.
voice settings	Adjust the level of voice interaction and feedback.
[main menu] help	Hear a list of voice commands available in the current mode.

System Interaction and Feedback

The system provides feedback through audible tones, prompts, questions and spoken confirmations depending on the situation and your chosen level of interaction. You can customize the voice recognition system to provide more or less instruction and feedback.

The default setting is to a higher level of interaction in order to help you learn to use the system. You can change these settings at any time.

Adjusting the Interaction Level



Press the voice button. When prompted:

Command	Description
voice settings	Provides access to change the interaction level.

Then any of the following:

SYNCTM (If Equipped)

Command	Description
interaction mode advanced	Provides less audible interaction and more tone prompts.
interaction mode novice	Provides more detailed interaction and guidance.

Confirmation prompts are short questions the system asks when it is not sure of your request or when there is more than one possible response to your request. For example, the system may ask if the command phone is correct.

Press the voice button. When prompted:

Command	Description
voice settings	Provides access to change the confirmation prompt setting.

Then any of the following:

Command	Description
confirmation prompts off	Makes a best guess from the command. You may still occasionally be asked to confirm settings.
confirmation prompts on	Clarifies your voice command with a short question.

The system creates suggestion lists when it has the same confidence level of several options based on your voice commands. When switched on, the system may prompt you with as many as four possibilities for clarification.

Command	Description
media candidate lists off	Makes a best guess from the media suggestion list. The system may occasionally ask you questions.
media candidate lists on	Clarifies your voice command for media suggestions.
phone candidate lists off	Makes a best guess from the cell phone suggestion list. The system may occasionally ask you questions.
phone candidate lists on	Clarifies your voice command for cell phone suggestions.

Changing the Voice Settings

You can change the voice settings using

the information and entertainment display.

Press the **MENU** button.

Action	Message
1	SYNC-Settings
2	Voice settings

USING SYNC™ WITH YOUR PHONE

Hands-free calling is one of the main features of SYNC. While the system supports a variety of features, many are dependent on your cell phone's functionality.

At a minimum, most cell phones with Bluetooth wireless technology support the following functions:

- Answering an incoming call.
- Ending a call.
- Using privacy mode.
- Dialing a number.
- Redialing.
- Call waiting notification.
- Caller ID.

Other features such as text messaging using Bluetooth and automatic phonebook download are cell phone dependent features. To check your cell phone's compatibility, refer to your device's manual or visit the regional Ford website.

Pairing a Cell Phone For the First Time

Wirelessly pairing your cell phone with the system allows you to make and receive hands-free calls.

Note: *You must switch the ignition and radio on.*

Note: *To scroll through the menus, press the up or down arrows on your audio system.*

1. Make sure the Bluetooth feature on your cell phone is switched on before starting the search. Refer to your device's manual if necessary.
2. Press the **PHONE** button. When the audio display indicates that no phones are paired, select the option to add.
3. When a message to begin pairing appears in the audio display, search for SYNC on your cell phone to start the pairing process.
4. Select SYNC on your cell phone.
5. Wait until the PIN appears on the phone display. Compare the PIN on the phone with the PIN shown in the audio display and accept the request on the phone and the vehicle display. The display indicates when the pairing is successful.

Note: *In some cases the phone will request to enter a PIN. Enter the six-digit PIN provided by the system in the audio display. The display indicates when the pairing is successful.*

Depending on your cell phone's capability and your market, the system may prompt you with questions such as setting the current cell phone as the primary cell phone (the cell phone the system automatically tries to connect with first when you switch the ignition on) or downloading your phonebook.



The information display may show your cell phone's battery charge level and signal strength.

Using Voice Commands



Make sure to switch on your phone's Bluetooth feature before starting the search. See your device's manual if necessary.

Press the voice button and when prompted say:

Voice Command	Action and Description
(pair ([Bluetooth] device phone Bluetooth [audio]) add phone)	Follow the instructions on the audio display.

Words in square brackets [] are optional and do not have to be spoken for the system to understand the command.

Depending on your phone's capability and your market, the system may prompt you with questions, such as setting the current phone as the primary phone (the phone SYNC automatically tries to connect with first upon vehicle start-up) and downloading your phonebook.

Pairing Subsequent Cell Phones

Wirelessly pairing your cell phone with the system allows you to make and receive hands-free calls.

Note: You must switch the ignition and radio on.

Note: To scroll through the menus, press the up or down arrows on your audio system.

1. Make sure the Bluetooth feature on your cell phone is switched on before starting the search. Refer to your device's manual if necessary.
2. Press the **PHONE** button.
3. Select the option for Bluetooth devices.
4. Press the **OK** button.
5. Select the option to add. This starts the pairing process.
6. When a message to begin pairing appears in the audio display, search for SYNC on your device to start the pairing process.
7. Select SYNC on your cell phone.
8. Wait until the PIN appears on the phone display. Compare the PIN on the phone with the PIN shown in the audio display and accept the request on the phone and the vehicle display. The display indicates when the pairing is successful.

Note: In some cases the phone will request to enter a PIN. Enter the six-digit PIN provided by the system in the audio display. The display indicates when the pairing is successful.

The system may prompt you with questions such as setting the current cell phone as the primary cell phone or downloading your phonebook.

Cell Phone Voice Commands



Press the voice button and when prompted say either:

Voice Command
(phone Blackberry iPhone Mobile)
Then say any of the following:
call ()
call ___ at home

SYNC™ (If Equipped)

Voice Command	
call ___ ([at] work [(in at) [the]] office)	
call ___ on (mobile cell)	
call ___ on other	
dial [[a] number]	1
([go to] privacy [on] transfer to phone handsfree off)	2
(hold call [on] (put place) call on hold)	2
join (call calls)	2
mute [call] [on]	2
(mute [call] off Unmute [call])	2
(turn ringer on silent mode off)	
(turn ringer off silent mode [on])	

Voice Command	
[text] (messages message)	3
Help	

___ is a dynamic listing, meaning that it could be the name of anything, such as a group, artist or song. For example you could say "Play artist The Beatles".

¹ See **Dial** table below.

² These commands are only valid while in a phone call.

³ See the text message table below.

Phone book commands: When you ask SYNC to access things such as a phonebook name or number, the requested information appears in the display to view. Press the phone button and say, "Call" to call the contact.

Dial Commands

Press the voice button and when prompted say any of the following commands:

Command	Action
call (someone [[a] name])	To call the contact.
dial [[a] number]	112 (one-one-two), 700 (seven hundred) etc.
Pound	
Number	0 (zero) to 9 (nine)
Asterisk	
clear	Deletes all entered digits
(delete correct)	Deletes the last set of entered digits.
Plus	
Star	

Note: To exit dial mode, press and hold the phone button or any button on the audio unit.

Phonebook Hints

To hear how the SYNC system speaks a name browse phonebook, select a contact and press:

Menu Item
Hear it

Menu Commands

Press the voice button and when prompted say either:

Command
(turn ringer on silent mode off)
(turn ringer off silent mode [on])

Words in square brackets [] are optional and do not have to be spoken for the system to understand the command.

Making a Call

Press the voice button and when prompted say either:

Command	Action
call (someone [[a] name])	
dial [[a] number]	Followed by a number. When the system confirms the number say:
(dial send)	

To erase the last spoken digit say:

Command	Action
(delete correct)	Or press the left arrow button on the audio unit.

To erase all spoken digits say:

Command	Action
clear	Or press and hold the left arrow button on the audio unit.

To end the call, press the end call button on the steering wheel or select the end call option in the audio display and press **OK**.

Receiving a Call

When receiving a call, you can:

- Answer the call by pressing the accept call button on the steering wheel or by selecting the accept call option in the audio display. Press the **OK** button.
- Reject the call by pressing the reject call button on the steering wheel or by selecting the reject call option in the audio display. Press the **OK** button.
- Ignore the call by doing nothing.

Cell Phone Options During an Active Call

During an active call, you have extra menu features which become available, for example putting a call on hold.

To access this menu, choose one of the options available at the bottom of the audio display or select the option for more.

Message	Description and Action
Mic. off	Turn your vehicle's microphone off. To turn the microphone on, select the option again.
Privacy	Switch a call from an active hands-free environment to your cell phone for a more private conversation. When selected, the audio display will indicate the call is private.
Hold	Put an active call on hold. When selected, the audio display will indicate the call is on hold.
Dial a number	Enter numbers using the audio system numeric keypad, for example numbers for passwords.
Join calls	Join two separate calls. The system supports a maximum of three callers on a multi-party or conference call. <ol style="list-style-type: none"> 1. Select the option for more. 2. Access the desired contact through the system or use voice commands to place the second call. Once actively in the second call, select the option for more. 3. Scroll to the option to join calls and press the OK button.
Phonebook	Access your phonebook contacts. <ol style="list-style-type: none"> 1. Select the option for more. 2. Scroll to the option for phonebook and press the OK button. 3. Scroll through your phonebook contacts.

SYNC™ (If Equipped)

Message	Description and Action
	<ol style="list-style-type: none"> 4. Press the OK button again when the desired selection appears in the audio display. 5. Press the OK button or dial button to call the selection.
Call history	<p>Access your call history log.</p> <ol style="list-style-type: none"> 1. Select the option for more. 2. Scroll to the option until call history appears. Press the OK button. 3. Scroll through your call history options (incoming, outgoing or missed). 4. Press the OK button again when the desired selection appears in the audio display. 5. Press the OK button or dial button to call the selection.

Accessing Features Through the Cell Phone Menu

You can access your call history, phonebook, sent text messages as well as access cell phone and system settings. You can also access advanced features such as emergency assistance.

The system attempts to automatically re-download your phonebook and call history each time your cell phone connects to the system. You must turn on the auto download feature if your cell phone supports it.

Note: *This is a cell phone dependent feature.*

1. Press the **PHONE** button to enter the cell phone menu.
2. Select one of the options available.

Message	Description and Action
Dial a number	Dial a number using the audio system numeric keypad.
Redial	Redial the last number called (if available). Press the OK button to select.
Phonebook	<p>Access your downloaded phonebook.</p> <ol style="list-style-type: none"> 1. Press the OK button to confirm and enter. You can use the options at the bottom of the screen to quickly access an alphabetical category. You can also use the letters on the keypad to jump in the list. 2. Scroll through your phonebook contacts.

SYNC™ (If Equipped)

Message	Description and Action
	<ol style="list-style-type: none"> 3. Press the OK button again when the desired selection appears in the audio display. 4. Press the OK button or dial button to call the selection.
Call history	<p>Access any previously dialed, received or missed calls.</p> <ol style="list-style-type: none"> 1. Press the OK button to select. 2. Scroll to select either incoming calls, outgoing calls or missed calls. Press the OK button to make your selection. 3. Press the OK button or dial button to call the selection.
Speed Dial	Select one of 10 speed dial entries. To set a speed dial entry, go to the phonebook and press and hold one of the numbers on the audio system numeric keypad.
Text messaging	Send, download and delete text messages.
BT Devices	Access the option for Bluetooth device menu listings (add, connect, set as primary, on or off, delete).
Phone settings	View various settings and features on your cell phone.
Emerg. Assist.	Turn the SYNC emergency assistance feature on or off.

Text Messaging

The system allows you to receive, send, download and delete text messages. The system can also read incoming text messages to you so that you do not have to take your eyes off the road.

Note: *This is a cell phone dependent feature.*

Receiving a Text Message

Note: *This is a phone-dependent feature. Your phone must support downloading text messages using Bluetooth to receive incoming text messages.*

Note: *This is a speed-dependent feature and is only available when your vehicle is traveling at 3.1 mph (5 km/h) or less.*

When a new message arrives, an audible tone sounds and the audio display indicates you have a new message.

To hear the message you can say:

Voice command	Description and action
(listen to read) ([text] message)	Select this option to have the system read the message to you.

Using the screen you also have the following options:

Menu Item	Description and action	
Ignore	Select this option, or do nothing, and the message goes into your text message inbox.	
View	Select the view option to open the text message. Once selected, you have the ability to have the message read to you, to view other messages. For additional options select:	
	More...	If you select this option, use the arrow button to scroll through the following options:
	Reply to sender	Press the OK button to access, and then scroll through a list of pre-defined messages to send.
	Call sender	Press the OK button to call the sender of the message.
	Forward msg.	Press the OK button to forward the message to anyone in your phonebook or call history. You can also choose to enter a number.

Sending, Downloading and Deleting Your Text Messages

1. Press the **PHONE** button.

2. Select the text messaging option, then press the **OK** button.

Choose from the following:

Message	Description and Action
New	When you select the option to send a text message, a list of pre-defined messages appear in the audio display. Allows you to send a new text message based on a pre-defined set of 15 messages.
View	Allows you to read the full message and in addition provides the option to have the message read out to you by the system. To go to the next message select the more option. This allows you to reply to the sender, call the sender or forward the message.
Delete	Allows you to delete current text messages from the system (not your cell phone). The audio display indicates when all your text messages have been deleted.
More...	Allows you to delete all messages or to manually trigger a download of all unread messages from your cell phone.

Sending a Text Message

1. Select the send option when the desired selection is highlighted in the audio display.
2. Select the confirmation option when the contact appears and press the **OK** button again to confirm when the system asks if you would like to send the message. Each text message is sent with a pre-defined signature.

Note: You can send text messages either by choosing a contact from the phonebook and selecting the text option from the audio display or by replying to a received message in the inbox.

Note: Only one recipient is allowed per text message.

Accessing Your Cell Phone Settings

These are cell phone dependent features. Your cell phone settings allow you to access and adjust features such as your ringtone, text message notification, modify your phonebook and set up automatic download.

1. Press the **PHONE** button.
2. Scroll until the phone settings option appears, then press the **OK** button.
3. Scroll to select from the following options:

Message	Description and Action
Set as master	If this option is checked, the system will use this cell phone as the master when there is more than one cell phone paired to the system. This option can be changed for all paired cell phones (not only for the active one) using the Bluetooth devices menu.
Phone status	See the cell phone name, provider name, cell phone number, signal level and battery level. When done, press the left arrow button to return to the cell phone status menu.
Set ringtone	Select which ringtone sounds during an incoming call (one of the system's or your cell phone's). If your cell phone supports in-band ringing, your cell phone's ringtone sounds when you choose the cell phone ringtone option. <ol style="list-style-type: none"> 1. Press the OK button to select and scroll to hear each ringtone. 2. Press the OK button to select.
Text msg notify	Have the option of hearing an audible tone to notify you when a text message arrives. Press the OK button to turn the audible tone on or off.
Phonebook pref.	Modify the contents of your phonebook, e.g. add, delete, download. Press the OK button to select and scroll between the options in the table below.

SYNC™ (If Equipped)

To modify the phone book preferences, choose from the following:

Message	Description and Action
Add contacts	Push the desired contacts on your cell phone. Refer to your device's manual on how to push contacts. Press the OK button to add more contacts from your phonebook.
Delete	When a message asking you to delete appears, select the option to confirm. Press the OK button to delete the current phonebook and call history. The system takes you back to the menu for phone settings.
Download now	Press the OK button to select and download your phonebook to the system.
Auto-download	When automatic download is switched on, any changes, additions or deletions saved in the system since your last download are deleted. When automatic download is switched off, your phonebook will not be downloaded when your cell phone connects to the system. Your phonebook, call history and text messages can only be accessed when your paired cell phone is connected to the system. Check or uncheck this option to automatically download your phonebook each time your cell phone connects to the system. Downloading times are cell phone dependent and quantity dependent.

Bluetooth Devices

This menu provides access to your Bluetooth devices. Use the arrow buttons to scroll through the menu options. It allows you to add, connect and delete devices and set a cell phone as primary.

Bluetooth Devices Menu Options

1. Press the **PHONE** button.
2. Scroll until the Bluetooth device option appears, then press the **OK** button.
3. Scroll to select from the following options:

Message	Description and Action
Add	Pair additional cell phones to the system. <ol style="list-style-type: none"> 1. Select the option to add to start the pairing process. 2. When a message to begin pairing appears in the audio display, search for SYNC on your cell phone. Refer to your device's manual if necessary. 3. Select SYNC on your cell phone.

SYNC™ (If Equipped)

Message	Description and Action
	<ol style="list-style-type: none"> 4. Wait until the PIN appears on the phone display. Compare the PIN on the phone with the PIN shown in the audio display and accept the request on the phones and the vehicles display. The display indicates when the pairing is successful.* 5. When the option to set the cell phone as the primary cell phone appears, select either yes or no. 6. Depending on the functionality of your cell phone, the system may ask you extra questions (for example, if you would like to download your phonebook). Select either yes or no to confirm your response.
Delete	After deleting a cell phone from the list, the cell phone can only be connected again by repeating the full pairing process. Select the delete option and confirm when the system asks to delete the selected device.
Master	The system attempts to connect with the primary cell phone every time you switch the ignition on. When a cell phone is selected as primary, it appears first in the list and is marked with an asterisk. Set a previously paired cell phone as your primary cell phone. Select the master option to confirm the primary cell phone.
Conn.	Connect a previously paired cell phone. You can only have one cell phone connected at a time to use the cell phone functionality. When another cell phone is connected, the previous cell phone will be disconnected from the telephone services. The system allows you to use different Bluetooth devices for the cell phone functionality and the Bluetooth audio music playback feature at the same time.
Discon.	Disconnects the selected cell phone. Select this option and confirm when asked to. After disconnecting a cell phone, it can be connected again without repeating the full pairing process.

*In some cases the phone will request to enter a PIN. Enter the six-digit PIN provided by the system in the audio display. The display indicates when the pairing is successful.

System Settings

1. Press the **MENU** button.
2. Select the SYNC settings option, then press the **OK** button.
3. Scroll to select from the following options:

SYNC™ (If Equipped)

Message	Description and Action
Bluetooth on	Check or uncheck this option to turn the Bluetooth interface of the system on or off. Select this option then press the OK button to change the option's status.
Set defaults	This selection does not erase your indexed information (phonebook, call history, text messages and paired devices). Select this option and confirm when prompted in the audio display. Return to the factory default settings.
Master reset	Completely erase all information stored on the system (phonebook, call history, text messages and paired devices) and return to the factory default settings. Select this option and confirm when prompted in the audio display. The display indicates when complete and the system takes you back to the previous menu.
Install on SYNC	Install applications or software updates you have downloaded. Select this option and confirm when prompted in the audio display. There must be a valid SYNC application or update available on the USB thumb drive in order to finish an installation successfully.
System info	Display the system's version numbers as well as its serial number. Press the OK button to select.
Voice settings	The voice settings submenu contains various options. See Using Voice Recognition (page 270).
Browse USB	Browse the actual menu structure of the connected USB device. Press the OK button and use the up or down arrows to scroll through the folders and files. Use the left or right arrows to enter and leave a folder. Media content can be directly selected for playback from this menu.
Emerg. Assist.	You can turn the emergency assistance feature on or off. See SYNC™ Applications and Services (page 284).

Press the **MENU** button to enter the system menu.

SYNC™ APPLICATIONS AND SERVICES

A list of available applications appears. Each application may have its own specific settings.

SYNC™ (If Equipped)

Message	Description and Action
SYNC-Apps	Scroll to this option, and then press OK .

SYNC Emergency Assistance

WARNINGS



For this feature to work, your cell phone must have Bluetooth and be compatible with the system.



Always place your cell phone in a secure location inside your vehicle.

Failure to do so may cause serious injury to someone or damage the cell phone which could prevent this feature from working correctly.



Unless the feature setting is switched on prior to a crash, the system will not attempt to place an emergency call which could delay the response time, potentially increasing the risk of serious injury or death. Do not wait for the system to make an emergency call if you can do it yourself. Dial emergency services immediately to avoid a delayed response time. If you do not hear Emergency Assistance within five seconds of the crash, the system or cell phone may be damaged or non-functional.

If a crash deploys an airbag or triggers the fuel pump shut off, the system may contact emergency services by dialing 112 (the wireless emergency number that works in most European countries) through a paired and connected cell phone. For more information about the system and Emergency Assistance, visit the regional Ford website.

Note: Before selecting this feature, you must read the Emergency Assistance privacy notice later in this section for important information.

Note: When you switch this feature on or off, that setting applies for all paired cell phones. If you have turned this feature off and a previously paired phone connects when you switch on the ignition, either a voice message plays, a display message or icon is shown, or both.

Note: Every cell phone operates differently. While this feature works with most cell phones, some cell phones may experience difficulties using this feature.

Note: Make sure you are familiar with the information about airbag deployment. See **Supplementary Restraints System** (page 27).

Switching Emergency Assistance On and Off

Press the **MENU** button then select:

Message	Action
SYNC-Apps	Press OK .
Emergency Assistance	Press OK . Select the option you require and press OK .

Display Options

If you switch on this feature, a confirmation message appears in the display.

If you switch off this feature, a dialog will appear in the display, which allows you to set a voice reminder.

Off with voice reminder provides a display and voice reminder when your cell phone connects and your vehicle starts.

Off without voice reminder provides a display reminder only without a voice reminder when your cell phone connects.

To make sure that Emergency Assistance works correctly:

- The system must have power and be working correctly at the time of the crash and during feature activation and use.
- You must switch on the feature before a crash.
- You must have a cell phone connected to the system.
- In certain countries, it may be necessary to have a valid and registered SIM card with credit in order to place and maintain an emergency call.
- A connected cell phone must have the ability to make and maintain an outgoing call at the time of the crash.
- A connected cell phone must have adequate network coverage, battery power and signal strength.
- Your vehicle must have battery power.

Note: *This feature only works in a European country or region where SYNC Emergency Assistance can call the local emergency services. Visit the regional Ford website for details.*

In the Event of a Crash

Note: *Not every crash deploys an airbag or triggers the fuel pump shut off (which may turn on Emergency Assistance). However, if Emergency Assistance is triggered the system tries to contact the emergency services. If a connected cell phone sustains damage or loses connection to the system, it searches for and tries to connect to any available previously paired cell phone. The system attempts to dial 112.*

Before making a call:

- If you do not cancel the call and SYNC makes a successful call, an introductory message plays for the emergency operator. After this message, there is hands-free communication between your vehicle's occupants and the operator.
- The system provides a short window of time (approximately 10 seconds) to cancel the call. If you do not cancel the call, the system attempts to dial 112.
- The system plays a message letting you know when it attempts to make an emergency call. You can cancel the call by selecting the relevant function button or by pressing the end call button on the steering wheel.

During a call:

- Emergency Assistance uses your vehicle GPS or cellular network information when available to determine the most appropriate language to use. It alerts the emergency operator of the crash and delivers the introductory message. This may include your vehicle GPS coordinates.
- The language the system uses to interact with the occupants of your vehicle may differ from the language used to deliver information to the emergency operator.

- After the delivery of the introductory message the voice line opens so that you can speak hands-free with the emergency operator.
- When the line is connected, you must be prepared to provide your name, phone number and location information immediately.

Note: While the system provides information to the emergency operator, the system plays a message letting you know it is sending important information. It then lets you know when the line is open to start hands-free communication.

Note: During an Emergency Assistance call, an emergency priority screen appears which contains vehicle GPS coordinates when available.

Note: It is possible that GPS location information is not available at the time of the crash; in this case, Emergency Assistance will still attempt to place an emergency call.

Note: It is possible that the emergency services will not receive the GPS coordinates; in this case, hands-free communication with an emergency operator is available.

Note: The emergency operator may also receive information from the cellular network such as cell phone number, cell phone location and cell phone carrier name independent from SYNC Emergency Assistance.

Emergency Assistance may not work if:

- Your cell phone or Emergency Assistance hardware sustains damage in the crash.
- The vehicle battery or the system has no power.
- A crash ejects your cell phone from your vehicle.

- You do not have a valid and registered SIM card with credit in your cell phone.
- You are in a European country or region where the SYNC Emergency Assistance cannot place the call. Visit the regional Ford website for details.

Important Information about the Emergency Assistance Feature

Emergency Assistance does not currently call emergency services in the following markets: Albania, Belarus, Bosnia and Herzegovina, Macedonia, Netherlands, Ukraine, Moldova and Russia.

Visit the regional Ford website for the latest details.

Emergency Assistance Privacy Notice

When you switch on Emergency Assistance, it may disclose to emergency services that your vehicle has been in a crash involving the deployment of an airbag or activation of the fuel pump shut off. This feature has the capability to disclose your location information to the emergency operator or other details about your vehicle or crash to provide the most appropriate emergency services.

If you do not want to disclose this information, do not switch on the feature.

SYNC AppLink

The system enables voice and manual control of SYNC AppLink enabled smartphone apps. Once an app is running through AppLink, you can control main features of the app through voice commands and manual controls.

Note: You must pair and connect your smartphone to SYNC to access AppLink.

Note: iPhone users need to connect the phone to the USB port.

Note: Android users need to connect the phone to SYNC using Bluetooth.

SYNC™ (If Equipped)

Note: For information on available apps, supported smartphone devices and troubleshooting tips please visit the Ford website.

Note: Make sure you have an active account for the app that you have downloaded. Some apps will work automatically with no setup. Other apps will want you to configure your personal settings and personalize your experience by creating stations or favorites. We recommend you do this at home or outside of your vehicle.

To Access Using the SYNC Menu

Scroll through the list of available applications and press **OK** to select an app. Once an app is running through SYNC, press the right arrow button to access the app menu. You can access various app features from here, for example thumbs up and thumbs down. Press the left arrow button to exit the app menu.

Press the **MENU** button then select:

Message	Description and Action
SYNC-Apps	
Mobile Apps	Scroll to this option, and then press OK .
Find new Apps	Select this option if the app required is not listed.

Note: If a SYNC AppLink compatible app cannot be found, make sure the required app is running on the mobile device.

To Access Using Voice Commands

Press the voice button and when prompted say:

Command	Description and Action
mobile (apps applications)	Say the name of the application after the tone. The application will start. While an app is running through SYNC, you can press the voice button and speak commands specific to the app.

The following voice commands are always available:

Command	Description and Action
[main menu] help	Use this command to hear a list of available voice commands.
mobile (apps applications)	The system will prompt you to say the name of the app to start it.
list [mobile] (apps applications)	The system will list all of the currently available mobile apps.

SYNC™ (If Equipped)

Command	Description and Action
find [new] [mobile] (apps applications)	The system will search your connected mobile device for SYNC compatible apps.
<the name of the app>	Say the name of an app to start it on SYNC.
<the name of the app> Help	The system will list the available voice commands for the requested app.
(quit exit close)	Use this command followed by the name of the app.

Press the **MENU** button then select:

Enabling and Disabling Push Notifications

Some apps can send push notifications. A push notification is an alert from an app running in the background and is delivered by voice, pop up or both. This may be particularly useful for news or location based apps.

Message	Description and Action
SYNC-Apps	
Mobile Apps	
Settings	
All Apps	If push notifications are supported, this setting will be listed. Select to enable or disable the feature as required.

Enabling SYNC Mobile Apps

To use the system you must consent to send and receive app authorization information and updates, using the data plan associated with the connected device.

Data is sent to Ford in the United States through the connected device. The information is encrypted and includes your VIN, SYNC module number, anonymous usage statistics and debugging information. Updates may take place automatically.

Note: You must enable mobile apps for each connected device the first time you select a mobile app using the system.

Note: Standard data rates will apply. Ford is not responsible for any additional charges you may receive from your service provider, when your vehicle sends or receives data through the connected device. This includes any additional charges incurred due to driving in areas when roaming out of a home network.

SYNC™ (If Equipped)

App Status

You can view the current status of an app

in the settings menu. There are three possible statuses:

Message	Description and Action
Update needed	The system has detected a new app requiring authorization or a general permissions update is required.
Up-to-date	No update is required.
Updating...	The system is trying to receive an update.

Options in the settings menu:

Message	Description and Action
Request Update	If an update is required and you want to manually request the update, for example when you are in a Wi-Fi hotspot.
Disable Updates	Select this option to disable automatic updates.

App Permissions

Permissions are divided by groups. You can grant these group permissions individually. You can change a permission group status any time when not driving, by using the settings menu.

When you launch an app using SYNC, the system may ask you to grant certain permissions, for example:

- To allow your vehicle to provide vehicle information to the app including, but not limited to: Fuel level, fuel consumption, engine speed, battery voltage, odometer, VIN, external temperature, gear position, tire pressure, ambient temperature, date and time.
- To allow your vehicle to provide driving characteristic information, including, but not limited to: MyKey, seat belt status, engine speeds, braking events, brake pedal switch, acceleration, accelerator pedal position, clutch pedal switch, trip length, trip time, trip cost, percent engine on time, and percent of time at speed.

SYNC™ (If Equipped)

- To allow your vehicle to provide location information, including: GPS and speed.
- To allow the app to send push notifications using the vehicle display and voice capabilities while running in a background state.

Note: You will only need to grant permissions the first time you use an app with SYNC.

Note: We are not responsible or liable for any damages or loss of privacy relating to usage of an app, or dissemination of any vehicle data that you approve us to provide to an app.

USING SYNC™ WITH YOUR MEDIA PLAYER

You can access and play music from your media player through your vehicle's speaker system using the system's media menu or voice commands. You can also sort and play your music by specific categories, for example artist or albums.

SYNC is capable of hosting nearly any media player including: iPod, Zune, Plays from device players, and most USB drives. SYNC also supports audio formats, for example MP3, WMA, WAV and ACC.

Confirm that the USB device has been formatted correctly and has the following specifications:

- USB 2.0.
- File format must be FAT16/32.
- Supply current not greater than 500mA.

Note: NTFS file format is not supported.

The format of the audio files on the USB device must be:

- MP3.
- Non DRM protected WMA.
- WAV.
- AAC.

Connecting Your Media Player to the USB Port

Note: If your media player has a power switch, make sure you switch on the device.

To Connect Using Voice Commands

1. Plug the device into your vehicle's USB port.
2. Press the voice button and when prompted say:

Voice Command	Description and Action
(USB [stick] iPod MP3 [player])	You can now play music by saying any of the appropriate voice commands. Refer to the media voice commands.

You do not need to say words that appear within square brackets. For example, for where (USB [stick] | IPOD | MP3 [player]) appears, you can say USB or USB stick.

To Connect Using the System Menu

1. Plug the device into your vehicle's USB port.

2. Press the **AUX** button until an initializing message appears in the display.

SYNCTM (If Equipped)

Message	Description and Action
Browse USB	Depending on how many media files are on your connected device, an indexing message may appear in the display. When indexing is complete, the screen returns to the playback menu.

Choose from the following:

Message
Play all
Playlists
Songs
Artists
Albums
Genres
Browse USB
Reset USB
Exit

What's Playing?

At any time during playback, you can press the voice button and ask the system what is playing. The system reads the metadata tags of the current track, if populated.

Media Voice Commands



Press the voice button and when prompted say:

Voice Command	Description and Action
(USB [stick] iPod MP3 [player])	You can now play music by saying any of the appropriate voice commands.

You can say any of the voice commands that appear within open and close brackets that are separated by |. For example, where; (what's | what is) appears you say; what's or what is.

You must say any of the voice commands that appear outside of open and close brackets. For example, where; who plays this (what's | what is) playing, you must say; who plays this (what's or what is) playing.

Then any of the following:

Voice Command	
play	
pause	
play [album] [by [artist]]	*
Play all	
play [artist]	*
play [genre]	*
[play] next track	
play [playlist]	*
[play] previous track	
play [song track title file]	*
repeat off	
repeat one [on]	
(browse search show) album	
(browse search show) artist	
(browse search show) genre	

Voice Command
(browse search show) playlist
(browse search show) all (album albums)
(browse search show) all (artist artists)
(browse search show) all (genre genres)
(browse search show) all (playlist playlists)
(browse search show) all (song songs title titles file files track tracks)
shuffle [all] [on]
shuffle off
[play] (similar music more like this)
((who's who is) this who plays this (what's what is) playing [now] (what which) (song track artist) is this (who's who is) playing (what's what is) this)

* This voice command is not available until indexing is complete.

Voice Command Guide

Voice Command	Description and Action
(browse search show) genre	The system searches all the data from your indexed music and if available, begins to play the chosen type of music.
[play] (similar music more like this)	The system compiles a playlist and then plays similar music to what is currently playing from the USB port using indexed metadata information.
(browse search show) artist	The system searches for a specific artist, track or album from the music indexed through the USB port.
(browse search show) album	The system searches for a specific artist, track or album from the music indexed through the USB port.

SYNC™ (If Equipped)

The system is also capable of playing music from your cell phone through Bluetooth.

To switch the Bluetooth audio on, use the **AUX** or **Source** button or press the voice button and when prompted and say:

Voice Command	Description and Action
Bluetooth audio	

Then any of the following:

Voice Command	Description and Action
pause	
play	
[play] next track	
[play] previous track	

Media Menu Features

The media menu allows you to select how to play your music, for example by artist, genre, shuffle or repeat, and to find similar music or reset the index of your USB devices.

Press **AUX** to select USB playback.

Message	Description and Action
Options	This will enter the media menu.

Then any of the following:

SYNC™ (If Equipped)

Message	Description and Action
Shuffle	Choose to shuffle or repeat your music. Once you make your choice, it remains on until you switch it off.
Repeat track	Choose to shuffle or repeat your music. Once you make your choice, it remains on until you switch it off.
Similar music	You can play similar types of music to the current playlist from the USB port. The system uses the metadata information of each track to compile a playlist. The system then creates a new list of similar tracks and then begins playing. Each track must have the metadata tags populated for this feature. With certain playing devices, if your metadata tags are not populated, the tracks will not be available in voice recognition, the play menu or this option. However, if you place these tracks onto your playing device in mass storage device mode they are available in voice recognition, the play menu or this option. The system places unknowns into any unpopulated metadata tag.
Reset SYNC USB	Resets the USB index. After the new indexing is complete you can choose what to play from the USB song library.

Accessing Your USB Song Library

1. Plug the device into your vehicle's USB port.
2. Press **AUX** to select USB playback.

Message	Description and Action
Browse USB	This menu allows you to select and play your media files by artist, album, genre, playlist and track or even to browse what is on your USB device.

If there are no media files to access, the display indicates there is no media. If there are media files, you have the following options to scroll through and select:

SYNCTM (If Equipped)

Message	Description and Action
Play all	Play all indexed media files from your playing device one at a time in numerical order.* <ol style="list-style-type: none">1. Press OK to select. The first track title appears in the display.
Playlists	Access your playlists from formats, ASX, M3U, WPL or MTP.* <ol style="list-style-type: none">1. Press OK to select.2. Scroll to select the desired playlist, and then press OK.
Songs	Search for and play a specific indexed track.* <ol style="list-style-type: none">1. Press OK to select.2. Scroll to select the desired track, and then press OK.
Artists	Sort all indexed media files by artist. Once selected, the system lists and then plays all artists and tracks alphabetically.* <ol style="list-style-type: none">1. Press OK to select.2. Scroll to select the desired artist, and then press OK.
Albums	Sort all indexed media files by albums.* <ol style="list-style-type: none">1. Press OK to select.2. Scroll to select the desired albums, and then press OK.
Genres	Sort indexed music by genre type.* <ol style="list-style-type: none">1. Press OK to select.2. Scroll to select the desired genre, and then press OK.

SYNC™ (If Equipped)

Message	Description and Action
Browse USB	Browse all supported media files on your media player connected to the USB port. You can only view media files that are compatible with SYNC; other saved files are not visible. <ol style="list-style-type: none"> 1. Press OK to select. 2. Scroll to browse indexed media files on your flash drive, and then press OK.
Reset USB	Resets the USB index. After the new indexing is complete, you can choose what to play from the USB song library.

* You can use the buttons at the bottom of the audio display to jump to a certain alphabetical category quickly. You can also use the letters on the numeric keypad to jump in the list.

Bluetooth Devices and System Settings

You can access these menus using the audio display. See **Using SYNC™ With Your Phone** (page 273).

SYNC™ TROUBLESHOOTING

Your SYNC system is easy to use. However, should questions arise, please refer to the tables below.

To check your cell phone's compatibility, visit the regional Ford website.

Cell phone issues		
Issue	Possible cause	Possible solution
A lot of background noise during a phone call.	The audio control settings on your cell phone may be affecting SYNC performance.	Refer to your device's manual about audio adjustments.
During a call, I can hear the other person but they cannot hear me.	Possible cell phone malfunction.	Try switching off your cell phone, resetting it or removing the battery, then trying again.
		Make sure that the microphone for SYNC is not set to off.
SYNC is not able to download my phone-book.	This is a cell phone-dependent feature.	Check your cell phone's compatibility.
	Possible cell phone malfunction.	Try switching off your cell phone, resetting it or removing the battery, then trying again.

SYNC™ (If Equipped)

Cell phone issues		
Issue	Possible cause	Possible solution
		Try pushing your phonebook contacts to SYNC by selecting the option to add.
		You must switch on your cell phone and the automatic phonebook download feature on SYNC.
The system says "Phonebook downloaded" but my SYNC phonebook is empty or is missing contacts.	Limitations on your cell phone's capability.	Try pushing your phonebook contacts to SYNC by selecting the option to add.
		If the missing contacts are stored on your SIM card, try moving them to your cell phone's memory.
		Remove any pictures or special ring tones associated with the missing contact.
		You must switch on your cell phone and the automatic phonebook download feature on SYNC.
I am having trouble connecting my cell phone to SYNC.	This is a cell phone-dependent feature.	Check your cell phone's compatibility.
	Possible cell phone malfunction.	Try switching off your cell phone, resetting it or removing the battery, then trying again.
		Try deleting your device from SYNC and deleting SYNC from your device, then trying again.
		Always check the security and auto accept prompt settings relative to the SYNC Bluetooth connection on your cell phone.
		Update your cell phone's firmware.
Switch off the auto download setting.		
Text messaging is not working on SYNC.	This is a cell phone-dependent feature.	Check your cell phone's compatibility.
	Possible cell phone malfunction.	Try switching off your cell phone, resetting it or removing the battery, then trying again.
	iPhone	<ul style="list-style-type: none"> • Go to your cell phone's Settings. • Go to the Bluetooth Menu.

SYNC™ (If Equipped)

Cell phone issues		
Issue	Possible cause	Possible solution
		<ul style="list-style-type: none"> • Make sure the connection status shows Not Connected. • Press the blue circle to enter the next menu. • Turn on Show Notifications. • Turn on Sync Contacts. <p>Your iPhone is now set up to forward incoming text messages to SYNC. Repeat these steps for every other Sync vehicle you are connected to. Your iPhone will only forward incoming text messages to SYNC if it is unlocked. Replying to text messages using SYNC is not supported by iPhone. Text messages from WhatsApp and Facebook Messenger are not supported.</p>
Audible text messages do not work on my cell phone.	This is a cell phone-dependent feature.	<p>Your cell phone must support downloading text messages through Bluetooth to receive incoming text messages.</p> <p>Access the text messaging menu of SYNC to see if your cell phone supports the feature. Press the PHONE button and then scroll and select the option for text messaging, then press OK.</p>
	This is a cell phone limitation.	<p>Because each cell phone is different, refer to your device's manual for the specific cell phone you are pairing. In fact, there can be differences between cell phones due to brand, model, service provider and software version.</p>

SYNCTM (If Equipped)

USB and media issues		
Issue	Possible cause	Possible solution
I am having trouble connecting my device.	Possible device malfunction.	Try switching off the device, resetting it or removing the battery, then trying again.
		Make sure you are using the manufacturer's cable.
		Make sure correctly insert the USB cable to the device and your vehicle's USB port.
		Make sure that the device does not have an auto-install program or active security settings.
SYNCTM does not recognize my device when I start my vehicle.	This is a device limitation.	Make sure you are not leaving the device in your vehicle during very hot or cold temperatures.
Bluetooth audio does not stream.	This is a device-dependent feature.	Make sure you connect the device to SYNCTM and press play on your device.
	The device is not connected.	
SYNCTM does not recognize music that is on my device.	Your music files may not contain the correct artist, song title, album or genre information.	Make sure that all song details are populated.
	The file may be corrupted.	Try replacing the corrupt file with a new version.
	The song may have copyright protection that does not allow it to play.	Some devices require you to change the USB settings from mass storage to media transfer protocol class.
When I connect my iPhone or iPod Touch through the USB and Bluetooth Audio at the same time, I sometimes do not hear any sound.	This is a device limitation.	From the iPhone or iPod Touch music now playing screen, select the audio device airplay icon at the very bottom of your iPhone or iPod Touch screen.
		To listen to the iPhone or iPod Touch through Bluetooth Audio, select SYNCTM.
		To listen to the iPhone or iPod Touch through USB, select Dock Connector.

Voice command issues		
Issue	Possible cause	Possible solution
SYNC does not understand what I am saying.	You may be using the wrong voice commands.	Review the cell phone voice commands and the media voice commands at the beginning of their respective sections.
		Refer to the audio display during an active voice session to find a list of voice commands there.
	You may be speaking too soon or at the wrong time.	The microphone for the system is either in your rear view mirror or in the headliner just above the windshield.
SYNC does not understand the name of a song or artist.	You may be using the wrong voice commands.	Review the media voice commands at the beginning of the media section.
	You may not be saying the name exactly as the system saved it.	Say the song or artist exactly as the system saved it. If you say, "Play Artist Prince", the system does not play music by Prince and the Revolution or Prince and the New Power Generation.
		Make sure you are saying the complete title such as "California remix featuring Jennifer Nettles".
	If the song titles are in capital letters, you have to spell them. LOLA requires you to say "L-O-L-A".	
	The system may not be reading the name the same way you are saying it.	Do not use special characters in the title, as the system does not recognize them.
SYNC does not understand or is calling the wrong contact when I want to make a call.	You may be using the wrong voice commands.	Review the cell phone voice commands at the beginning of the cell phone section.
		You can also use the cell phone and media suggestion lists to get a list of possible suggestions when the system cannot fully understand you. See Using Voice Recognition (page 270).

SYNC™ (If Equipped)

Voice command issues		
Issue	Possible cause	Possible solution
	You may not be saying the name exactly as the system saved it.	Make sure you are saying the name exactly as the system saved it. For example, if the contact name is Joe Wilson, say "Call Joe Wilson".
		The system works better if you list full names such as "Joe Wilson" rather than "Joe".
	Contacts in your phonebook may be very short and similar or they may contain special characters.	Do not use special characters such as 123 or ICE as the system does not recognize them.
	Your phonebook contacts may be in capital letters.	If the contacts are in capital letters, you have to spell them. JAKE requires you to say "Call J-A-K-E".
The SYNC voice control system is having trouble recognizing foreign names stored on my cell phone.	You may be saying the foreign names using the currently selected language for SYNC.	<p>SYNC applies the phonetic pronunciation rules of the selected language to the contact names stored on your cell phone.</p> <p>Helpful Hint: You can select your contact manually. Press PHONE. Select the option for phonebook and then contact name. Press the soft-key option to hear it. SYNC will read the contact name to you, giving you some idea of the pronunciation it is expecting.</p>
The SYNC voice control system is having trouble recognizing foreign tracks, artists, albums, genres and playlist names from my media player or USB flash drive.	You may be saying the foreign names using the currently selected language for SYNC.	<p>SYNC applies the phonetic pronunciation rules of the selected language to the names stored on your media player or USB flash drive. It is able to make some exceptions for very popular artist names (for example, U2) such that you can always use the English pronunciation for these artists.</p>

SYNC™ (If Equipped)

Voice command issues		
Issue	Possible cause	Possible solution
The system generates voice prompts and the pronunciation of some words may not be accurate for my language.	SYNC uses text-to-speech voice prompt technology.	SYNC uses a synthetically generated voice rather than pre-recorded human voice.
		SYNC offers several new voice control features for a wide range of languages. Dialing a contact name directly from the phonebook without pre-recording (for example, "call John Smith") or selecting a track, artist, album, genre or playlist directly from your media player (for example, "play artist Madonna).
My previous Bluetooth voice control system allowed me to control the radio, CD, and climate control systems. Why can I not control these systems with SYNC?	The focus of SYNC is to control your mobile devices and the content stored on them.	SYNC offers significant capability beyond the previous system such as dialing a contact name directly from the phonebook without pre-recording (for example, "call John Smith") or selecting a track, artist, album, genre or playlist directly from your media player (for example, "play artist Madonna).

SYNC™ (If Equipped)

General		
Issue	Possible cause	Possible solution
<p>The language selected for the instrument cluster and information and entertainment display does not match the SYNC language (phone, USB, Bluetooth audio, voice control and voice prompts).</p>	<p>SYNC does not support the currently selected language for the instrument cluster and information and entertainment display.</p>	<p>SYNC only supports four languages in a single module for text display, voice control and voice prompts. The country where you bought your vehicle dictates the four languages based on the most popular languages spoken. If the selected language is not available, SYNC remains in the current active language.</p>
		<p>SYNC offers several new voice control features for a wide range of languages. Dialing a contact name directly from the phonebook without pre-recording (for example, "call John Smith") or selecting a track, artist, album, genre or playlist directly from your media player (for example, play artist Madonna).</p>

SYNC™ (If Equipped)

AppLink issues		
Issue	Possible cause(s)	Possible solution(s)
AppLink Mobile Applications: When I select "Find New Apps," SYNC does not find any applications.	An AppLink capable phone is not connected to SYNC.	Ensure you have a compatible smartphone; an Android with OS 2.3 or higher or an iPhone 3GS or newer with iOS 5.0 or higher. Additionally, ensure your phone is paired and connected to SYNC in order to find AppLink-capable apps on your device. iPhone users must also connect to SYNC's USB port with an Apple USB cable.
My phone is connected, but I still cannot find any apps.	AppLink-enabled apps are not installed and running on your mobile device.	Ensure you have downloaded and installed the latest version of the app from your phone's app store. Ensure the app is running on your phone. Some apps require you to register or login on the app on the phone before using them with AppLink. Also, some may have a "Ford SYNC" setting, so check the app's settings menu on the phone.
My phone is connected, my app(s) are running, but I still cannot find any apps.	Sometime apps do not properly close and re-open their connection to SYNC, over ignition cycles, for example.	Closing and restarting apps may help SYNC find the application if you cannot discover it inside the vehicle. On an Android device, if apps have an "Exit" or 'Quit' option, select that then restart the app. If the app does not have that option, you can also manually "Force Close" the app by going to the phone's settings menu, selecting 'Apps,' then finding the particular app and choosing 'Force stop.' Don't forget to restart the app afterwards, then select "Find New Apps" on SYNC.
		On an iPhone with iOS7+, to force close an app, double tap the home button then swipe up on the app to close it. Tab the home button again, then select the app again to restart it. After a few seconds, the app should then appear in SYNC's Mobile App's Menu.

SYNC™ (If Equipped)

AppLink issues		
Issue	Possible cause(s)	Possible solution(s)
My Android phone is connected, my app(s) are running, I restarted them, but I still cannot find any apps.	There is a bluetooth bug on some older versions of the Android OS that may cause apps that were found on your previous vehicle drive to not be found again if you have not turned off bluetooth.	Reset the Bluetooth on your phone by turning it off and then turning Bluetooth back on. If you are in your vehicle, SYNC should be able to automatically re-connect to your phone if you press the "Phone" button.
My iPhone phone is connected, my app is running, I restarted the app but I still cannot find it on SYNC.	The USB connection to SYNC may need to be reset.	Unplug the USB cable from the phone, wait a moment, and plug the USB cable back in to the phone. After a few seconds, the app should appear in SYNC's Mobile Apps Menu. If not, "Force Close" the application and restart it.
I have an Android phone. I found and started my media app on SYNC, but there is no sound or the sound is very low.	The bluetooth volume on the phone may be low.	Try increasing the Bluetooth volume of the device by using the device's volume control buttons which are most often found on the side of the device.
I can only see some of the AppLink apps running on my phone listed in SYNC's Mobile Apps Menu.	Some Android devices have a limited number of bluetooth ports apps can use to connect. If you have more AppLink apps on your phone than the number of available Bluetooth ports, you will not see all of your apps listed in SYNC's mobile apps menu.	Force close or uninstall the apps you do not want SYNC to find. If the app has a "Ford SYNC" setting, disable that setting in the app's settings menu on the phone.

Navigation

Press the relevant button on the unit bezel to access the system functions. This will take you into the selected mode.

For instructions on how to operate the audio unit and the available navigation features, see the relevant audio unit procedure. See **Audio System** (page 236).

Loading Map Data

WARNINGS



The indicated maximum speed may not be applicable to your vehicle. It is always your responsibility to control your vehicle, supervise any system and obey the correct speed limit. Failure to do so could result in loss of vehicle control.



The front glass on the liquid crystal display may break if hit with a hard object. If the glass breaks, do not touch the liquid crystalline material. In case of contact with the skin, wash immediately with soap and water.

Note: Do not switch the ignition on or attempt to start the engine while the software is updating.

Note: Do not clean the unit with solvents or aerosol cleaning agents. Use only a damp cloth.

Note: The navigation SD card must be in the SD card slot to operate the navigation system. If you need a replacement SD card, see an authorized dealer.

Note: The SD card slot is spring-loaded. To remove the SD card, push the card in and release it. Do not attempt to remove the card without first pushing it in. This could cause damage.



E129900

1. Load the navigation SD card into the slot.
2. Press the **NAV** button. The road safety warning confirms the map data import was successful.
3. The system is now ready to use.

For map updates and system upgrades, see an authorized dealer.

Note: You can only use Ford licensed data.

Road Safety

WARNING



Driving while distracted can result in loss of vehicle control, crash and injury. We strongly recommend that you use extreme caution when using any device that may take your focus off the road. Your primary responsibility is the safe operation of your vehicle. We recommend against the use of any handheld device while driving and encourage the use of voice-operated systems when possible. Make sure you are aware of all applicable local laws that may affect the use of electronic devices while driving.

Navigation

Note: You are ultimately responsible for the safe operation of your vehicle and must evaluate whether it is safe to follow route suggestions. Navigation features are provided only as an aid. Driving decisions based on observations of local conditions and existing traffic regulations must be observed. Do not follow route suggestions if they would result in an unsafe or illegal maneuver, an unsafe situation, or if you would be directed into an area that you consider unsafe. Maps used by this system may be inaccurate due to errors, changes in roads, traffic or driving conditions.

Safety Information

If detailed viewing of route instructions is necessary, pull off the road when it is safe to do so and park your vehicle.

Setting a Route

Note: After the first entry, the country selected will remain the default option until you manually change it.

Press the **NAV** button and select:

Message	Action
Destination input	Starting at the top, select the country followed by either the postcode or city and street name, together with the house number or intersection. Use the arrow buttons to enter the destination details.
Start guidance	Select this after entering sufficient information.

The route is calculated and the screen returns to the main navigation screen. If prompted, select the type of route you require first. Follow the screen and voice prompts to reach your destination.

Note: If required you can select different character screens by using the up and down arrow buttons.

Note: If you only need to navigate to a city center, just enter the city name and start guidance.

Note: If you only need to navigate to a district, within a city for example, just enter the district name and start guidance.

Menu Structure

You can access the menu using the information and entertainment display control. See **Information Displays** (page 69).

For a description on some menu items refer to the relevant table.

Note: Some options may appear slightly different or not at all if the items are optional.

Message	
Route	Active guidance
	Route sections list
	Block next section

Navigation

Message		
	Unblock route sections	
Destination input	Country	
	City/postcode	
	Street	
	District	
	Start guidance	
Traffic	TA	
	TMC for route	
	All TMC	
	Block next section	
	Route sections list	
	Unblock route sections	
Home address	Start guidance	
	Change address	
Last destinations		
Favourites	Favourites (A-Z)	
Points of interest	POIs nearby	
	Near destination	
	Along motorway	
	POIs near address	
	Search by name	
Tour planning	New tour	
	Stored tours	
Store position		
Route options	Route:	Eco
		Fast
		Short

Navigation

Message	
	Always ask
	Driver:
	Leisurely
	Normal
	Fast
	Eco settings
	Trailer:
	Roof box
	Dynamic
	Motorway
	Tunnel
	Ferry/motorail
Toll	
Seasonal roads	
Toll sticker	
Special functions	GPS info
	System info
	Enter position
	Demo mode

Route Options

Press the **NAV** button and scroll to route options. You can then set your route options for any of the following.

Message		Description and Action
Route:	Always ask	Select to make sure that you are always given the choice of route option for your journey.
Eco		Uses the most fuel efficient route. Your driving style will influence this.
Fast		Uses the fastest route possible.

Navigation

Message		Description and Action
Short		Uses the shortest distance possible.
Driver:	Leisurely	This option will calculate your time of arrival based on a leisurely drive to the destination.
	Normal	This option will calculate your time of arrival based on a normal drive to the destination.
	Fast	This option will calculate your time of arrival based on a fast drive to the destination.
Eco settings	Trailer:	Use this feature to change the economy settings of your journey relating to whether or not you are towing a trailer and if so the size of trailer being towed.
	Roof box	Use this feature to change the economy settings of your journey relating to the use of a roof box.
	Dynamic	When switched on, and if the unit is receiving a valid traffic message channel signal, the route will be automatically updated to take into account real time traffic incidents or congestion. This feature can be useful in avoiding delays or hold ups on journeys.
	Motorway	When switched off the system will avoid freeways on your route and automatically update your route distance and timings.
	Tunnel	When switched off the system will avoid tunnels on your route and automatically update your route distance and timings.
	Ferry/motorail	When switched off the system will avoid ferry crossings and car train facilities on your route and automatically update your route distance and timings.

Navigation

Message		Description and Action
	Toll	When switched off the system will avoid toll roads on your route and automatically update your route distance and timings.
	Seasonal roads	When switched off the system will avoid seasonal roads (for example, mountain passes) on your route and automatically update your route distance and timings.
	Toll sticker	When switched off the system will avoid toll routes and automatically update your route distance and timings.

Information

Press the information button to view details of your current location or journey. During active route guidance pressing this button will repeat the last navigation instruction.

Setting Your Navigation Preferences

Select settings for the system to take into account when planning your route.

Press the NAV button and choose any of the following options.

Message	Description and Action
Destination input	Enter your destination details (for example enter city names, enter street names or pick a place from a map).
Traffic	Choose how you want the system to handle traffic problems along your route (for example, block sections on route).
Home address	See the location on the map currently stored as the home position. Only one entry can be saved as the home address.
Last destinations	Access a history of previous destinations entered in the system. Select the required repeat destination from the list.
Favourites	See a list of your saved favorites.
Points of interest	Search for and select points of interest nearby, on your route or at your destination. You can search by name or by category.
Tour planning	Set up and store a new tour by entering a number of different destinations and select the order in which you wish to visit them. You can also modify an existing tour or recall a previous tour. The system will automatically calculate and display your chosen journey.

Navigation

Message	Description and Action
Store position	Store and name your current position. This will automatically save in your favorites.
Route options	Set your route options from the available list.
Special functions	Select GPS and system information or a demonstration of the system functionality. Select a demonstration mode where the system will simulate a journey whilst the vehicle is stationary. You can manually select a vehicle start position.

Press the MENU button, select the navigation option and choose any of the following options.

Message	Description and Action
Route options	Set your route options.
Map display	Customize the map display for your journey (for example arrows on map, arrival times and map content).
Assistance options	Customize display information for your journey (for example signs, lanes and speed limits). Turn the hazard warning feature on or off.
Personal data	Delete personal data (for example your home address).
Reset all settings	Reset the navigation settings.

Storing Your Home Address

1. Press the **NAV** button.
2. Select the home address option.
3. Enter the required details using the arrow buttons.
4. Press the confirm function button.

Note: *Your last destination will automatically display if you go to change your home address.*

Adding a Favorite

1. Press the **NAV** button.
2. Scroll to the destination input option.

3. Enter the required details using the arrow buttons.
4. Press the store function button.

Note: *If you select store position, this will also save the destination in your favorites.*

Selecting a Favorite

1. Press the **NAV** button.
2. Select the favorites option.
3. Scroll to the required destination using the arrow buttons.
4. Press the **OK** button to start navigation.

Navigation

Adjusting the Navigation Voice Level

You can adjust the voice prompt level during an active voice prompt by using the volume control.

Note: *During active route guidance pressing the information button will repeat the last navigation instruction.*

Nav Audio Mixing

This feature allows you to adjust the volume mix between the audio unit and navigation voice level.

Tolerant Destination Input

This function will search a number of destinations with a similar spelling to what you have entered. This is helpful if you are unsure on how to spell a destination.

Message	Action
Tolerant	Press the NAV button and scroll to this destination input option before entering your destination details.

Then begin to input your destination. Press the **OK** button. The system will search for destinations with similar spellings. Use the arrow buttons to select a destination from the list and press the **OK** button to confirm your destination.

Route Displays

Map Display

Press the **MAP** button to view map mode. This view will show your current location with your vehicle in the center shown as an arrow surrounded by a circle. The arrow will face in the direction of travel.

The information on the top line gives the name of the current road, or the next road to take if a turn is approaching.

You can change the way the map is displayed by altering the zoom and orientation settings. Press function button one. The current map scale is shown on the display.

Map scale settings may be set between 0.05 miles to 500 miles or 50 meters to 500 kilometers, with an auto setting on the top. The auto setting continuously changes the map scale according to vehicle speed and the road type being driven.

You can use the arrow buttons to change the view to 2D, turn-by-turn, 3D or a clean view.

Zoom

This feature will automatically increase the zoom on the map display at times when you are required to make a turn, or perform more complex maneuvers. Shortly after the zoom scale will return to the previous level when in auto mode.

Manual: Press function button one and adjust the setting using the left or right arrow buttons. Press **OK** to confirm your setting.

Auto: Press function button one and using the up or down arrow key select the auto option. Press **OK** to confirm your setting.

Navigation

Move

When you are in map mode, press function button two. You can now use the arrow buttons on the audio unit to move around the map.

Press function button two again to return to the original view.

Navigation Display

After commencing a navigation route, the default screen is the main navigation screen.

Once an active route is underway, guidance will be given by on-screen information and voice prompts. Whichever audio source you wish to leave the unit in, basic turn by turn and distance information will remain on the screen in the form of a graphic inset. You do not need to leave the unit on the main navigation screen when you are navigating a route. Press the **MAP** button at any time to return to the main navigation screen. Slightly more detailed information on your route may be available using the main navigation screen if required.

Hazard Spot Warning

The system supports a hazard spot warning feature which informs you with visible and audible feedback about hazardous traffic areas.

Message	Description
Assistance options	You can switch the system on and off using the information and entertainment display menu. Refer to this option in the navigation menu.

Note: *This feature is only available in certain countries.*

Navigation Map Updates

Annual navigation map updates are available for purchase. See an authorized dealer.

SD Logo is a trademark.

The navigation software is based in part on the work of the FreeType team © 2006

The navigation software is based in part on the work of the independent JPEG Group.


Type Approvals







Appendices


ELECTROMAGNETIC COMPATIBILITY

WARNINGS

 Your vehicle has been tested and certified to legislations relating to electromagnetic compatibility (72/245/EEC, UN ECE Regulation 10 or other applicable local requirements). It is your responsibility to make sure that any equipment you have fitted complies with applicable local legislations. Have any equipment fitted by an authorized dealer.

WARNINGS

-  The radio frequency transmitter equipment, for example cellular telephones and amateur radio transmitters, may only be fitted to your vehicle if they keep to the parameters shown in the table below. There are no special provisions or conditions for installations or use.
-  Do not mount any transceiver, microphones, speakers, or any other item in the deployment path of the airbag system.
-  Do not fasten antenna cables to original vehicle wiring, fuel pipes and brake pipes.
-  Keep antenna and power cables at least 3.9 in (10 cm) from any electronic modules and airbags.

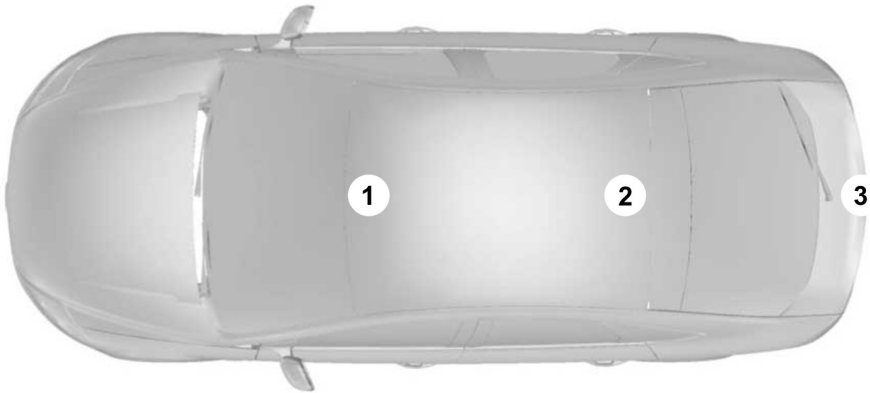

E170906

Appendices

Frequency Band MHz	Maximum output power Watt (Peak RMS)	Antenna Positions
1-30	50 W	3
30-54	50 W	1, 2
68-87.5	50 W	1, 2
142-176	50 W	1, 2
380-512	50 W	1, 2
806-940	10 W	1, 2
1200-1400	10 W	1, 2
1710-1885	10 W	1, 2
1885-2025	10 W	1, 2

Note: After the installation of radio frequency transmitters, check for disturbances from and to all electrical equipment in your vehicle, both in the standby and transmit modes.

Check all electrical equipment:

- With the ignition on.
- With the engine running.
- During a road test at various speeds.

Check that electromagnetic fields generated inside your vehicle cabin by the transmitter installed do not exceed applicable human exposure requirements.

END USER LICENSE AGREEMENT

SYNC® End User License Agreement (EULA)

- You have acquired a device ("DEVICE") that includes software licensed by Ford Motor Company and its affiliates ("FORD MOTOR COMPANY") from an affiliate of Microsoft Corporation ("MS"). Those installed software products of MS origin, as well as associated media, printed materials,

Appendices

and "online" or electronic documentation ("MS SOFTWARE") are protected by international intellectual property laws and treaties. The MS SOFTWARE is licensed, not sold. All rights reserved.

- The MS SOFTWARE may interface with and/or communicate with, or may be later upgraded to interface with and/or communicate with additional software and/or systems provided by FORD MOTOR COMPANY. The additional software and systems of FORD MOTOR COMPANY origin, as well as associated media, printed materials, and "online" or electronic documentation ("FORD SOFTWARE") are protected by international intellectual property laws and treaties. The FORD SOFTWARE is licensed, not sold. All rights reserved.
- The MS SOFTWARE and/or FORD SOFTWARE may interface with and/or communicate with, or may be later upgraded to interface with and/or communicate with additional software and/or systems provided by third party software and service suppliers. The additional software and services of third party origin, as well as associated media, printed materials, and "online" or electronic documentation ("THIRD PARTY SOFTWARE") are protected by international intellectual property laws and treaties. The THIRD PARTY SOFTWARE is licensed, not sold. All rights reserved.
- The MS SOFTWARE, FORD SOFTWARE and THIRD PARTY SOFTWARE hereinafter collectively and individually will be referred to as "SOFTWARE".

IF YOU DO NOT AGREE TO THIS END USER LICENSE AGREEMENT ("EULA") DO NOT USE THE DEVICE OR COPY THE SOFTWARE. ANY USE OF THE SOFTWARE, INCLUDING BUT NOT LIMITED TO USE ON THE DEVICE, WILL CONSTITUTE YOUR AGREEMENT TO THIS EULA (OR RATIFICATION OF ANY PREVIOUS CONSENT).

GRANT OF SOFTWARE LICENSE: This EULA grants you the following license:

- You may use the SOFTWARE as installed on the DEVICE and as otherwise interfacing with systems and/or services provide by or through FORD MOTOR COMPANY or its third party software and service providers.

Description of Other Rights and Limitations

- **Speech Recognition:** If the SOFTWARE includes speech recognition component(s), you should understand that speech recognition is an inherently statistical process and that recognition errors are inherent in the process. Neither FORD MOTOR COMPANY nor its suppliers shall be liable for any damages arising out of errors in the speech recognition process.
- **Limitations on Reverse Engineering, Decompile and Disassembly:** You may not reverse engineer, decompile, or disassemble nor permit others to reverse engineer, decompile or disassemble the SOFTWARE, except and only to the extent that such activity is expressly permitted by applicable law notwithstanding this limitation.

Appendices

- **Limitations on Distributing, Copying, Modifying and Creating Derivative Works:** You may not distribute, copy, make modifications to or create derivative works based on the SOFTWARE, except and only to the extent that such activity is expressly permitted by applicable law notwithstanding this limitation.
- **Single EULA:** The end user documentation for the DEVICE and related systems and services may contain multiple EULAs, such as multiple translations and/or multiple media versions (e.g., in the user documentation and in the software). Even if you receive multiple EULAs, you are licensed to use only one (1) copy of the SOFTWARE.
- **SOFTWARE Transfer:** You may permanently transfer your rights under this EULA only as part of a sale or transfer of the DEVICE, provided you retain no copies, you transfer all of the SOFTWARE (including all component parts, the media and printed materials, any upgrades, and, if applicable, the Certificate(s) of Authenticity), and the recipient agrees to the terms of this EULA. If the SOFTWARE is an upgrade, any transfer must include all prior versions of the SOFTWARE.
- **Termination:** Without prejudice to any other rights, FORD MOTOR COMPANY or MS may terminate this EULA if you fail to comply with the terms and conditions of this EULA.
- **Security Updates/Digital Rights Management:** Content owners use the WMDRM technology included in your DEVICE to protect their intellectual property, included copyrighted content. Portions of the SOFTWARE on your DEVICE use WMDRM software to access WMDRM-protected content. If the WMDRM software fails to protect the

content, content owners may ask Microsoft to revoke the SOFTWARE's ability to use WMDRM to play or copy protected content. This action does not affect unprotected content. When your DEVICE downloads licenses for protected content, you agree that Microsoft may include a revocation list with the licenses. Content owners may require you to upgrade the SOFTWARE on your DEVICE to access their content. If you decline an upgrade, you will not be able to access content that requires the upgrade.

- **Consent to Use of Data:** You agree that MS, Microsoft Corporation, FORD MOTOR COMPANY, third party software and systems suppliers, their affiliates and/or their designated agent may collect and use technical information gathered in any manner as part of product support services related to the SOFTWARE or related services. MS, Microsoft Corporation, FORD MOTOR COMPANY, third party software and services suppliers, their affiliates and/or their designated agent may use this information solely to improve their products or to provide customized services or technologies to you. MS, Microsoft Corporation, FORD MOTOR COMPANY, third party software and systems suppliers, their affiliates and/or their designated agent may disclose this information to others, but not in a form that personally identifies you.

Appendices

- **Internet-Based Services Components:** The SOFTWARE may contain components that enable and facilitate the use of certain Internet-based services. You acknowledge and agree that MS, Microsoft Corporation, FORD MOTOR COMPANY, third party software and service suppliers, their affiliates and/or their designated agent may automatically check the version of the SOFTWARE and/or its components that you are utilizing and may provide upgrades or supplements to the SOFTWARE that may be automatically downloaded to your DEVICE.
- **Additional Software/Services:** The SOFTWARE may permit FORD MOTOR COMPANY, third party software and service suppliers, MS, Microsoft Corporation, their affiliates and/or their designated agent to provide or make available to you SOFTWARE updates, supplements, add-on components, or Internet-based services components of the SOFTWARE after the date you obtain your initial copy of the SOFTWARE ("Supplemental Components").

If FORD MOTOR COMPANY or third party software and services suppliers provide or make available to you Supplemental Components and no other EULA terms are provided along with the Supplemental Components, then the terms of this EULA shall apply.

If MS, Microsoft Corporation, their affiliates and/or their designated agent make available Supplemental Components, and no other EULA terms are provided, then the terms of this EULA shall apply, except that the MS, Microsoft Corporation or affiliate entity providing the Supplemental Component(s) shall be the licensor of the Supplemental Component(s).

FORD MOTOR COMPANY, MS, Microsoft Corporation, their affiliates and/or their designated agent reserve the right to discontinue without liability any Internet-based services provided to you or made available to you through the use of the SOFTWARE.

- **Links to Third Party Sites:** The MS SOFTWARE may provide you with the ability to link to third party sites through the use of the SOFTWARE. The third party sites are not under the control of MS, Microsoft Corporation, their affiliates and/or their designated agent. Neither MS nor Microsoft Corporation nor their affiliates nor their designated agent are responsible for (i) the contents of any third party sites, any links contained in third party sites, or any changes or updates to third party sites, or (ii) webcasting or any other form of transmission received from any third party sites. If the SOFTWARE provides links to third party sites, those links are provided to you only as a convenience, and the inclusion of any link does not imply an endorsement of the third party site by MS, Microsoft Corporation, their affiliates and/or their designated agent.
- **Obligation to Drive Responsibly:** You recognize your obligation to drive responsibly and keep attention on the road. You will read and abide with the DEVICE operating instructions particularly as they pertain to safety and assumes any risk associated with the use of the DEVICE.

UPGRADES AND RECOVERY MEDIA: If the SOFTWARE is provided by FORD MOTOR COMPANY separate from the DEVICE on media such as a ROM chip, CD ROM disk(s) or via web download or other means, and is labeled "For Upgrade Purposes Only" or "For Recovery Purposes Only" you may install one (1) copy of such

Appendices

SOFTWARE onto the DEVICE as a replacement copy for the existing SOFTWARE, and use it in accordance with this EULA, including any additional EULA terms accompanying the upgrade SOFTWARE.

INTELLECTUAL PROPERTY RIGHTS:

All title and intellectual property rights in and to the SOFTWARE (including but not limited to any images, photographs, animations, video, audio, music, text and "applets" incorporated into the SOFTWARE), the accompanying printed materials, and any copies of the SOFTWARE, are owned by MS, Microsoft Corporation, FORD MOTOR COMPANY, or their affiliates or suppliers. The SOFTWARE is licensed, not sold. You may not copy the printed materials accompanying the SOFTWARE. All title and intellectual property rights in and to the content which may be accessed through use of the SOFTWARE is the property of the respective content owner and may be protected by applicable copyright or other intellectual property laws and treaties. This EULA grants you no rights to use such content. All rights not specifically granted under this EULA are reserved by MS, Microsoft Corporation, FORD MOTOR COMPANY, third party software and service providers, their affiliates and suppliers. Use of any on-line services which may be accessed through the SOFTWARE may be governed by the respective terms of use relating to such services. If this SOFTWARE contains documentation that is provided only in electronic form, you may print one copy of such electronic documentation.

EXPORT RESTRICTIONS: You acknowledge that the SOFTWARE is subject to U.S. and European Union export jurisdiction. You agree to comply with all applicable international and national laws that apply to the SOFTWARE, including

the U.S. Export Administration Regulations, as well as end-user, end-use and destination restrictions issued by U.S. and other governments. For additional information, see <http://www.microsoft.com/exporting/>.

TRADEMARKS: This EULA does not grant you any rights in connection with any trademarks or service marks of FORD MOTOR COMPANY, MS, Microsoft Corporation, third party software or service providers, their affiliates or suppliers.

PRODUCT SUPPORT: Product support for the SOFTWARE is not provided by MS, its parent corporation Microsoft Corporation, or their affiliates or subsidiaries. For product support, please refer to FORD MOTOR COMPANY instructions provided in the documentation for the DEVICE. Should you have any questions concerning this EULA, or if you desire to contact FORD MOTOR COMPANY for any other reason, please refer to the address provided in the documentation for the DEVICE.

No Liability for Certain Damages:

EXCEPT AS PROHIBITED BY LAW, FORD MOTOR COMPANY, ANY THIRD PARTY SOFTWARE OR SERVICES SUPPLIERS, MS, MICROSOFT CORPORATION AND THEIR AFFILIATES SHALL HAVE NO LIABILITY FOR ANY INDIRECT, SPECIAL, CONSEQUENTIAL OR INCIDENTAL DAMAGES ARISING FROM OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THE SOFTWARE. THIS LIMITATION SHALL APPLY EVEN IF ANY REMEDY FAILS OF ITS ESSENTIAL PURPOSE. IN NO EVENT SHALL MS, MICROSOFT CORPORATION AND/OR THEIR AFFILIATES BE LIABLE FOR ANY AMOUNT IN EXCESS OF U.S. TWO HUNDRED FIFTY DOLLARS (U.S. \$250.00).

Appendices

- THERE ARE NO WARRANTIES OTHER THAN THOSE THAT MAY EXPRESSLY BE PROVIDED FOR YOUR NEW VEHICLE.

Adobe

Contains Adobe® [Flash® Player] or [AIR®] technology by Adobe Systems Incorporated. This [Licensee Product] contains [Adobe® Flash® Player] [Adobe® AIR®] software under license from Adobe Systems Incorporated, Copyright ©1995-2009 Adobe Macromedia Software LLC. All rights reserved. Adobe, Flash and AIR are trademarks of Adobe Systems Incorporated.

End User Notice

Microsoft® Windows® Mobile for Automotive Important Safety Information

This system Ford SYNC™ contains software that is licensed to Manufacturer FORD MOTOR COMPANY by an affiliate of Microsoft Corporation pursuant to a license agreement. Any removal, reproduction, reverse engineering or other unauthorized use of the software from this system in violation of the license agreement is strictly prohibited and may subject you to legal action.

Read and follow instructions: Before using your Windows Automotive-based system, read and follow all instructions and safety information provided in this end user manual ("User's Guide"). Not following precautions found in this User's Guide can lead to an accident or other serious consequences.

Keep User's Guide in vehicle: When kept in the vehicle, the User's Guide will be a ready reference for you and other users unfamiliar with the Windows Automotive-based system. Please make certain that before using the system for the first time, all persons have access to the User's Guide and read its instructions and safety information carefully.

WARNING



Operating certain parts of this system while driving can distract your attention away from the road, and possibly cause an accident or other serious consequences. Do not change system settings or enter data non-verbally (using your hands) while driving. Stop the vehicle in a safe and legal manner before attempting these operations. This is important since while setting up or changing some functions you might be required to distract your attention away from the road and remove your hands from the wheel.

General Operation

Voice Command Control: Functions within the Windows Automotive-based system may be accomplished using only voice commands. Using voice commands while driving allows you to operate the system without removing your hands from the wheel.

Prolonged Views of Screen: Do not access any function requiring a prolonged view of the screen while you are driving. Pull over in a safe and legal manner before attempting to access a function of the system requiring prolonged attention. Even occasional short scans to the screen may be hazardous if your attention has been diverted away from your driving task at a critical time.

Appendices

Volume Setting: Do not raise the volume excessively. Keep the volume at a level where you can still hear outside traffic and emergency signals while driving. Driving while unable to hear these sounds could cause an accident.

Use of Speech Recognition Functions: Speech recognition software is inherently a statistical process which is subject to errors. It is your responsibility to monitor any speech recognition functions included in the system and address any errors.

Navigation Features: Any navigation features included in the system are intended to provide turn by turn instructions to get you to a desired destination. Please make certain all persons using this system carefully read and follow instructions and safety information fully.

Distraction Hazard: Any navigation features may require manual (non-verbal) setup. Attempting to perform such set-up or insert data while driving can seriously distract your attention and could cause an accident or other serious consequences. Stop the vehicle in a safe and legal manner before attempting these operations.

Let Your Judgment Prevail: Any navigation features are provided only as an aid. Make your driving decisions based on your observations of local conditions and existing traffic regulations. Any such feature is not a substitute for your personal judgment. Any route suggestions made by this system should never replace any local traffic regulations or your personal judgment or knowledge of safe driving practices.

Route Safety: Do not follow the route suggestions if doing so would result in an unsafe or illegal maneuver, if you would be placed in an unsafe situation, or if you would be directed into an area that you consider unsafe. The driver is ultimately responsible for the safe operation of the vehicle and therefore, must evaluate whether it is safe to follow the suggested directions.

Potential Map Inaccuracy: Maps used by this system may be inaccurate because of changes in roads, traffic controls or driving conditions. Always use good judgment and common sense when following the suggested routes.

Emergency Services: Do not rely on any navigation features included in the system to route you to emergency services. Ask local authorities or an emergency services operator for these locations. Not all emergency services such as police, fire stations, hospitals and clinics are likely to be contained in the map database for such navigation features.

TeleNav Software End User License Agreement

Please read these terms and conditions carefully before you use the TeleNav Software. Your use of the TeleNav Software indicates that you accept these terms and conditions. If you do not accept these terms and conditions, do not break the seal of the package, launch, or otherwise use the TeleNav Software.

TeleNav may revise this Agreement and the privacy policy at any time, with or without notice to you. You agree to visit <http://www.telenav.com> from time to time to review the then current version of this Agreement and of the privacy policy.

Appendices

1. Safe and Lawful Use

You acknowledge that devoting attention to the TeleNav Software may pose a risk of injury or death to you and others in situations that otherwise require your undivided attention, and you therefore agree to comply with the following when using the TeleNav Software: (a) observe all traffic laws and otherwise drive safely; (b) use your own personal judgment while driving. If you feel that a route suggested by the TeleNav Software instructs you to perform an unsafe or illegal maneuver, places you in an unsafe situation, or directs you into an area that you consider to be unsafe, do not follow such instructions; (c) do not input destinations, or otherwise manipulate the TeleNav Software, unless your vehicle is stationary and parked; (d) do not use the TeleNav Software for any illegal, unauthorized, unintended, unsafe, hazardous, or unlawful purposes, or in any manner inconsistent with this Agreement; (e) arrange all GPS and wireless devices and cables necessary for use of the TeleNav Software in a secure manner in your vehicle so that they will not interfere with your driving and will not prevent the operation of any safety device (such as an airbag).

You agree to indemnify and hold TeleNav harmless against all claims resulting from any dangerous or otherwise inappropriate use of the TeleNav Software in any moving vehicle, including as a result of your failure to comply with the directions above.

2. Account Information

You agree: (a) when registering the TeleNav Software, to provide TeleNav with true, accurate, current, and complete information about yourself, and (b) to inform TeleNav promptly of any changes to such information, and to keep it true, accurate, current and complete.

3. Software License

Subject to your compliance with the terms of this Agreement, TeleNav hereby grants to you a personal, non-exclusive, non-transferable license (except as expressly permitted below in connection with your permanent transfer of the TeleNav Software license), without the right to sublicense, to use the TeleNav Software (in object code form only) in order to access and use the TeleNav Software. This license shall terminate upon any termination or expiration of this Agreement. You agree that you will use the TeleNav Software only for your personal business or leisure purposes, and not to provide commercial navigation services to other parties.

3.1 License Limitations

You agree not to do any of the following: (a) reverse engineer, decompile, disassemble, translate, modify, alter or otherwise change the TeleNav Software or any part thereof; (b) attempt to derive the source code, audio library or structure of the TeleNav Software without the prior express written consent of TeleNav; (c) remove from the TeleNav Software, or alter, any of TeleNav's or its suppliers' trademarks, trade names, logos, patent or copyright notices, or other notices or markings; (d) distribute, sublicense or otherwise transfer the TeleNav Software to others, except as part of your permanent transfer of the TeleNav Software; or (e) use the TeleNav Software in any manner that (i) infringes the intellectual property or proprietary rights, rights of publicity or privacy or other rights of any party, (ii) violates any law, statute, ordinance or regulation, including but not limited to laws and regulations related to spamming, privacy, consumer and child protection, obscenity or defamation, or (iii) is harmful, threatening, abusive, harassing, tortuous,

Appendices

defamatory, vulgar, obscene, libelous, or otherwise objectionable; and (f) lease, rent out, or otherwise permit unauthorized access by third parties to the TeleNav Software without advanced written permission of TeleNav.

4. Disclaimers

To the fullest extent permissible pursuant to applicable law, in no event will TeleNav, its licensors and suppliers, or agents or employees of any of the foregoing, be liable for any decision made or action taken by you or anyone else in reliance on the information provided by the TeleNav Software. TeleNav also does not warrant the accuracy of the map or other data used for the TeleNav Software. Such data may not always reflect reality due to, among other things, road closures, construction, weather, new roads and other changing conditions. You are responsible for the entire risk arising out of your use of the TeleNav Software. For example but without limitation, you agree not to rely on the TeleNav Software for critical navigation in areas where the well-being or survival of you or others is dependent on the accuracy of navigation, as the maps or functionality of the TeleNav Software are not intended to support such high risk applications, especially in more remote geographical areas.

TELENAV EXPRESSLY DISCLAIMS AND EXCLUDES ALL WARRANTIES IN CONNECTION WITH THE TELENAV SOFTWARE, WHETHER STATUTORY, EXPRESS OR IMPLIED, INCLUDING ALL WARRANTIES WHICH MAY ARISE FROM COURSE OF DEALING, CUSTOM OR TRADE AND INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A

PARTICULAR PURPOSE AND NON-INFRINGEMENT OF THIRD PARTY RIGHTS WITH RESPECT TO THE TELENAV SOFTWARE. Certain jurisdictions do not permit the disclaimer of certain warranties, so this limitation may not apply to you.

5. Limitation of Liability

TO THE EXTENT PERMITTED UNDER APPLICABLE LAW, UNDER NO CIRCUMSTANCES SHALL TELENAV OR ITS LICENSORS AND SUPPLIERS BE LIABLE TO YOU OR TO ANY THIRD PARTY FOR ANY INDIRECT, INCIDENTAL, CONSEQUENTIAL, SPECIAL OR EXEMPLARY DAMAGES (INCLUDING IN EACH CASE, BUT NOT LIMITED TO, DAMAGES FOR THE INABILITY TO USE THE EQUIPMENT OR ACCESS DATA, LOSS OF DATA, LOSS OF BUSINESS, LOSS OF PROFITS, BUSINESS INTERRUPTION OR THE LIKE) ARISING OUT OF THE USE OF OR INABILITY TO USE THE TELENAV SOFTWARE, EVEN IF TELENAV HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

NOTWITHSTANDING ANY DAMAGES THAT YOU MIGHT INCUR FOR ANY REASON WHATSOEVER (INCLUDING, WITHOUT LIMITATION, ALL DAMAGES REFERENCED HEREIN AND ALL DIRECT OR GENERAL DAMAGES IN CONTRACT, TORT (INCLUDING NEGLIGENCE) OR OTHERWISE), THE ENTIRE LIABILITY OF TELENAV AND OF ALL OF TELENAV'S SUPPLIERS SHALL BE LIMITED TO THE AMOUNT ACTUALLY PAID BY YOU FOR THE TELENAV SOFTWARE. SOME STATES AND/OR JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU.

Appendices

6. Arbitration and Governing Law

You agree that any dispute, claim or controversy arising out of or relating to this Agreement or the TeleNav Software shall be settled by independent arbitration involving a neutral arbitrator and administered by the American Arbitration Association in the County of Santa Clara, California. The arbitrator shall apply the Commercial Arbitration Rules of the American Arbitration Association, and the judgment upon the award rendered by the arbitrator may be entered by any court having jurisdiction. Note that there is no judge or jury in an arbitration proceeding and the decision of the arbitrator shall be binding upon both parties. You expressly agree to waive your right to a jury trial.

This Agreement and performance hereunder will be governed by and construed in accordance with the laws of the State of California, without giving effect to its conflict of laws provisions. To the extent judicial action is necessary in connection with the binding arbitration, both TeleNav and you agree to submit to the exclusive jurisdiction of the courts of the County of Santa Clara, California. The United Nations Convention on Contracts for the International Sale of Goods shall not apply.

7. Assignment

You may not resell, assign, or transfer this Agreement or any of your rights or obligations, except in totality, in connection with your permanent transfer of the TeleNav Software, and expressly conditioned upon the new user of the TeleNav Software agreeing to be bound by the terms and conditions of this Agreement. Any such sale, assignment or transfer that is not expressly permitted under this paragraph will result in immediate termination of this Agreement, without liability to TeleNav, in which case you and all other parties shall immediately

cease all use of the TeleNav Software. Notwithstanding the foregoing, TeleNav may assign this Agreement to any other party at any time without notice, provided the assignee remains bound by this Agreement.

8. Miscellaneous

8.1

This Agreement constitutes the entire agreement between TeleNav and you with respect to the subject matter hereof.

8.2

Except for the limited licenses expressly granted in this Agreement, TeleNav retains all right, title and interest in and to the TeleNav Software, including without limitation all related intellectual property rights. No licenses or other rights which are not expressly granted in this Agreement are intended to, or shall be, granted or conferred by implication, statute, inducement, estoppel or otherwise, and TeleNav and its suppliers and licensors hereby reserve all of their respective rights other than the licenses explicitly granted in this Agreement

8.3

By using the TeleNav Software, you consent to receive from TeleNav all communications, including notices, agreements, legally required disclosures or other information in connection with the TeleNav Software (collectively, "Notices") electronically. TeleNav may provide such Notices by posting them on TeleNav's Website or by downloading such Notices to your wireless device. If you desire to withdraw your consent to receive Notices electronically, you must discontinue your use of the TeleNav Software.

Appendices

8.4

TeleNav's or your failure to require performance of any provision shall not affect that party's right to require performance at any time thereafter, nor shall a waiver of any breach or default of this Agreement constitute a waiver of any subsequent breach or default or a waiver of the provision itself.

8.5

If any provision herein is held unenforceable, then such provision will be modified to reflect the intention of the parties, and the remaining provisions of this Agreement will remain in full force and effect

8.6

The headings in this Agreement are for convenience of reference only, will not be deemed to be a part of this Agreement, and will not be referred to in connection with the construction or interpretation of this Agreement. As used in this Agreement, the words "include" and "including" and variations thereof, will not be deemed to be terms of limitation, but rather will be deemed to be followed by the words "without limitation".

9. Other Vendors Terms and Conditions

The TeleNav Software utilizes map and other data licensed to TeleNav by third party vendors for the benefit of you and other end users. This Agreement includes end-user terms applicable to these companies (included at the end of this Agreement), and thus your use of the TeleNav Software is also subject to such terms. You agree to comply with the following additional terms and conditions, which are applicable to TeleNav's third party vendor licensors:

NavTeq End User License Agreement

END USER TERMS

The content provided ("Data") is licensed, not sold. By opening this package, or installing, copying, or otherwise using the Data, you agree to be bound by the terms of this agreement. If you do not agree to the terms of this agreement, you are not permitted to install, copy, use, resell or transfer the Data. If you wish to reject the terms of this agreement, and have not installed, copied, or used the Data, you must contact your retailer or NAVTEQ North America, LLC ("NT") within thirty (30) days of purchase for a refund of your purchase price. To contact NT, please visit www.navteq.com.

The Data is provided for your personal, internal use only and may not be resold. It is protected by copyright, and is subject to the following terms (this "End User License Agreement") and conditions which are agreed to by you, on the one hand, and NAVTEQ North America, LLC ("NT") and its licensors (including their licensors and suppliers) on the other hand.

The Data for areas of Canada includes information taken with permission from Canadian authorities, including: © Her Majesty the Queen in Right of Canada, © Queen's Printer for Ontario, © Canada Post Corporation, GeoBase®.

NT holds a nonexclusive license from the United States Postal Service® to publish and sell ZIP+4® information.

© United States Postal Service® 2009. Prices are not established, controlled or approved by the United States Postal Service® The following trademarks and registrations are owned by the USPS: United States Postal Service, USPS, and ZIP+4.

The Data for Mexico includes certain Data from Instituto Nacional de Estadística y Geografía.

Appendices

TERMS AND CONDITIONS

License Limitations on Use: You agree that your license to use this Data is limited to and conditioned on use for solely personal, noncommercial purposes, and not for service bureau, timesharing or other similar purposes. Except as otherwise set forth herein, you agree not to otherwise reproduce, copy, modify, decompile, disassemble or reverse engineer any portion of this Data, and may not transfer or distribute it in any form, for any purpose, except to the extent permitted by mandatory laws.

License Limitations on Transfer: Your limited license does not allow transfer or resale of the Data, except on the condition that you may transfer the Data and all accompanying materials on a permanent basis if: (a) you retain no copies of the Data; (b) the recipient agrees to the terms of this End User License Agreement; and (c) you transfer the Data in the exact same form as you purchased it by physically transferring the original media (e.g., the CD-ROM or DVD you purchased), all original packaging, all Manuals and other documentation. Specifically, Multi-disc sets may only be transferred or sold as a complete set as provided to you and not as a subset thereof.

Additional License Limitations: Except where you have been specifically licensed to do so by NT in a separate written agreement, and without limiting the preceding paragraph, your license is conditioned on use of the Data as prescribed in this agreement, and you may not (a) use this Data with any products, systems, or applications installed or otherwise connected to or in communication with vehicles capable of vehicle navigation, positioning, dispatch,

real time route guidance, fleet management or similar applications; or (b) with, or in communication with, including without limitation, cellular phones, palmtop and handheld computers, pagers, and personal digital assistants or PDAs.

WARNING



This Data may contain inaccurate or incomplete information due to the passage of time, changing circumstances, sources used and the nature of collecting comprehensive geographic Data, any of which may lead to incorrect results.

No Warranty: This Data is provided to you "as is", and you agree to use it at your own risk. NT and its licensors (and their licensors and suppliers) make no guarantees, representations or warranties of any kind, express or implied, arising by law or otherwise, including but not limited to, content, quality, accuracy, completeness, effectiveness, reliability, fitness for a particular purpose, usefulness, use or results to be obtained from this Data, or that the Data or server will be uninterrupted or error free.

Disclaimer of Warranty: NT AND ITS LICENSORS (INCLUDING THEIR LICENSORS AND SUPPLIERS) DISCLAIM ANY WARRANTIES, EXPRESS OR IMPLIED, OF QUALITY, PERFORMANCE, MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT. Some States, Territories and Countries do not allow certain warranty exclusions, so to that extent the above exclusion may not apply to you.

Disclaimer of Liability: NT AND ITS LICENSORS (INCLUDING THEIR LICENSORS AND SUPPLIERS) SHALL NOT BE LIABLE TO YOU IN RESPECT OF ANY CLAIM, DEMAND OR ACTION, IRRESPECTIVE OF THE NATURE OF THE

Appendices

CAUSE OF THE CLAIM, DEMAND OR ACTION ALLEGING ANY LOSS, INJURY OR DAMAGES, DIRECT OR INDIRECT, WHICH MAY RESULT FROM THE USE OR POSSESSION OF THIS DATA; OR FOR ANY LOSS OF PROFIT, REVENUE, CONTRACTS OR SAVINGS, OR ANY OTHER DIRECT, INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF YOUR USE OF OR INABILITY TO USE THIS DATA, ANY DEFECT IN THIS DATA, OR THE BREACH OF THESE TERMS OR CONDITIONS, WHETHER IN AN ACTION IN CONTRACT OR TORT OR BASED ON A WARRANTY, EVEN IF NT OR ITS LICENSORS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. Some States, Territories and Countries do not allow certain liability exclusions or damages limitations, so to that extent the above may not apply to you.

Export Control: You agree not to export from anywhere any part of the Data or any direct product thereof except in compliance with, and with all licenses and approvals required under, applicable export laws, rules and regulations, including but not limited to the laws, rules and regulations administered by the Office of Foreign Assets Control of the U.S. Department of Commerce and the Bureau of Industry and Security of the U.S. Department of Commerce. To the extent that any such export laws, rules or regulations prohibit NT from complying with any of its obligations hereunder to deliver or distribute Data, such failure shall be excused and shall not constitute a breach of this Agreement.

Entire Agreement: These terms and conditions constitute the entire agreement between NT (and its licensors, including their licensors and suppliers) and you pertaining to the subject matter hereof, and supersedes in their entirety any and all written or oral agreements previously existing between us with respect to such subject matter.

Severability: You and NT agree that if any portion of this agreement is found illegal or unenforceable, that portion shall be severed and the remainder of the Agreement shall be given full force and effect.

Governing Law: The above terms and conditions shall be governed by the laws of the State of Illinois, without giving effect to (i) its conflict of laws provisions, or (ii) the United Nations Convention for Contracts for the International Sale of Goods, which is explicitly excluded. You agree to submit to the personal jurisdiction of the State of Illinois for any and all disputes, claims and actions arising from or in connection with the Data provided to you hereunder.

Government End Users: If the Data is being acquired by or on behalf of the United States government or any other entity seeking or applying rights similar to those customarily claimed by the United States government, this Data is a "commercial term" as that term is defined at 48 C.F.R. ("FAR") 2.101, is licensed in accordance with this End User License Agreement, and each copy of Data delivered or otherwise furnished shall be marked and embedded as appropriate with the following "Notice of Use", and be treated in accordance with such Notice:

NOTICE OF USE

CONTRACTOR
(MANUFACTURER/SUPPLIER)

NAME:

Appendices

NAVTEQ

CONTRACTOR
(MANUFACTURER/SUPPLIER)

ADDRESS:

425 West Randolph Street, Chicago, IL 60606.

This Data is a commercial item as defined in FAR 2.101

and is subject to the End User License Agreement under

which this Data was provided.

© 2011 NAVTEQ. All rights reserved.

If the Contracting Officer, federal government agency, or any federal official refuses to use the legend provided herein, the Contracting Officer, federal government agency, or any federal official must notify NAVTEQ prior to seeking additional or alternative rights in the Data.

Wi-Fi hotspot data provided by JiWire, © 2013 JiWire.

Gracenote® Copyright

CD and music-related data from Gracenote, Inc., copyright© 2000-2007 Gracenote. Gracenote Software, copyright © 2000-2007 Gracenote. This product and service may practice one or more of the following U.S. Patents #5,987,525, #6,061,680, #6,154,773, #6,161,132, #6,230,192, #6,230,207, #6,240,459, #6,330,593 and other patents issued or pending. Some services supplied under license from Open Globe, Inc. for U.S. Patent: #6,304,523.

Gracenote and CDDB are registered trademarks of Gracenote. The Gracenote logo and logotype, and the "Powered by Gracenote™" logo are trademarks of Gracenote.

Gracenote® End User License Agreement (EULA)

This device contains software from Gracenote, Inc. of 2000 Powell Street Emeryville, California 94608 ("Gracenote").

The software from Gracenote (the "Gracenote Software") enables this device to do disc and music file identification and obtain music-related information, including name, artist, track, and title information ("Gracenote Data") from online servers ("Gracenote Servers"), and to perform other functions. You may use Gracenote Data only by means of the intended End User functions of this device.

This device may contain content belonging to Gracenote's providers. If so, all of the restrictions set forth herein with respect to Gracenote Data shall also apply to such content and such content providers shall be entitled to all of the benefits and protections set forth herein that are available to Gracenote.

You agree that you will use the content from Gracenote ("Gracenote Content"), Gracenote Data, the Gracenote Software, and Gracenote Servers for your own personal, non-commercial use only. You agree not to assign, copy, transfer or transmit the Gracenote Content, Gracenote Software or any Gracenote Data (except in a Tag associated with a music file) to any third party. YOU AGREE NOT TO USE OR EXPLOIT GRACENOTE CONTENT, GRACENOTE DATA, THE GRACENOTE SOFTWARE, OR GRACENOTE SERVERS, EXCEPT AS EXPRESSLY PERMITTED HEREIN.

You agree that your non-exclusive licenses to use the Gracenote Content, Gracenote Data, the Gracenote Software, and Gracenote Servers will terminate if you violate these restrictions. If your licenses terminate, you agree to cease any and all use of the Gracenote Content, Gracenote

Appendices

Data, the Gracenote Software, and Gracenote Servers. Gracenote, respectively, reserve all rights in Gracenote Data, the Gracenote Software, and the Gracenote Servers and Gracenote Content, including all ownership rights. Under no circumstances will either Gracenote become liable for any payment to you for any information that you provide, including any copyrighted material or music file information. You agree that Gracenote may enforce its respective rights, collectively or separately, under this agreement against you, directly in each company's own name.

Gracenote uses a unique identifier to track queries for statistical purposes. The purpose of a randomly assigned numeric identifier is to allow Gracenote to count queries without knowing anything about who you are. For more information, see the web page at www.gracenote.com for the Gracenote Privacy Policy.

THE GRACENOTE SOFTWARE, EACH ITEM OF GRACENOTE DATA AND THE GRACENOTE CONTENT ARE LICENSED TO YOU "AS IS". NEITHER GRACENOTE MAKES ANY REPRESENTATIONS OR WARRANTIES, EXPRESS OR IMPLIED, REGARDING THE ACCURACY OF ANY GRACENOTE DATA FROM THE GRACENOTE SERVERS OR GRACENOTE CONTENT. GRACENOTE COLLECTIVELY AND SEPARATELY RESERVE THE RIGHT TO DELETE DATA AND/OR CONTENT FROM THE COMPANIES' RESPECTIVE SERVERS OR, IN THE CASE OF GRACENOTE, CHANGE DATA CATEGORIES FOR ANY CAUSE THAT GRACENOTE DEEMS SUFFICIENT. NO WARRANTY IS MADE THAT EITHER GRACENOTE CONTENT OR THE GRACENOTE SOFTWARE OR GRACENOTE SERVERS ARE ERROR-FREE OR THAT THE FUNCTIONING OF THE GRACENOTE SOFTWARE OR GRACENOTE SERVERS WILL BE

UNINTERRUPTED. GRACENOTE IS NOT OBLIGATED TO PROVIDE YOU WITH ANY ENHANCED OR ADDITIONAL DATA TYPES THAT GRACENOTE MAY CHOOSE TO PROVIDE IN THE FUTURE AND IS FREE TO DISCONTINUE ITS ONLINE SERVICES AT ANY TIME. GRACENOTE DISCLAIMS ALL WARRANTIES EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, TITLE, AND NON-INFRINGEMENT. NEITHER GRACENOTE WARRANTS THE RESULTS THAT WILL BE OBTAINED BY YOUR USE OF THE GRACENOTE SOFTWARE OR ANY GRACENOTE SERVER. IN NO CASE WILL GRACENOTE BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES OR FOR ANY LOST PROFITS OR LOST REVENUES FOR ANY REASON WHATSOEVER.

© Gracenote 2007.

FCC ID: KMHSYNGG2

IC: 1422A-SYNGG2

This device complies with Part 15 of the FCC Rules and with RSS-210 of Industry Canada. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

WARNING



Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. The term "IC" before the radio certification number only signifies that Industry Canada technical specifications were met.

Appendices

The antenna used for this transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Index

4

4WD

See: Four-Wheel Drive.....129

A

A/C

See: Climate Control.....88

About This Manual.....7

ABS

See: Brakes.....134

ABS driving hints

See: Hints on Driving With Anti-Lock Brakes.....134

Accessories

See: Replacement Parts Recommendation.....10

ACC

See: Using Adaptive Cruise Control.....146

Active City Stop.....160

Principle of Operation.....160

Switching the System Off and On.....161

Active Park Assist.....140

Using the System.....140

Adjusting the Steering Wheel.....44

Air Conditioning

See: Climate Control.....88

Air Vents.....88

Center.....88

Center Console.....89

Side.....89

Alarm

See: Anti-Theft Alarm.....41

Ambient Lighting.....56

Anti-Theft Alarm.....41

Alarm System.....41

Arming the Alarm.....42

Disarming the Alarm.....43

Full and Reduced Guard.....42

Triggering the Alarm.....42

Appendices.....316

At a Glance.....11

Front Exterior Overview.....11

Instrument Panel Overview.....13

Rear Exterior Overview.....16

Vehicle Interior Overview.....12

Audible Warnings and Indicators.....68

Automatic Transmission Warning

Chime.....68

Headlamps On Warning Chime.....68

Key in Ignition Warning Chime.....68

Parking Brake On Warning Chime.....68

Audio Control.....44

Type 1.....45

Type 2.....45

Audio Input Jack.....267

Audio System.....236

General Information.....236

Audio Troubleshooting.....268

Audio Unit - Vehicles With: AM/FM/

CD.....237

Alternative Frequencies.....241

Automatic Volume Control.....240

Autostore Control.....240

News Broadcasts.....241

Regional Mode.....241

Sound Button.....239

Station Preset Buttons.....239

Station Tuning Control.....239

Traffic Information Control.....240

Waveband Button.....239

Audio Unit - Vehicles With: Digital Audio

Broadcast (DAB) Radio/Navigation

System/SYNC/Sony AM/FM/CD.....259

Alternative Frequencies.....264

Automatic Volume Control.....264

Autostore Control.....263

Digital Signal Processing.....264

News Broadcasts.....264

Regional Mode.....265

Sound Button.....262

Station Preset Buttons.....263

Station Tuning Control.....262

Traffic Information Control.....263

Waveband Button.....262

Index

Audio Unit - Vehicles With: Digital Audio Broadcast (DAB) Radio/Navigation System/SYNC.....	247
Alternative Frequencies.....	252
Automatic Volume Control.....	251
Autostore Control.....	250
Digital Signal Processing.....	251
News Broadcasts.....	252
Regional Mode.....	252
Sound Button.....	249
Station Preset Buttons.....	250
Station Tuning Control.....	250
Traffic Information Control.....	250
Waveband Button.....	249
Audio Unit - Vehicles With: Digital Audio Broadcast (DAB) Radio/SYNC/Sony AM/FM/CD.....	253
Alternative Frequencies.....	258
Automatic Volume Control.....	258
Autostore Control.....	257
Digital Signal Processing.....	258
News Broadcasts.....	258
Regional Mode.....	259
Sound Button.....	256
Station Preset Buttons.....	257
Station Tuning Control.....	256
Traffic Information Control.....	257
Waveband Button.....	256
Audio Unit - Vehicles With: Digital Audio Broadcast (DAB) Radio/SYNC.....	242
Alternative Frequencies.....	246
Automatic Volume Control.....	246
Autostore Control.....	245
News Broadcasts.....	246
Regional Mode.....	247
Sound Button.....	244
Station Preset Buttons.....	245
Station Tuning Control.....	245
Traffic Information Control.....	245
Waveband Button.....	244
Autolamps.....	51
Automatic Climate Control.....	90
Mono Mode.....	91
Switching Mono Mode Back On.....	91
Switching Mono Mode Off.....	91
Temperature Control.....	91
Automatic High Beam Control.....	52
Manually Overriding the System.....	53
Setting the System Sensitivity.....	53
Switching the System On.....	53
Automatic Transmission.....	124
Emergency Park Position Release Lever.....	126
Hints on Driving with an Automatic Transmission.....	125
Selector Lever Positions.....	124
Sport Mode and Manual Shifting.....	125
Auto-Start-Stop.....	115
To Re-Start the Engine.....	115
To Stop the Engine.....	115
Using Auto-Start-Stop.....	115
Autowipers.....	47
Auxiliary Heater.....	95
Fuel Operated Heater.....	98
Fuel Operated Parking Heater.....	95
Auxiliary Power Points.....	106
12 Volt DC Power Point.....	106
AC Power Point.....	106
Location.....	106
B	
Blind Spot Information System.....	156
Blind Spot Information System.....	156
Bonnet Lock	
See: Opening and Closing the Hood.....	187
Brake Fluid Check.....	194
Brakes.....	134
General Information.....	134
Breaking-In.....	171
Brakes and Clutch.....	171
Engine.....	171
Tires.....	171
Bulb Specification Chart.....	202
C	
Capacities and Specifications - 1.5L	
EcoBoost™.....	227
Capacities.....	227
Specifications.....	228

Index

Capacities and Specifications - 1.6L	
EcoBoost™.....	228
Capacities.....	229
Specifications.....	229
Capacities and Specifications - 2.0L	
Duratorq-TDCI (DW) Diesel.....	232
Capacities.....	232
Specifications.....	232
Capacities and Specifications -	
2.5L.....	230
Capacities.....	230
Specifications.....	231
Capacities and Specifications.....	226
Technical Specifications.....	233
Car Wash	
See: Cleaning the Exterior.....	207
Catalytic Converter.....	120
Driving with a Catalytic Converter.....	120
Changing a Bulb.....	196
Approach Lamp.....	199
Central High Mounted Brake Lamp.....	201
Headlamp.....	196
Interior lamp.....	201
License Plate Lamp.....	201
Luggage Compartment Lamp, Footwell Lamp and Liftgate Lamp.....	202
Reading lamps.....	202
Rear Lamps.....	200
Side Repeater.....	199
Changing a Fuse.....	186
Changing a Road Wheel.....	217
Assembling the Wheel Brace.....	220
Installing a Road Wheel.....	221
Jacking and Lifting Points.....	218
Lug Nuts.....	217
Removing a Road Wheel.....	221
Removing the Wheel Trim.....	220
Stowing the Flat Tire.....	222
Vehicle Jack.....	218
Vehicles with a Spare Wheel.....	217
Changing the 12V Battery.....	195
Changing the Wiper Blades.....	195
Checking the Wiper Blades.....	195
Child Safety.....	18
Child Safety Locks.....	23
Electric Child Safety Locks.....	23
Manual Child Safety Locks.....	23
Child Seat Positioning.....	21
Cleaning the Alloy Wheels.....	208
Cleaning the Exterior.....	207
Cleaning Plastic Exterior Parts.....	207
Cleaning the Chrome Trim.....	207
Cleaning the Headlamps.....	207
Underbody.....	207
Using a Car Wash.....	207
Cleaning the Interior.....	207
Instrument Cluster Screens, LCD Screens and Radio Screens.....	208
Rear Windows.....	208
Safety Belts.....	207
Climate Control.....	88
Principle of Operation.....	88
Clock.....	75
Type 1.....	75
Type 2.....	75
Cold Weather Precautions.....	171
Coolant Check	
See: Engine Coolant Check.....	194
Cornering Lamps.....	55
Cruise Control.....	46
Principle of Operation.....	145
Cruise control	
See: Using Cruise Control.....	145
Cup Holders.....	108
D	
Data Recording.....	9
Daytime Running Lamps.....	52
Diesel Particulate Filter.....	113
Regeneration.....	114
Digital Radio.....	265
Direction Indicators.....	55
DPF	
See: Diesel Particulate Filter.....	113
Driver Airbag.....	27
Driver Alert.....	152
Principle of Operation.....	152
Using Driver Alert.....	152
Driver Knee Airbag.....	29
Driving Aids.....	151
Driving Hints.....	171
Driving Through Water.....	171
DRL	
See: Daytime Running Lamps.....	52

Index

E

Eco Mode.....	161
Resetting Eco Mode.....	161
Type 1.....	161
Type 2 and 3.....	161
Electromagnetic Compatibility.....	316
End User License Agreement.....	317
SYNC® End User License Agreement (EULA).....	317
Engine Coolant Check.....	194
Adding Engine Coolant.....	194
Engine Immobilizer	
See: Passive Anti-Theft System.....	41
Engine Oil Check.....	193
Adding Oil.....	194
Engine Oil Dipstick - 1.5L EcoBoost™.....	193
Engine Oil Dipstick - 2.0L Duratorq-TDCi (DW) Diesel.....	193
Engine Oil Dipstick - 2.0L EcoBoost™.....	193
Event Data Recording	
See: Data Recording.....	9
Exterior Mirrors.....	60
Fold-Away Exterior Mirrors.....	61
Power Exterior Mirrors.....	60

F

Fastening the Safety Belts.....	24
Using Safety Belts During Pregnancy.....	24
First Aid Kit.....	173
Flat Tire Inflation	
See: Temporary Mobility Kit.....	209
Floor Mats.....	171
Fog Lamps - Front	
See: Front Fog Lamps.....	53
Fog Lamps - Rear	
See: Rear Fog Lamps.....	54
Folding Tray.....	108
Four-Wheel Drive.....	129
Principle of Operation.....	129
Front Fog Lamps.....	53
Fuel and Refueling.....	117
Technical Specifications.....	123
Fuel Burning Heater	
See: Auxiliary Heater.....	95

Fuel Consumption.....	121
Calculating Fuel Economy.....	122
Filling the Fuel Tank.....	122
Fuel Consumption	
See: Technical Specifications.....	123
Fuel Quality - 2.0L Duratorq-TDCi (DW) Diesel.....	118
Choosing the Right Fuel.....	118
Fuel Quality - Gasoline.....	118
Long-Term Storage.....	118
Fuel Shutoff.....	173
Fuse Box Locations.....	176
Engine Compartment Fuse Box.....	176
Luggage Compartment Fuse Box.....	177
Passenger Compartment Fuse Box.....	176
Pre-Fuse Box.....	176
Fuses.....	176
Fuse Specification Chart.....	177
Engine Compartment Fuse Box.....	177
Luggage Compartment Fuse Box.....	183
Passenger Compartment Fuse Box.....	181

G

Gauges.....	64
Engine Coolant Temperature Gauge.....	65
Fuel Gauge.....	65
Information Display.....	64
General Information on Radio Frequencies.....	30
Global Opening and Closing.....	59
Global Closing.....	60
Global Opening.....	59

H

Handbrake	
See: Parking Brake.....	135
Hazard Warning Flashers.....	173
Headlamp Exit Delay.....	51
Headlamp Leveling.....	54
Recommended Headlamp Leveling Switch Positions.....	54
Headlamp Washers.....	49
Head Restraints.....	100
Adjusting the Head Restraint.....	101
Heated Seats.....	104

Index

Heated Windows and Mirrors.....	95	Information Messages.....	75
Heated Exterior Mirror.....	95	Active City Stop.....	76
Heated Rear Window.....	95	Airbag.....	76
Heated Windshield.....	95	Alarm.....	76
Heating		Automatic High Beam Control.....	77
See: Climate Control.....	88	Battery and Charging System.....	77
Hill Start Assist.....	127	Blind Spot Monitor and Cross Traffic Alert System.....	77
Switching the System On and Off.....	128	Child Power Lock.....	78
Using Hill Start Assist.....	127	Climate Control.....	78
Hints on Controlling the Interior		Cruise Control and Adaptive Cruise Control (ACC).....	79
Climate.....	91	Doors.....	79
Cooling the Interior Quickly.....	93	Driver Alert.....	79
General Hints.....	91	Engine.....	80
Heating the Interior Quickly.....	92	Hill Start Assist.....	81
Maximum Cooling Performance in Instrument Panel or Instrument Panel and Footwell Positions.....	95	Keyless Vehicle.....	81
Recommended Settings for Cooling	93	Lane Keeping Aid.....	82
Recommended Settings for Heating.....	93	Lighting.....	82
Side Window Defogging in Cold Weather.....	94	Maintenance.....	83
Vehicle Stationary for Extended Periods During Extreme High Ambient Temperatures.....	94	Message Indicator.....	76
Hints on Driving With Anti-Lock Brakes.....	134	Occupant Protection.....	83
Hood Lock		Parking Aid.....	83
See: Opening and Closing the Hood.....	187	Parking Brake.....	84
		Power Steering.....	84
Ignition Switch.....	109	Starting System	85
Information Display Control.....	46	Start-Stop.....	85
Multimedia Controls.....	46	Towing.....	86
Information Displays.....	69	Traction Control.....	87
General Information.....	69	Transmission and Four-Wheel Drive.....	86
		Installing Child Seats.....	18
		Attaching a Child Seat with Top Tethers.....	20
		Booster Seats.....	19
		Child Seats for Different Mass Groups.....	18
		ISOFIX Anchor Points.....	20
		Top Tether Anchor Points.....	20
		Instrument Cluster.....	64
		Instrument Lighting Dimmer.....	51
		Interior Lamps.....	55
		Front Interior Lamp	56
		Rear Interior Lamp.....	56
		Interior Mirror.....	61
		Auto-Dimming Mirror.....	62
		Introduction.....	7

Index

J

Jump Starting the Vehicle.....	174
To Connect the Booster Cables.....	174
To Start the Engine.....	174

K

Keyless Entry.....	38
Disabled Keys.....	39
General Information.....	38
Locking and Unlocking the Doors with the Key Blade.....	40
Locking Your Vehicle.....	38
Passive Key.....	38
Unlocking Your Vehicle.....	39
Keyless Starting.....	109
Failure to Start.....	110
Fast Restart.....	111
Starting Your Vehicle.....	110
Stopping the Engine When Your Vehicle is Moving.....	111
Stopping the Engine When Your Vehicle is Stationary.....	111
Switching the Ignition On (Accessory Mode).....	110
Keys and Remote Controls.....	30

L

Lane Keeping System.....	153
Lane Keeping Aid.....	155
Lane Keeping Alert.....	153
Lighting Control.....	50
Headlamp Flasher.....	51
High Beam.....	50
Lighting.....	50
General Information.....	50
Load Carriers	
See: Roof Racks and Load Carriers.....	164
Load Carrying.....	162
General Information.....	162

Locking and Unlocking.....	33
Locking and Unlocking the Doors from Inside.....	34
Locking and Unlocking the Doors with the Key.....	34
Locking the Doors Individually with the Key.....	34
Power Door Locks.....	33
Power Liftgate.....	34
Remote Control.....	33
Locks.....	33
Luggage Anchor Points.....	162
Luggage Retention Nets.....	162
Luggage Covers.....	163
Lug Nuts	
See: Changing a Road Wheel.....	217

M

Maintenance.....	187
General Information.....	187
Technical Specifications.....	204
Manual Climate Control.....	89
Manual Liftgate.....	35
Closing the Liftgate.....	35
Opening the Liftgate.....	35
Manual Seats.....	102
Adjusting the Height of the Driver's Seat.....	102
Adjusting the Lumbar Support.....	102
Moving the Seat Backward and Forward.....	102
Recline Adjustment.....	102
Manual Transmission.....	124
Selecting Reverse Gear.....	124
Message Center	
See: Information Displays.....	69
Mirrors	
See: Heated Windows and Mirrors.....	95
See: Windows and Mirrors.....	58
Mobile Communications	
Equipment.....	10
Moonroof.....	62
Bounce-Back.....	63
Opening and Closing the Moonroof.....	63
Opening and Closing the Sunscreen.....	63
Venting the Moonroof.....	63

Index

N

Navigation.....	307
Hazard Spot Warning.....	315
Information.....	312
Loading Map Data.....	307
Menu Structure.....	308
Navigation Map Updates.....	315
Road Safety.....	307
Route Options.....	310
Setting a Route.....	308
Setting Your Navigation Preferences.....	312
Type Approvals.....	315

O

Oil Check	
See: Engine Oil Check.....	193
Opening and Closing the Hood.....	187
Closing the Hood.....	188
Opening the Hood.....	187
Overhead Console.....	108

P

Parking Aid.....	138
Parking Aids.....	138
Principle of Operation.....	138
Parking Brake.....	135
Passenger Airbag.....	28
.....	28
Switching the Passenger Airbag Off.....	28
Switching the Passenger Airbag On.....	28
Passive Anti-Theft System.....	41
Arming the Engine Immobilizer.....	41
Coded Keys.....	41
Disarming the Engine Immobilizer.....	41
Principle of Operation.....	41
PATS	
See: Passive Anti-Theft System.....	41
Personalized Settings.....	75
Measure Units.....	75
Switching Chimes Off.....	75
Power Door Locks	
See: Locking and Unlocking.....	33

Power Liftgate.....	36
Closing the Liftgate.....	37
Hands-Free Feature.....	37
Programming the Liftgate.....	37
Power Seats.....	103
10-Way.....	103
Power Lumbar.....	104
Power Windows.....	58
Accessory Delay.....	59
Bounce-Back.....	58
One-Touch Down.....	58
One-Touch Up.....	58
Window Lock.....	58

R

Rear Fog Lamps.....	54
Rear Seat Armrest.....	105
Rear Seats.....	104
Folding the Seatback.....	104
Recline Adjustment.....	104
Unfolding the Seatback.....	104
Rear Under Floor Storage.....	162
Adjustable Load Floor.....	163
Cargo Management System.....	162
Passenger Compartment Floor.....	162
Rear View Camera.....	142
Using the Rear View Camera System.....	142
Rear View Camera	
See: Rear View Camera.....	142
Rear Window Wiper and Washers.....	48
Rear Window Washer.....	49
Rear Window Wiper.....	48
Refueling.....	120
Remote Control.....	30
Changing the Remote Control Battery.....	30
Remote Control with a Folding Key	
Blade.....	30
Remote Control without a Folding Key	
Blade.....	31
Reprogramming the Unlocking	
Function.....	30
Removing a Headlamp.....	196
Repairing Minor Paint Damage.....	208

Index

Replacement Parts	
Recommendation.....	10
Collision Repairs.....	10
Scheduled Maintenance and Mechanical Repairs.....	10
Warranty on Replacement Parts.....	10
Replacing a Lost Key or Remote Control.....	32
Roadside Emergencies.....	173
Roof Racks and Load Carriers.....	164
Running-In	
See: Breaking-In.....	171
Running Out of Fuel.....	119
Refilling with a Portable Fuel Container.....	119
S	
Safety Belt Height Adjustment.....	25
Safety Belt Minder.....	25
Rear Safety Belt Minder.....	25
Switching the Safety Belt Minder Off.....	25
Safety Belts.....	24
Safety Precautions.....	117
Seats.....	100
Security.....	41
Side Airbags.....	28
Side Curtain Airbags.....	29
Sitting in the Correct Position.....	100
Snow Chains	
See: Using Snow Chains.....	213
Speed Control	
See: Cruise Control.....	145
Speed Limiter.....	151
Principle of Operation.....	151
Using the System.....	151
Stability Control.....	137
Principle of Operation.....	137
Starter Switch	
See: Ignition Switch.....	109
Starting a Diesel Engine.....	113
Cold or Hot Engine.....	113
Failure to Start.....	113
Starting a Gasoline Engine.....	112
Cold or Hot Engine.....	112
Engine Idle Speed after Starting.....	113
Failure to Start.....	113
Flooded Engine.....	112
Starting and Stopping the Engine.....	109
General Information.....	109
Steering Wheel Lock.....	111
Vehicles with Keyless Starting.....	112
Vehicles without Keyless Starting.....	111
Steering Wheel.....	44
Storage Compartments.....	108
Sunroof	
See: Moonroof.....	62
Sun Visors.....	62
Illuminated Vanity Mirror.....	62
Supplementary Restraints System.....	27
Principle of Operation.....	27
Switching Off the Engine.....	114
Vehicles With a Turbocharger.....	114
Symbols Glossary.....	7
SYNC™ Applications and Services.....	284
In the Event of a Crash.....	286
Switching Emergency Assistance On and Off.....	285
SYNC AppLink.....	287
SYNC Emergency Assistance.....	285
SYNC™.....	269
General Information.....	269
SYNC™ Troubleshooting.....	297
T	
Tailgate	
See: Manual Liftgate.....	35
See: Power Liftgate.....	36
Technical Specifications	
See: Capacities and Specifications.....	226
Temporary Mobility Kit.....	209
Checking the Tire Pressure.....	212
General Information.....	209
Inflating the Tire.....	210
Using the Kit.....	209
Tire Care.....	213
Tire Inflation When Punctured	
See: Temporary Mobility Kit.....	209

Index

Tire Pressure Monitoring System.....	213
Changing Tires With a Tire Pressure Monitoring System.....	214
How Temperature Affects the Tire Pressures.....	214
Tire Pressure Monitoring System Reset Procedure.....	216
Understanding the Tire Pressure Monitoring System.....	215
Tire Repair Kit	
See: Temporary Mobility Kit.....	209
Tires	
See: Wheels and Tires.....	209
Tow Ball.....	166
Driving with a Trailer.....	167
Driving without a Trailer.....	168
Inserting the Tow Ball Arm.....	167
Maintenance.....	168
Removing the Tow Ball Arm.....	168
Unlocking the Tow Ball Arm Mechanism.....	166
Towing a Trailer.....	165
Towing Points.....	168
Towing the Vehicle on Four Wheels.....	169
All Vehicles.....	169
Vehicles with Automatic Transmission.....	169
Towing.....	165
Traction Control.....	136
Principle of Operation.....	136
Traffic Sign Recognition.....	158
Principle of Operation.....	158
Using the System.....	159
Trailer Sway Control.....	166
Transmission.....	124
See: Transmission.....	124
Trip Computer.....	75
All Value.....	75
Average Fuel.....	75
Digital Speedometer.....	75
Fuel Used.....	75
Resetting the Trip Computer.....	75
Trip Odometer.....	75

U

Under Hood Overview - 1.5L EcoBoost™.....	192
Under Hood Overview - 1.6L EcoBoost™.....	189
Under Hood Overview - 2.0L Duratorq-TDCi (DW) Diesel.....	191
Under Hood Overview - 2.0L EcoBoost™.....	190
Unique Driving Characteristics.....	115
USB Port.....	267
Using Adaptive Cruise Control.....	146
Automatic Braking.....	147
Automatic Switch Off.....	149
Changing the Set Speed.....	148
Detection Beam Issues.....	147
Forward Alert Function.....	150
Setting a Speed.....	148
Setting the Vehicle Gap.....	148
Standby Mode.....	149
Switching the System Off.....	149
Switching the System On.....	148
Using the System.....	148
Using Cruise Control.....	145
Switching Cruise Control Off.....	145
Switching Cruise Control On.....	145
Using Four-Wheel Drive.....	129
Driving in Special Conditions With Four-Wheel Drive.....	129
Using Snow Chains.....	213
Vehicles with Stability Control.....	213
Using Stability Control.....	137
Using SYNC™ With Your Media Player.....	291
Accessing Your USB Song Library.....	295
Bluetooth Devices and System Settings.....	297
Connecting Your Media Player to the USB Port.....	291
Media Menu Features.....	294
Media Voice Commands.....	292
What's Playing?.....	292

Index

Using SYNC™ With Your Phone.....	273
Accessing Features Through the Cell Phone Menu.....	278
Accessing Your Cell Phone Settings.....	281
Bluetooth Devices.....	282
Cell Phone Options During an Active Call.....	277
Cell Phone Voice Commands.....	274
Making a Call.....	276
Pairing a Cell Phone For the First Time.....	273
Pairing Subsequent Cell Phones.....	274
Receiving a Call.....	277
Text Messaging.....	279
Using Traction Control.....	136
Using Voice Recognition.....	270
Helpful Hints.....	270
Initiating a Voice Session.....	271
System Interaction and Feedback.....	271
Using Winter Tires.....	213

V

Vehicle Care.....	207
Vehicle Identification Number.....	227
Vehicle Identification Plate.....	226
Ventilation	
See: Climate Control.....	88
Vents	
See: Air Vents.....	88
VIN	
See: Vehicle Identification Number.....	227
Voice Control.....	46

W

Warning Lamps and Indicators.....	65
Anti-Lock Braking System Warning Lamp.....	65
Automatic High Beam Lamp.....	65
Battery Warning Lamp.....	65
Blind Spot Monitor Indicator.....	65
Brake System Warning Lamp.....	65
Cruise Control Indicator.....	66
Direction Indicator.....	66
Engine Oil Warning Lamp.....	66
Engine Warning Lamps.....	66
Fasten Safety Belt Warning Lamp.....	67
Front Airbag Warning Lamp.....	67
Front Fog Lamps Indicator.....	67
Frost warning lamp.....	67
Glow Plug Indicator.....	67
Headlamp and Parking Lamp Indicator.....	67
High Beam Indicator.....	67
Information Indicator.....	67
Lane Keeping System Indicator.....	67
Low Fuel Level Warning Lamp.....	67
Rear Fog Lamps Indicator.....	67
Shift Indicator.....	67
Stability Control Off Indicator.....	68
Stability Control Warning Lamp.....	68
Start-Stop Indicator.....	68
Warning Triangle.....	173
Washer Fluid Check.....	195
Washers	
See: Cleaning the Exterior.....	207
See: Wipers and Washers.....	47
Wheel Nuts	
See: Changing a Road Wheel.....	217
Wheels and Tires.....	209
General Information.....	209
Technical Specifications.....	224
Windows and Mirrors.....	58
Windshield Washers.....	48
Windshield Wipers.....	47
Intermittent Wipe.....	47
Speed Dependent Wipers.....	47
Winter Tires	
See: Using Winter Tires.....	213
Wipers and Washers.....	47

